



SPX Corporation
655 Eisenhower Drive
Owatonna, MN 55060-0995 USA
Phone: (507) 455-7000
Tech. Serv.: (800) 533-6127
Fax: (800) 955-8329
Order Entry: (800) 533-6127
Fax: (800) 283-8665
International Sales: (507) 455-7223
Fax: (507) 455-7063


Form No. 526735

**Parts List and
Operating Instructions
for:**

1572

Car Dolly (Pair)

Maximum Capacity: 1,800 lbs. (each dolly)

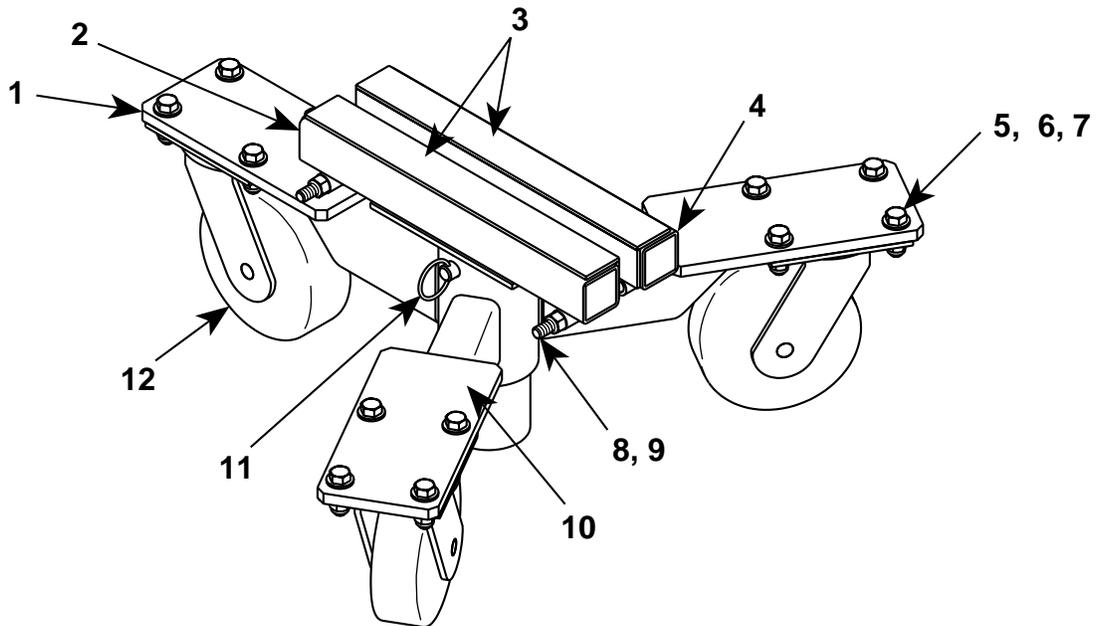

Item No.	Part No.	Qty.	Description
1	527575	2	Car Dolly Base
2	527582	2	Saddle Head Slide
3	527585	8	Foam Strip
4	527579	2	Saddle Head
5	10052	24	Screw (3/8-16 x 1.250)
6	10258	48	Washer
7	RS-3400-110	24	Lock Nut
8	209790	4	Hex Head Cap Screw
9	12353	4	Hex Nut
10	526734	2	Decal
11	527587	2	Hitch Pin
12	527586	6	Caster

Sheet No. 1 of 1


Issue Date: Rev. A, March 16, 2005

Safety Precautions



CAUTION: To prevent personal injury and damage to equipment,


- Study, understand, and follow all instructions, including ASME PALD Part 10 for service jacks. If the operator cannot read these instructions, operating instructions and safety precautions must be read and discussed in the operator's native language.
- Before using the car dolly, refer to the vehicle service manual to determine recommended lifting surfaces on the vehicle chassis.
- Wear eye protection that meets ANSI Z87.1 and OSHA standards.
- Inspect the car dolly before each use; do not use the car dolly if it's damaged, altered, or in poor condition. Take corrective action if any of the following conditions are found: cracked or damaged housing; excessive wear, bending, or other damage; loose hardware; modified or altered equipment.
- A load must never exceed the rated capacity of the dolly.
- Use the dollies on a hard, level surface. The dollies must be free to roll without any obstructions.
- Stay clear of a lifted load.
- Do not use blocks or other extenders between the saddle and the vehicle.
- Do not modify the car dolly or use adapters unless approved or supplied by OTC.

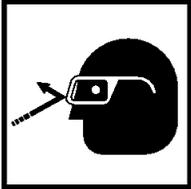

This guide cannot cover every situation, so always do the job with safety first.

Assembly Instructions

1. Attach casters to base using four bolts (10052) and eight washers (10258) for each caster; tighten with lock nuts (RS-3400-110) as illustrated.
2. Insert saddle into the base, and lock in place with the hitch pin as shown.

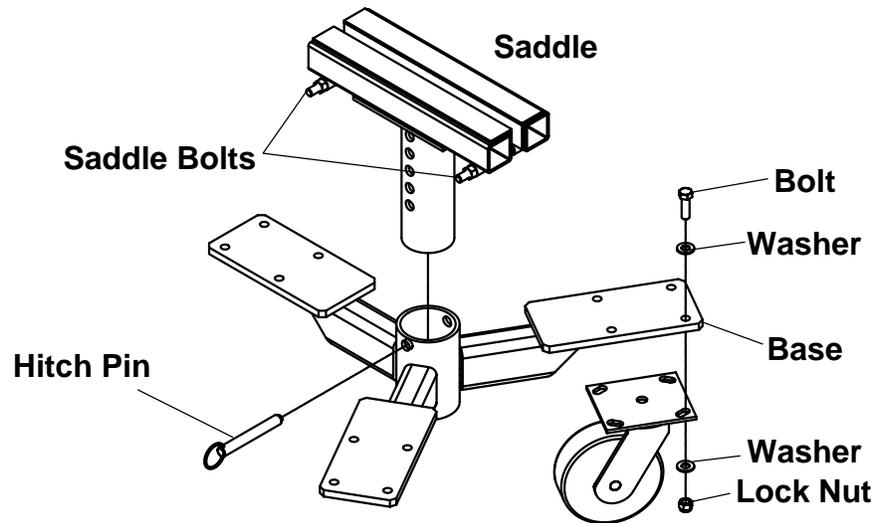

Operating Instructions

1. Lift the vehicle high enough to roll the dollies underneath. **Note:** Place one dolly on each side of the vehicle body under the frame pinch weld.
 2. Pull out the hitch pin and raise the saddle as high as necessary to fit just beneath the vehicle; reinsert the hitch pin.
 3. Align the saddle with the pinch weld.
 4. Loosen the saddle bolts, and open the saddle on the dollies wide enough so the frame pinch weld will fit into the opening.
 5. Slowly lower the vehicle body onto the saddle; verify it is centering correctly on the saddles before completely lowering the vehicle.
 6. Completely lower the vehicle.
 7. Tighten the saddle bolts to secure the vehicle body to the dollies.
- The vehicle is now ready to be moved.