



Combinated Drawer Instructions

1. Set to current opening combination (factory default 0-0-0-0)
2. Test to make sure you are on opening combination by flipping down drawer release (2)
3. Turn reset screw (10) clockwise  90 degrees to vertical position
4. Set dials to your desired opening combination. Write this number down! 
5. Return the reset screw counter-clockwise  to horizontal position 
6. Check the dials to be sure you have your correct number and then **TEST YOUR COMBINATION** before placing it into the HitchSafe by scrambling the dials, setting it to your combination and then confirming the drawer release flips down.

Storing Credit Cards/Driver's License-

There are grooves in the drawer and in the HitchSafe body that will accomodate up to 2 cards (Driver's license & credit card) when placed in a right hand angle "I"
 Do not try to force more than two cards as the slots only allow room for two.

Notes:

- The drawer can only be inserted into HitchSafe when the correct combination is set
- The dials can only be turned when the drawer release (2) is in the up position.
- HitchSafe is not responsible for lost or mis-dialed combinations.
- When changing the combination always test the combination prior to inserting the drawer into the HitchSafe.
- Write your number down below & keep in safe place. The HitchSafe is secure with 10,000 possible combinations so do not lose your number!

--	--	--	--