


Instruction Manual

Thank you for choosing TSSS LED light, which is a light and portable multi-modal stage light. Whenever you go dancing or to a show or gather in a home party, it can fuel your passion and create the best visual atmosphere. The manual describes how to use it and the safety issues. Please read it carefully and keep it as your reference.

I. Specification

1. **Voltage:** AC90~240V/50~60Hz
2. **Power:** 25W
3. **Light source:** XL38 18PCS LED (Red: 6PCS; Green: 6PCS; Blue: 6PCS)
XL41 127PCS LED (Red: 43PCS; Green: 42PCS; Blue: 42PCS)
4. **Mode:** DMX, Sound Active, Master slave, Single color switch mode, Automatic running

II. operate

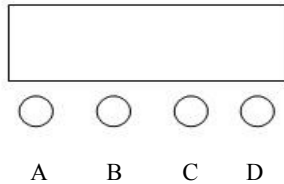

- A. Menu For choosing the different mode.
- B. UP +
- C. DOWN -
- D. ENTER Validation and Transformation tools

1.Pr.xx:

Keep pressing the “Menu” button, until the “Pr.xx” is showed in screen. Then you can select Pr.01 to Pr.05 by pressing “UP” or “DOWN” button.(01-05 respectively represent different gears). Thirdly ,Press the ENTER key to choice or switch between the two submenus: FS/SP.

①FS:

Turn to “Stroboscopic mode”. Adjust the number from 0~99 by pressing “UP/DOWN” button, the smaller number ,the faster speed. Press the “Menu” key to exit.

②SP:

Gradient model. Adjust the speed from slow to fast by changing the Numerical 0~99 with UP/DOWN button. Press the “Menu” key to exit.

2.AuTo

Keep pressing the Menu key until you see the “AuTo”. There are two submenus: SP/FS, press the ENTER key to change.

①SP:

Gradient model. Adjust the speed from slow to fast by changing the Numerical 0~99 with UP/DOWN button. Press the ”Menu” key to exit.

②FS:

Stroboscopic mode. Adjust the number from 0~99 by pressing “UP/DOWN” button, the smaller number ,the faster speed. Press the ”Menu” key to exit.

3.Stob

Keep pressing the Menu key until you see the “Stob”. There are two submenus: F.rGb/FS, press the ENTER key to change.

①F.rGb:

Static color options, press “UP/DOWN” to select the color

②FS:

Stroboscopic mode. Adjust the number from 0~99 by pressing “UP/DOWN” button, the smaller number ,the faster speed. Press the ”Menu” key to exit.

4.ColF

Keep pressing the Menu key until you see the “ColF”. There are 3 submenus:R.000/G.000/B.000, press ENTER to change the submenus. In the different submenus,the color of the light is different. And when you press UP/DOWN, the number will changed from 0~255,and the light will from Dark to Bright.

5.Soud

Keep pressing the Menu key until you see the “Soud”. The light will turn to Sound Active mode. In this mode, the light will follow the music.

6.SLAv

Press the MODE key until the “SLAv” is showed in screen.

7.d.001-A001 (DMX512 Mode)

①A001 : 3 channels DMX function table

CH1	CH2	CH3
Red light	Green light	Blue light

②d001:7 channels DMX function table

C H 1	C H 2	C H 3	C H 4	C H 5	C H 6	CH7	
Total dimmer	R	G	B	Stroboscopic mode from fast to slow	Automatic running	0 Dimming	OFF
						1~50	Prog1
						51~100	Prog2
						101~150	Prog3
						151~200	Prog4
						201~250	Prog5
						251~255	Sound Active Automatic running

III. Feedback

You satisfaction is the motivation for the TSSS team to keep forward.If you are satisfied with our product, we will greatly appreciate it if you give us a five-star feedback and leave positive comments on your experience with us!If you have any questions or problems, please free to contact us. We take care of every feedback from you, and strive to perfect our product all the times.