

Keeping Your Tap Machine® Clean

WARNING
THE POWER SWITCH MUST BE TURNED "OFF" DURING CLEANING.



Figure 1 - Rear View

**FAILURE TO TURN THE POWER SWITCH "OFF" MAY RESULT IN
INTERNAL DAMAGE TO THE MACHINE.**

Your Jägermeister Tap Machine® REQUIRES simple, regular cleaning to function properly. **THE UNIT MUST NOT BE CLEANED WITH ANY TYPE OF LOW OR HIGH PRESSURE WATER JET.**

Bottle Stoppers

When replacing empty bottles, wash each bottle stopper in warm water before using a new bottle. Be sure to run warm water through the stopper to remove build up of Jägermeister that may hinder desired operation.

Weekly

Drip Tray and Air Filter

Remove and clean the drip tray and air filter at the front of the machine. The filter may be rinsed in warm water and allowed to dry for a few minutes. Replace the filter in the filter holder at the front of the machine.



Figure 2 - Clean Filter

Monthly

On a ***Monthly*** basis clean the machine as follows:

1. Turn off the power switch at the rear of the machine.
2. Remove the bottles from the top of the unit.
3. Open the faucet and drain all remaining Jägermeister from the system.
4. With the faucet opened, pour approximately one liter of warm water into the bottle well at the top of the machine and flush the water through the machine until it is empty again. Close the faucet once all of the water has drained. **DO NOT USE A WATER JET TO CLEAN THE UNIT.**
5. With the faucet closed, pour approximately 1½ liters of a warm water/FDA approved cleaning solution into the bottle well at the top of the machine and let sit for approximately 5 minutes. **NOTE:** The FDA approved cleaning solution should be mixed according to the cleaning solution manufacturers instructions.
6. Wipe the outside of the machine with a warm damp cloth.
7. Remove and clean the drip tray and air filter at the front of the machine. The filter may be rinsed in warm water and allowed to dry. A dry filter may also be vacuumed. Replace the filter.
8. Open the faucet and drain the cleaning solution. Flush the cooling system with 2 to 3 liters of warm water to remove and cleaning solution that might remain in the cooling system.
9. Replace the bottles of Jägermeister on the top of the machine and turn the power switch at the rear of the machine to the "On" position.
10. Allow the machine 30 minutes to cool before dispensing Jägermeister "Colder Than Ice".