


Water Valve Installation Instructions

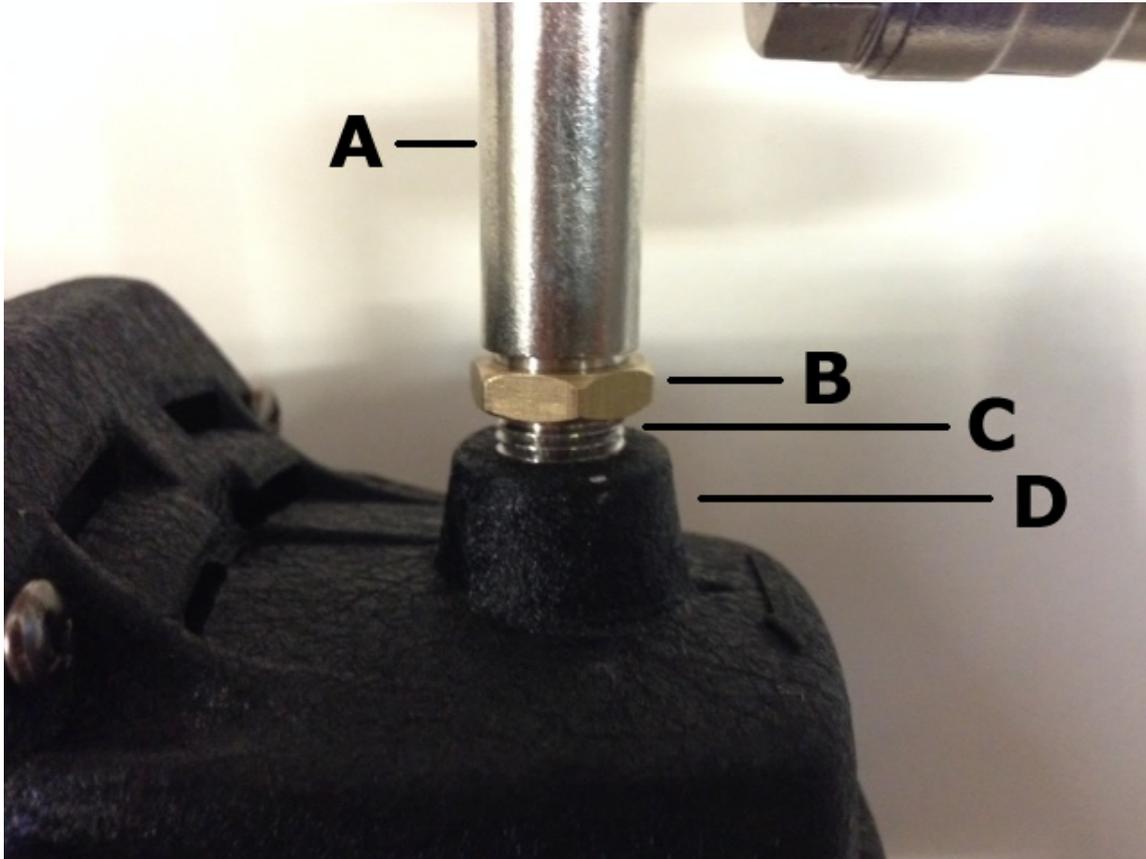

If your SECCO grinder did not come from the factory with a pre installed water valve please refer to these instructions on properly securing the water valve to the SECCO grinder.

1: Remove the water valve from the packaging and ensure the set nut (B) is threaded fully onto the male valve thread (C) completely.

2: apply plumbers putty or Teflon tape to the threaded area (C) of the water valve.

3: insert the threaded valve tube (C) into the female threaded receptacle (D) located on the top of the grinders gear casing.



4: Thread the valve no less than 3 and no more than 4 full turns until the valve is located in the 5 o'clock position.

5: Hand tighten the set screw against the gear casing.

6: Using a wrench or pliers, turn the valve and set screw simultaneously until the valve is in the 6 o'clock position.



Caution over tightening the water valve will cause the threaded area to fail.