


Hamilton Beach®

Turbo-Twister™ Mixing Stick

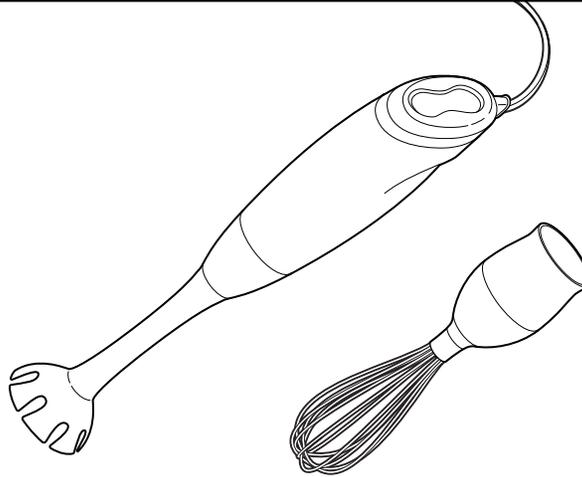

English 2
USA: 1-800-851-8900
Canada : 1-800-267-2826

840095900

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put motor end, cord or plug in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Avoid contact with moving parts. Keep hands, hair and clothing, as well as other utensils away from blades and out of container during operation to prevent the possibility of severe injury to persons and/or damage to the appliance. A spatula or scraper may be used when the appliance is not in operation.
5. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. for use with this model may cause fire, electric shock, or injury.
6. When mixing liquids, especially hot liquids, use a tall container and make several small batches to avoid spillage.
7. Blades are sharp, handle carefully.
8. Do not use over a stove or other heat source.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter. Do not let cord contact hot surface, including the stove.
11. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
12. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.

SAVE THESE INSTRUCTIONS

2

CONSUMER SAFETY INFORMATION


This appliance is intended for household use only.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

BEFORE FIRST USE: Wash attachments according to instructions.

Parts & Features

1. Speed Control
2. Motor Housing
3. MAX Immersion Line
4. Shaft
5. Blade Attachment
6. Whisk Attachment

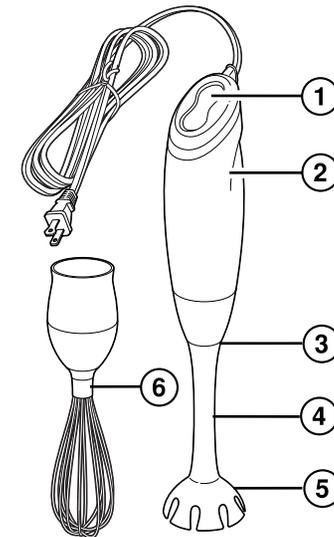

How to Use

1. Place food in a tall, deep container for mixing. For best results, solid foods should be no larger than 1-inch chunks.
2. Attach blade or whisk attachment to motor housing.
3. Plug into outlet.
4. Grasp unit in hand. Push fingertip control. Slowly move the blade through the food; up, down and sideways.
5. Do not immerse mixing stick past the MAX Immersion line.
6. Unplug from outlet when not in use.

WARNING

To reduce risk of personal injury and/or damage to your mixing stick:

- **Never wash attachments or other parts in a dishwasher.**
- **Always inspect attachments before each use.**
- **Do not use cracked, bent or damaged attachments.**

Helpful Hints

- To use the mixing stick in a saucepan, be sure to remove the pan from the stove as the mixing stick is not designed for use over a heat source.
- To puree foods, a certain amount of liquid is needed. Add cooking liquid, broth, juice, milk, or cream, until desired consistency is reached.
- This appliance is not intended to chop ice. Add ice to beverage after blending.

Helpful Hints (continued)

- For thorough blending, move blade up and down in mixture until smooth.
- To achieve best blending results use deep, tall containers.
- For easy cleanup, unplug mixing stick and rinse attachments under running water immediately after using.

Blending Guide

FOOD	SPEED	ATTACHMENT
Baby Food	HI	Blade
Cake Mixes	LO	Blade
Eggs	HI	Whisk
Frozen Juice Concentrate	HI	Blade
Gravy or Sauces	LO	Whisk
Instant Pudding	LO	Whisk
Milk Shakes	HI	Blade
Pancake Mix	LO	Whisk
Powdered Drink Mixes	HI	Blade
Whipping Cream	HI	Whisk
Egg Whites	HI	Whisk

How To Clean

1. Unplug unit from outlet.
2. Remove attachment from motor housing. Wash attachment in hot, soapy water. Rinse then dry.
3. Never hold motor portion of mixing stick under running water. Never immerse unit past MAX Immersion line. Simply wipe clean with a damp cloth.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products or one (1) year for Hamilton Beach products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: www.hamiltonbeach.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.

263 Yadkin Road

Southern Pines, North Carolina 28387

840095900

PROCTOR-SILEX CANADA, INC.

Picton, Ontario K0K 2T0

Web site address: www.hamiltonbeach.com

3/02