

## **INSTALLATION INSTRUCTIONS**

CAUTION: NOT RECOMMENDED FOR ANY ENGINE UNLESS SPECIFICALLY LISTED. DO NOT USE ON FLEXIBLE WIRE REINFORCED RADIATOR HOSE. ADEQUATE SIZE EXTENSION CORD MUST BE USED. CONSULT LICENSED ELECTRICIAN IF FURTHER INFORMATION IS NEEDED.

1. Drain and clean cooling system.
2. Cut and remove 1" section from radiator hose at a point closest to the water pump until it will accept the heater. Make certain that the heater has a rise toward the water pump.
3. Install the heater with the cap down at the 5 – 7 o'clock position and element pointing toward engine block.
4. Run cord through grill and secure, making sure it is clear of all moving or heated parts.
5. Refill cooling system, start engine and check for leaks.
6. Before energizing heater all air must be bled out of system by running the engine until internal thermostat opens. Continue to run engine for 30 minutes to eliminate all air pockets.
7. Connect to properly grounded power source to check heater operation.