

Read these Instructions and Warranties Carefully,  
and Save them for Future Reference

Welcome

*Thank you for purchasing CORNINGWARE® SimplyLite™ bakeware and accessories. We hope you enjoy your purchase. We at World Kitchen want our consumers to enjoy using our products. As with all glass products, you must exercise an appropriate degree of care, especially when cooking food at high temperatures. Because we design and manufacture consumer products with safety foremost in our minds, we ask that you read and carefully follow these safety and usage instructions. Additional information on safety and usage can be found on our website, [www.corningware.com](http://www.corningware.com), or by calling the World Kitchen Help Center at 1-800-999-3436.*

CORNINGWARE SimplyLite Bakeware Safety and Usage Instructions

CORNINGWARE SimplyLite bakeware is made of lightweight, yet durable Vitrelle® glass. Glass is breakable, and must be handled with care.

There are three primary risks associated with using glass bakeware for cooking.

1. Risk of breakage due to impact if the dish is dropped or knocked against a hard object.
2. Risk of breakage due to sudden temperature change applied to the glass.
3. Risk of burning when handling hot bakeware.

This product is intended for normal household use only; it is not intended for camping, industrial or commercial use.

CORNINGWARE® SimplyLite™

Accessories Safety and Usage Instructions

LIDS

There are two types of lids for your CORNINGWARE SimplyLite bakeware – glass lids and plastic lids.

Glass lids:

- Can be used as a cover for your CORNINGWARE SimplyLite bakeware in a preheated oven.
- Can be used in a preheated oven, microwave oven, refrigerator or freezer.
- When cleaning glass lids, use non-abrasive cleansers. If scouring is necessary, use only plastic or nylon cleaning pads, again with non-abrasive cleansers.
- The warnings provided above for your CORNINGWARE SimplyLite bakeware also apply to glass lids.

Plastic Lids:

- Can be used in a microwave oven, refrigerator or freezer.
- DO NOT use in a conventional or convection oven.
- DO NOT Use On or Under a Flame or Other Direct Heat Source.

DO NOT use on stovetop, under a broiler, on a grill or in a toaster oven.

Any breakage or shattering of your bakeware may result in personal injury or property damage. Discontinue using any bakeware that has been subjected to any conduct that is contrary to the express instructions and warnings below.

#### **WARNINGS**

**FAILURE TO FOLLOW THE WARNINGS BELOW MAY CAUSE YOU OR SOMEONE IN YOUR KITCHEN TO BE SERIOUSLY BURNED, OR MAY CAUSE YOUR BAKEWARE TO BREAK OR SHATTER IMMEDIATELY OR LATER.**

- Avoid Sudden Temperature Changes to your Glass Bakeware. To avoid the risk of breakage due to a sudden temperature change to your CORNINGWARE® SimplyLite™ bakeware, DO NOT: add liquid to hot bakeware; place hot bakeware on a wet or cool surface; or handle hot bakeware with a wet towel, wet potholder or other wet cloth. DO NOT place hot bakeware directly on a countertop or any metal surface, or in the sink. Allow hot bakeware to cool on a CORNINGWARE SimplyLite Bamboo Server, a cooling rack, potholder or dry cloth. Be sure to allow hot bakeware to cool as provided above before

washing, refrigerating or freezing.

- Oven Must be Preheated Before Inserting Bakeware. DO NOT insert bakeware into oven for cooking or reheating until the oven has been preheated to the desired temperature.
- DO NOT Use On or Under a Flame or Other Direct Heat Source. DO NOT use on stovetop, under a broiler, on a grill or in a toaster oven.
- Add Liquid to the Bottom of Bakeware when Cooking Certain Foods. When preparing foods that may release liquid, add a small amount of liquid sufficient to cover the bottom of the bakeware prior to cooking.
- Avoid Handling Hot Bakeware Without Appropriate Protection for Your Hands, such as Potholders or Thick Towel.
- Avoid Microwave Misuse. DO NOT: (1) use bakeware to microwave popcorn or convenience foods wrapped in heat-concentrating material (such as a special browning wrapper); (2) heat empty or nearly empty bakeware in the microwave; or (3) overheat oil or butter in microwave (use minimum cooking time; check on oil or butter before applying additional, minimal amount of microwave cooking time).
- Be Careful When Handling Broken Glass. Broken glass pieces may be extremely sharp and difficult to locate; wear gloves and shoes when cleaning up broken glass.
- Avoid Using or Repairing Damaged Bakeware. DO NOT use or repair any bakeware that is chipped, cracked or severely scratched.
- Avoid Impact Breakage. DO NOT drop or hit bakeware against a hard object.
- DO NOT strike utensils against rim to dislodge food.

How to Use and Care for your CORNINGWARE® SimplyLite™ Bakeware

Before first use, wash your new CORNINGWARE SimplyLite bakeware in order to remove a clear protective coating.

CORNINGWARE SimplyLite bakeware can be used for warming, baking and reheating food in microwave ovens, and in preheated conventional or convection ovens.

CORNINGWARE SimplyLite bakeware is dishwasher safe, and may also be washed by hand. When using dishwasher, load dishes in a manner to avoid bumping against other items during dishwashing cycle. When cleaning your CORNINGWARE SimplyLite bakeware, use non-abrasive cleansers. If scouring is necessary, use only plastic or nylon cleaning pads, again with non-abrasive cleansers.

PORTABLES™

When used for hot foods:

- Prepare and bake or microwave foods in your CORNINGWARE® SimplyLite™ bakeware in accordance with the above Safety and Usage Instructions. Approximately four minutes before your hot dish is ready to put in the carrier, heat the hot/cold pack in your microwave oven in accordance with the microwave heating instructions on the hot/cold pack. Avoid over-heating the hot/cold pack.
- The carrying case cannot be used in a microwave oven.
- Hot foods should be at appropriate temperature when placed into the carrying case. As soon as possible, and no more than two minutes after removing the CORNINGWARE SimplyLite bakeware from the microwave or oven, carefully put the plastic lid directly on the hot dish. Immediately place dish in carrying case. Use the zipper to close the bag and clip to lock the handles in place.
- Use potholders to remove the hot/cold pack from the microwave, with caution. Use potholders to slide the hot/cold pack under the inside bottom flap of the carrying case.

When used for cold foods:

- Lay the hot/cold pack in your freezer. Freeze overnight (more than 8 hours). If your freezer temperature is at or above 0° F (-12°C), the hot/cold pack may remain somewhat flexible. If the hot/cold pack

becomes too stiff and does not fit inside the pocket of the carrier, you may have to let it set for up to two minutes until it softens so that it is flexible.

- Prepare and refrigerate or freeze cold foods in your CORNINGWARE SimplyLite bakeware. Cold food must be thoroughly chilled to 40°F (4.4°C) or colder when placed in the carrying case. Allow adequate time after food preparation to chill properly.

- Slide the hot/cold pack into the inside bottom of the carrying case. Put the plastic lid on the CORNINGWARE SimplyLite bakeware. Immediately place the dish in the carrier. Use the zipper to close the bag and clip the handles in place.

Transporting your CORNINGWARE® SimplyLite™ Portables™:

- Close carrying case zipper and secure the hook clip. Carrying case should be held/carried as level as possible to avoid leakage.

- Plastic lids are not airtight. Overfilled dishes or liquid from foods may leak. Be sure to use the plastic lid whenever you transport food in your CORNINGWARE SimplyLite bakeware. As with any covered dish, condensation may develop on the underside of the plastic lid. Remove lid with care.

- DO NOT put serving utensils inside carrier, this can cut or damage the interior.

- DO NOT drop or bump carrying case, this may break the CORNINGWARE SimplyLite bakeware inside.

Cleaning your CORNINGWARE SimplyLite Portables:

- Hot/cold pack: clean with a sponge or cloth using soap and hot water.

Do not place in washing machine, dishwasher or dryer.

- Carrying case: hand wash only, wipe clean with damp sponge or cloth. DO NOT use bleach. Hang to dry. Do not iron. To prevent mildew, make sure carrying case is completely dry.

Storing your CORNINGWARE SimplyLite Portables:

- When the carrying case is not in use, you can store your hot/cold pack in the designated pockets of the carrying case. Make sure the hot/cold pack is completely cooled or completely thawed before storing. Wipe the hot/cold pack and carrying case dry before storing in order to prevent mildew.

- The hot/cold pack also can be stored lying flat in your freezer.

#### BAMBOO SERVER

How to Use and Care for your CORNINGWARE® SimplyLite™ Bamboo Server:

- Your bamboo server can be used to transport and serve your CORNINGWARE SimplyLite 3-quart rectangular bakeware from the oven to the table. It can also be used as a cutting board or serving piece. Please transport by handling with side handles.

- Regular rinsing with warm water and mild detergent are recommended. The bamboo server is not dishwasher safe.

Periodically treat the surface with food grade mineral or wood conditioning oil to seal the wood and maintain the beauty of the bamboo tray.

#### WARNING

- DO NOT use in oven, microwave or dishwasher.

#### STAINLESS CRADLE WITH BAMBOO HANDLES

How to Use and Care for your CORNINGWARE SimplyLite

Stainless Cradle with Bamboo Handles:

- Your cradle can be used to transport your hot CORNINGWARE SimplyLite 1.5- and 2.5-quart square bakers. Place ovenware in cradle and handle at bamboo handles while carrying.

- Regular rinsing with warm water and mild detergent are recommended. The stainless cradle with bamboo handles is not dishwasher safe. Periodically treat the bamboo handles with food grade mineral or wood conditioning oil to seal the wood and maintain the beauty of the bamboo handles.

- DO NOT use in oven, microwave or dishwasher.

Limited Three-Year Warranty -- CORNINGWARE® SimplyLite™  
Bakeware

World Kitchen, LLC promises to replace any CORNINGWARE SimplyLite Vitrelle® glass bakeware dish that breaks, chips or becomes permanently stained within THREE YEARS from the date of purchase.

Limited One-Year Warranty -- CORNINGWARE SimplyLite  
Accessories

World Kitchen, LLC promises to replace any CORNINGWARE SimplyLite bakeware accessory item (i.e., glass lid plastic lid, Portables™, hot/cold pack, Bamboo Server, and Stainless Cradle with Bamboo Handles) with a manufacturing defect within ONE YEAR from date of purchase.

The foregoing warranties apply only to products damaged during normal household use. These warranties do not cover damage resulting from misuse, negligence, attempted repair or, in the case of CORNINGWARE SimplyLite Accessories, accidental breakage from impact. For these warranties to apply, the owner must follow the applicable Safety and Usage Instructions set forth above. These warranties do not apply to items that are: used while camping; used commercially or institutionally; or damaged while moving or in related storage. If the exact item is not available, it will be replaced with a comparable item. Incidental and consequential damages are expressly excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. If making a warranty claim, KEEP THE PRODUCT--you may be asked to return it. This warranty gives you specific legal rights. You may also have other rights, which vary from jurisdiction to jurisdiction. Should a warranty problem develop, contact the World Kitchen, LLC Help Center at the phone number set forth below.

World Kitchen Help Center Phone Numbers:

World Kitchen, LLC – United States - World Kitchen Canada (EHI), Inc.  
Tel: 1-800-999-3436

World Kitchen Mexico, S. de R.L. de C.V - Tel: 5255 5378-3090

email: [contactomexico@worldkitchen.com](mailto:contactomexico@worldkitchen.com)

World Kitchen (Asia Pacific) Pte Ltd - Shanghai - Tel: 86-21-5836-5343

World Kitchen (Asia Pacific) Pte Ltd -- Japan - Tel: 81- 3-3441-8109

World Kitchen (Asia Pacific) Pte Ltd --Singapore - Tel: 65-6468-2008

email: [AsiaConsumer@worldkitchen.com](mailto:AsiaConsumer@worldkitchen.com)

World Kitchen (Asia Pacific) Pte Ltd – Taiwan - Tel: 0800-013-482

World Kitchen (Australia) Pty Ltd Sydney Metro -Tel: 61 -2-9317-1000

Other Areas: 1-800-251-643

World Kitchen (Korea) Co. Ltd - Tel: 822-2670-7800

CORNINGWARE is a registered trademark of Corning Incorporated, used under license by World Kitchen, LLC. Vitrelle is a registered trademark and SimplyLite and Portables are trademarks of WKI Holding Company, Inc., all used with permission by World Kitchen, LLC.