


SINGER® Stitch Sew Quick™

Parts Diagram:

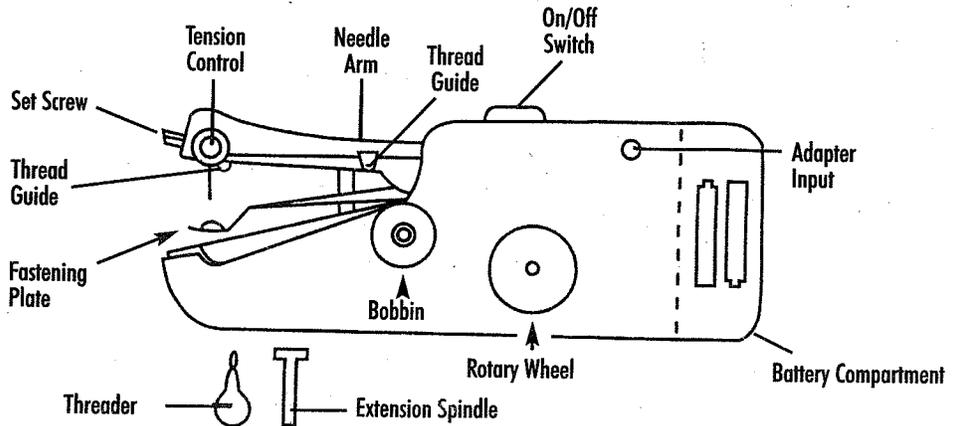


Note: Always use rotary wheel to move needle. Never press or pull directly on needle arm to avoid damages to internal mechanism.

Directions for Use:


Note: Operate the machine for 10 seconds, and then pause for 5 seconds. It can then be used again regularly.

1. Make sure machine is in the Off position (See diagram #1. On/Off Switch should be slid backward, toward the rear of the machine). Raise the needle arm to the highest position by turning the rotary wheel. *Note: The rotary wheel can be turned in either direction (see diagram #1).*
2. Lift up the fastening plate making sure not to push down on the needle arm (the arm can still be moved manually even when the machine is in the locked position). Place cloth underneath the fastening plate (see diagram #2).
3. Pull at least 2 inches of thread through the needle, from back to front, prior to starting to sew.
4. Hold the Stitch Sew Quick™ with right hand. Place thumb by the On/Off Switch while other fingers support the bottom of the machine (see diagram #3).
5. Turn the machine On by sliding the On/Off Switch forward with the thumb. Use your left hand to hold the cloth and to control the direction and speed as you feed it through the machine. Be careful not to pull the material through the machine too quickly. When wider stitches are required, pull cloth to the left a little faster while you continue sewing. Follow the center-line on cloth fastening plate to ensure straight stitching (see diagram #4).
6. To Finish Seam - When finished sewing, raise the needle arm to the highest position by turning the rotary wheel. Then use the back of a seam ripper or scissors to pull the thread out about 3 inches then cut it (see diagrams #5 & #6).
7. Turn the rotary wheel, lowering the needle into the cloth and continue to turn the rotary wheel until the needle arm is again at its highest position.
8. Lift up the fastening plate and take off the cloth to the left, making sure not to pull the thread, or the seam will unravel.


Dia. 1

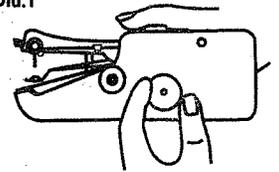


Dia. 2

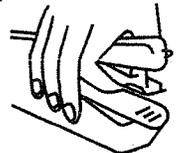


Dia. 3

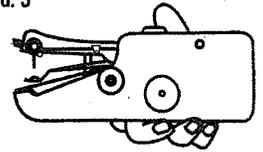


Dia. 4

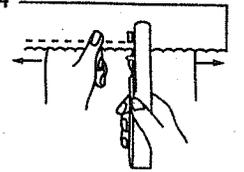

Dia. 5

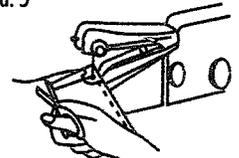


Dia. 6

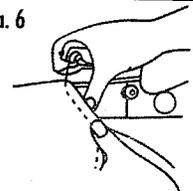

9. Turn to back side of the cloth and guide the reserved 3 inches of thread according to the following figures to make the knot (see diagram to the right):






- First pass threader through the last stitch.
- Put the thread into threader.
- Pull out about 1 inch.
- Guide the thread through the loop and pull it tight to finish the knot.

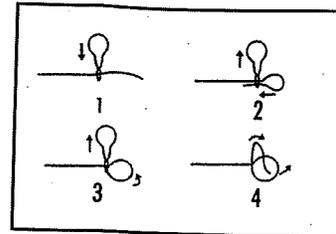

How to Thread Sew Quick™

Note: Thread should flow from the top right of bobbin or spool. Spring must be in place before installing bobbin.

- Thread the handy stitcher according to the diagrams #'s 7, 8 and 9.
- Pass the thread through the hole on the thread guide, which sticks out from the side of the needle arm (see diagram #7).
- Pass the thread through the top of the tension control between the plates. Do not wrap completely around tension control (see diagram #8).
- Pass the thread through the thread guide located on the bottom side of the needle arm directly behind the needle.
- Use threader to pass the thread through needle eye from back to front (see diagram #9).

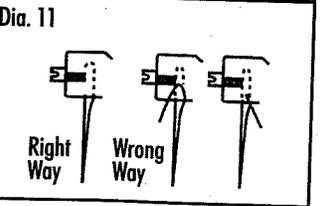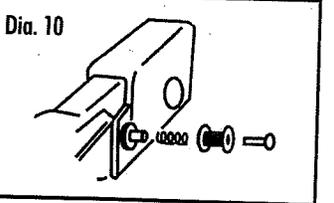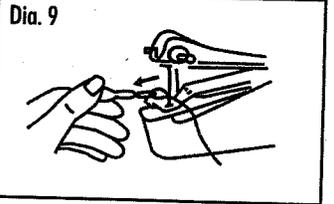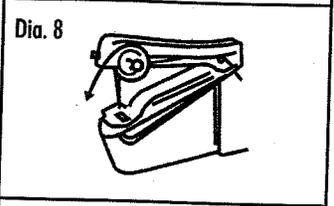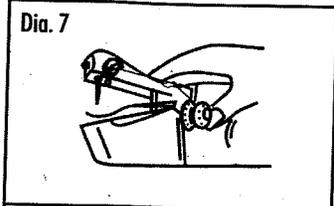

Adjusting Thread Tension

- If stitching is too tight, turn tension control slightly to the left.
- If stitching is too loose, turn tension control slightly to the right.

To Install a Normal Thread Spool

(see diagram #10)

- Loosen the bobbin nut and take off bobbin.
- Slide thread spool into extension spindle.
- Connect the extension spindle on bobbin shaft.

To Replace Needle


Loosen the set screw with a screwdriver and take off the old needle. Always use a # 14 style DHx1 sewing needle. Needle must be installed with flat side of needle shank facing the front of handy stitcher (see diagram #11).

Bobbin Replacement

When purchasing replacement bobbins for this machine, please note it uses a class 15 metal bobbin.

To Replace Batteries (4AA not included)

Note: Make sure machine is in the Off position prior to battery replacement.

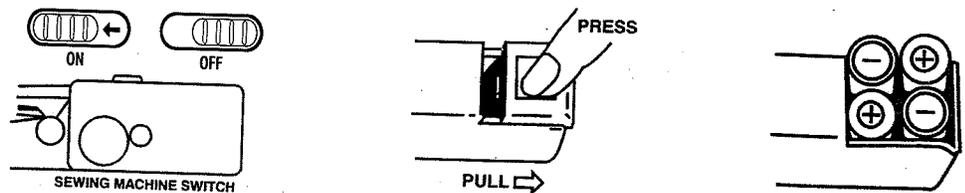

AC/DC Adapter (not included)

Adapter must be 6V 800mA. Adapter must use use plug with 1/8"/3.5mm diameter. Plugging an adapter into a portable that has different ratings could damage the portable & adapter.

CAUTION: Needle is sharp. Use care when working with needle to avoid injury. Keep away from children. When not in use, machine should always be kept in the locked position.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.