

TV1703-7

# 7-Inch LCD TV

## PLEASE READ BEFORE USING!

Before you begin using your new Axess® Portable 7" TV, please note the following:

Simply plugging in the device to charge up, or pressing the ON/OFF button on the upper right corner of the front of the device will not get it to work.

Please be sure that the small "ON/OFF" switch on the lower left side is turned on prior to use (this is the actual power switch, while the ON/OFF button is actually a "power/standby" function). Once this switch is turned on, the device can be charged up and used regularly.



**For the device to charge up and operate properly, this switch must be turned ON.**

### Questions? Comments?

If you are having any issues getting started using this product, please contact our Tech Support Dept. via email at [support@axessusa.com](mailto:support@axessusa.com), or by phone at 888-232-4145.