


# MARSHMALLOW BLASTER™ INSTRUCTIONS

## LOADING

**1. Open marshmallow chamber:** Point the Blaster forward and twist the front grip to the left and push it forward.

**2. Load marshmallow:** Place a regular size marshmallow in the chamber with a flat side forward. Several mini-marshmallows can be loaded in place of one regular marshmallow.

**3. Close chamber:** Pull back on the front grip to close the chamber and turn the grip back to the starting position.

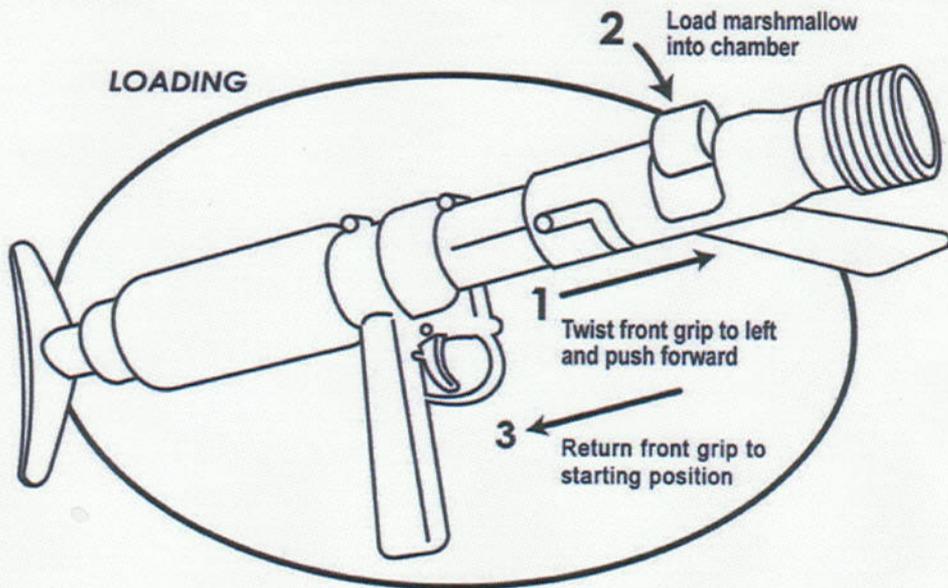


## SHOOTING

**1. Pump Blaster:** Push the rear hand grip 12-15 times to build up pressure in the chamber.

**2. Blast marshmallow:** Aim at target and pull the trigger to shoot the marshmallow

**Please note:** Over-pumping the Marshmallow Blaster may cause trigger failure. Tap the rear of the gun to reset.

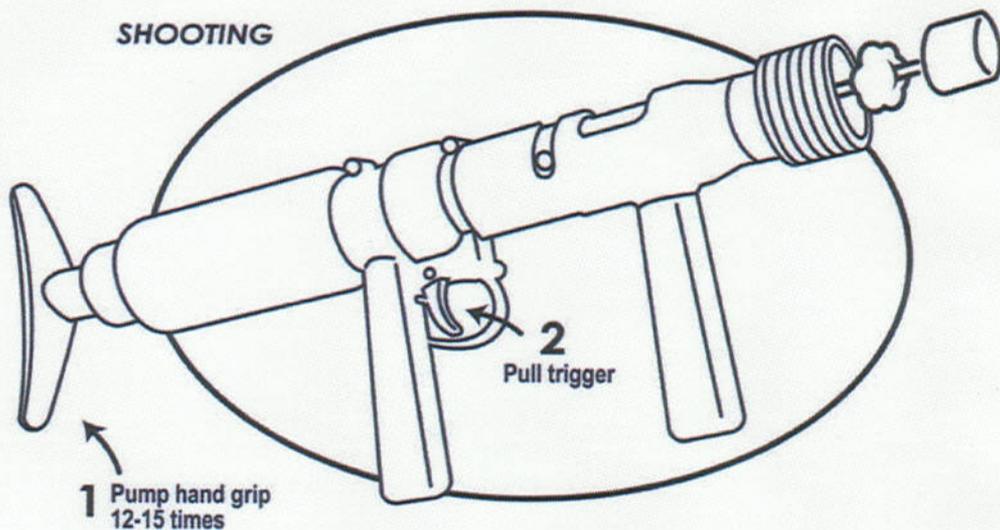

## CLEANING

**1. Remove barrel:** Press on both of the black buttons behind the chamber opening and slide barrel off.

**2. Wash barrel:** Run hot water over the barrel. Make sure all traces of marshmallow have been removed.

**3. Dry completely:** Remove all moisture before reloading the Blaster. Dampness will cause the marshmallow to swell and clog the blaster.

## ⚠ WARNING

Do not shoot into mouth, eyes or face.  
Do not modify Blaster or use if damaged.  
Shoot marshmallows only. Do not try to shoot anything other than marshmallows.  
Do not eat marshmallows after shooting.

Marshmallow Fun Company wants every customer to be a happy one.  
For support or questions, call toll-free 877.894.6073

**MARSHMALLOW FUN COMPANY, LLC**

2544 Elm Street, Suite 200 Dallas, Texas 75226 877.894.6073

fax 214.741.1384

[www.marshmallowville.com](http://www.marshmallowville.com)

100608