



**CLIPRAY**  
QUICK START GUIDE

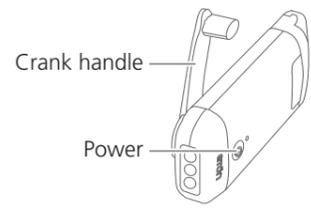

60 seconds at  
2 cranks per sec  
= 10 minutes  
of light

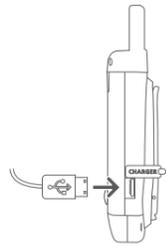

USB Cell Phone  
Charger Port



Press down to  
latch carabiner.

**WARNING**

- Do not expose this appliance to rain or moisture.
- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Only operate within specified temperature range (0 °C to 40 °C).
- Unplug immediately if liquid has been spilled or any object has fallen into the apparatus.
- Clean only with a dry cloth. Do not use detergents or chemical solvents as this might damage the finish.
- Do not remove cover [or back].
- Refer servicing to qualified service personnel.

**DISPOSAL**

Please dispose of old electrical and electronic equipment according to your local environmental laws and guidelines.