

PORTABLE DVD

with TV - FM - USB SLOT - CARD READER - GAME function
Swivel screen and rechargeable battery



USER'S MANUAL

PYLE®

www.PyleAudio.com



Please read this User's Manual carefully before use

Contents

Contents	- 1 -
Notice.....	- 2 -
Notice and Safety Information	- 2 -
Function Introduction	- 5 -
Disc Type & Notice	- 6 -
Keys Function and Panel Instruction	- 7 -
Remote Control Function and Instructions	- 10 -
Basic Function Operation	- 13 -
System Setup	- 14 -
Disc Play.....	- 17 -
CD Transcription and Multi Media Function	- 20 -
Receiving TV/FM Programs.....	- 21 -
AV OUT (Signal to TV).....	- 21 -
Troubleshooting	- 22 -
DVD Parameter	- 23 -
Accessories	- 24 -

Note: TV/FM/Game functions are optional

Notice

Thank you for your purchase of this DVD player. Please read this manual carefully and keep it properly for future reference. Notice:

Note: When open, refit or demount the machine, our company cannot supply after-sales service.

Notice and Safety Information

1. User notice

After buying the DVD, please read the operations and other instruction of user manual carefully, the incorrect use will cause the damage of health and loose of wealth.

2. Disc

It cannot use the broken, distortion shape or mended disc, which will cause damage and inefficiently read.

3. Inspection

Check the crust and power adapter(especially the parts of the existence of damage.)



mark part of internal there danger of voltage, current and enough.

4. Repair

In order to avoid the electric shock, please use wide blade plug to match with wide groove connector and make sure the secure connection. So all repair issue, please contact technical service center. Without technical service allowed, don't repair the DVD and spare parts.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN 	Attention: Don't open the cover, in order to avoid the conflagration or electric shock. Please make sure to consign qualified repair personnel for repair.
	Risk or electric shock
	Operations and other notices after purchasing this player
 CLASS 1 LASER PRODUCT	Lower laser light; no baneful radiation outside of machine

3. Earphone

Adjust the volume in the middle during use of the earphone. . It may damage ear when listening to high volume music for a long time.

6. Humidity

In avoid of electric shock and fire accident, please don't out the DVD in the rain or humidity environment. Do not open the cabinet so as to avoid the direct radiation of the laser. When repair the DVD must consigned the technical service people. When using the DVD, should avoid of the water, such as bathtub, bathroom, basin, kitchen room, sink and washroom. And also should be avoid of humidity environment, such as basement, swimming pool. when the hand is not dry, do not touch charge, or will be electronic shock.

7. far away liquid

Please sure DVD and spare parts far away from liquid, don't put it in such environment, such as vase beside. When the inside of DVD has liquid, will cause electronic shock.

8. Far away of heat

DVD must far away from heat, such as warm-air blower, induction cooker and so on.

9. Avoid of thunder

Do not use DVD in the thunder and lightning conditions.

10. Environment and ventilate

DVD and spare parts should be on ventilate environment. Will run DVD and other parts of put on bed, sofa, or other soft surface may be wall of ventilation, causing DVD and other parts components is too hoot, even cause fire accident.

11. LCD Screen

Do not drop, impact, scratch LCD screen, or do not put too heavy goods on the DVD.

Note: avoid of the liquid of LCD screen touch body directly, when it was broken, the liquid has touched the skin, please wash your skin by mass water at least 15 minutes

12. Laser

Attention: This DVD player is equipped with the laser system. Please make sure to get the familiar with the instructions of this manual to help you master how to use this player property. In case of requiring repair, please contract the distributor or our technical service center. Do not open the interlock mechanism. If need repair please contact the

distributor or our technical service center. Do not stare at the laser beam in case of any visible laser radiation damage the eyes.

13. Charger

Use the power wire, charge and battery in the accessory box, do not use other model of parts. Make sure the charge plug suit for the proper AC. Avoid of electric shock, please use the wide plug suit for socket, and connect tightly.

Unsuitable power source may do damage the DVD, even cause fire accident and electric shock.

Do not use the power socket, power line, power adaptor and battery module which may had already damaged and aged.

Do not use the same power source with high power motor electrical over the limited power motor of the wiring board. When the DVD have unusual sound and smell such as splintering and poop, please witch off the power line as soon as possible.

Note;

Please do not bind the power line is too high will arouse the unstable of the voltage and damage to the DVD, data, and also the equipment which is circumscribed, even result in the fire hazard.

Dangerous:

14. Battery and charging

1) Charging process

Before shipping, all batteries have not enough power.

Please put the DVD connect DC charge, the DVD will charge by itself. (the red light mean charge not enough, when full charge the light will be green, then u can play the DVD when you on trip.

Note: you can play the DVD when the DVD is charging, more convenient.

2) replace and deal with battery

If you replace the battery, must be same standard original battery, or there will be explosion dangerous.

Do not put the battery team in hit environment

There are some harmful substance inside battery team.

In order to avoid of the damage to body healthy and environment, please note as below:

1) In order to protect the quality of the DVD, if charging short time, the light turn to green, it means the battery need to replace, please replace the battery by service centre.

2) the battery will destroy the environment, please deal with these batteries by a legislative decree.

Note:

The built-in high capacity rechargeable batteries, no permission to install or remove battery must be replaced by professionals.

- 1) Do not put the battery into fire, in avoid of explosion
- 2) when it is charging or playing, do not install the battery.
- 3) Do not put the battery + - a direct connection, it will cause damage to the battery 4) Do not put the battery into water or other liquids, it will cause damage to the battery.
- 5) Do not appear or battery violence and other team on the impact.
- 6) Do not open the battery and change the structure.
- 7) If you want to have a long rest or sleep, please take the power off to prevent a rechargeable cell or damage caused by an unexpected accident.
- 8) when play the DVD, please put the volume in the middle (low volume can save more battery) , you can use more longer time, convenient for your trip.
- 9) Before the first charge please use all stock power.
- 10) Use in temperature -5°C — 40°C

Function Introduction

1. High resolution color TFT LCD full screen display
2. Super electronic shock resistance(3 seconds for DVD, 10 seconds for CD/VCD and 90 seconds for MP3)
3. Compatible with most DVD, SVCD, VCD, CD, Mp3, MP4, DIVX discs etc
4. TV receiving function (PAL/NTSC/SECAM system) (Optional)
5. Built—in super power polymer lithium battery for up to 2 hours continue playing
6. Built—in DOLBY decoder supporting MPEG-4 video decoding
7. Support USB, SD/MMC
8. Support full functions control remote, easily to operate
8. Support game function (Optional)
10. Support MP4, MP3, WMA, MPG, AVI, VOB, DIVX, JPEG formats.
11. Switch regulated power supply adapter AC100~240V
12. Personalize adjustment of TFT display
13. Fine ultra-thin design, suit for your better life

14. Support RM/RMVB formats (Optional)

15. FM Radio function and TXT Reader function are optional

Disc Type & Notice

Disc Introduction

Disc Type	Disc Marks	Record contents	Disc size	Playing time
DVD	DVD	Audio/Video	12CM	About 2 hours (SS-SL; Single-sided single-layer disc)
				About 4 hours (DS-SL; Double-sided single-layer disc)
			8CM	About 80 minutes (SS-SL; Double-sided single-layer disc)
				About 160 minutes (DS-SL; Double-sided double-layer disc)
Super VCD	Super VCD	Audio/Video	12CM	About 74 minutes
VCD	VCD1.0/ 2.0	Audio	8CM	About 20 minutes
CD	CD	Audio	12CM	About 74 minutes
			8CM	About 20 minutes
MP3		Audio	12CM	About 600 minutes

Note: some DVD, VCD, super VCD disc playing time could be special provisions by software makers, and when this case shows broadcast is slightly different with form.

Special Prompt

Don't have PBC function VCD disks (1.1 version), can enjoy music, also can admire the image

Have PBC function VCD2.0 edition, super VCD, VCD3.0 edition CD

In addition to VCD1.1 version disc image play function, still can use the TV screen menu play interactive software (PBC play), and, if the disc contains a static image, still can high-definition playback.

Use disc

Please hold with disc edge, don't touch surface, lest injure disc surface digital signals

Please do not put tape or sticker on disk

Do not let the disc exposed to direct sunlight or near the heat source

After play disc, please keep disc

Clean disc

Before play disc, please use clean flannelette clean DVD and from central outwards to wipe CDS

Do not use volatile gasoline, the functionalities of cleansing liquid or plastic disc with electrostatic spray etc solution

Keys Function and Panel Instruction

Note: different model of buttons panels different, not necessarily all the functions that contains the following keys.

Keys function instruction


1	LCD MENU	Short press the "menu" button pop-up image parameters function.
2	CH+	Short time press "channel +" can realize channel add function, some models in the "Settings" composite state of the function of upward menu, or simultaneously composite realize choice one song functions.
3	CH-	Short time press "channel -" can realize channel minus function, some models in composite " set " menu state the function, or simultaneously downward compound realize one song selection function.
4	VOL-	Short time press "volume -" can realize the volume decreases function. Some models in the LCD screen of composite function of state of the menu to the left, or simultaneously composite realize choose retreat quickly function.
5	VOL+	Short time press "volume +" can realize the volume increase function. Some models in the LCD screen menu compound to the right of the state, or simultaneously composite function realization choice quickly into function.

6	SETUP	Short time press the "set" pop-up menu;; System Settings/language setting/audio Settings/video setting/speaker setting/ Dolby digital set; Again according to the direction key realization through short out each function.
7	MODE	Short time press "mode" button can be pop-up mode menu DVD/TV/video input function screen.
8	◀◀	In DVD playback, can retreat quickly, in order to search for specific target broadcast; Some models and compound the "Settings" menu under the function of state to the left.
9	▶▶	In DVD playback, can quickly into play to search for specific objectives; Some models and compound the "Settings" menu under the state to the right function.
10	◀◀	In DVD playback, can press on a paragraph or last program, to search for specific objectives; Some models and compound the "menu" under the function of state upward
11	▶▶	In DVD playback, can press a paragraph or the next program, to search for specific objectives; Some models and compound the "Settings" menu under the state to the right function.
12	▶■	Short time press "play/pause" can play/pause functions switch; Press this button can confirm select menu content or start playing disc; Meanwhile compound In "Settings" menu state the function. OK confirm
13	COPY	Use machine read CD content, and put USB disk into USB jack, Press copy button, operation according to display, put the disc contents copies to USB disk.
14	POWER	Short time press "POWER" backlight function can realize shut out.
15	USB/SD	DVD playback condition for disc playback/USB/SD switch button.
16	R/L	Short time press "track" can undertake: left single voice/right single voice/stereo/mixed track function switching.
17	STOP	Short time press "stop" can realize In play when stop function.
18	MENU/PBC	Short time press "PBC/menu" can realize DVD - title/VCD - menu functions switching
19	OPEN	Clicked CD door switch, open CD door put CD.

Interfaces with lights:

1	GAME	Game handle socket.
2	ANT	Match machine antenna or cable TV signal input.
3	DC-IN	Power input seats. Note: when not in use, please draw power DC adapter, and will power adapter plucked from the socket.
4	ON/OFF	The power switch. Note: when not in use, please dial shut OFF 'to'.
5	AV IN	External video signal input
6	AV OUT	This machine video signal output
7	Ω EARPHONE	Headset input or output/external earphone
8	SD/MMC	SD/MMC Card socket
9	USB socket	USB Equipment socket
10	GAME	Game handle socket. Note: the game handle quantity and interface position according to specific models and decide.
11	Rechargeable lights	Because of different model; Charging instructions have the following kinds, light color differ. A) Charging, red light; full of charging green light. B) Charging, lamp shining; and full of charging, long bright. C) Charging, the lamp bright, full of charging, lamp power off
12	Remote control receiving window	Receive a remote control signals.
13	on indicator	Turn on the power, turn indicator light yellow lights, red light off. Different model the light of color differs somewhat.

Remote Control Function and Instructions

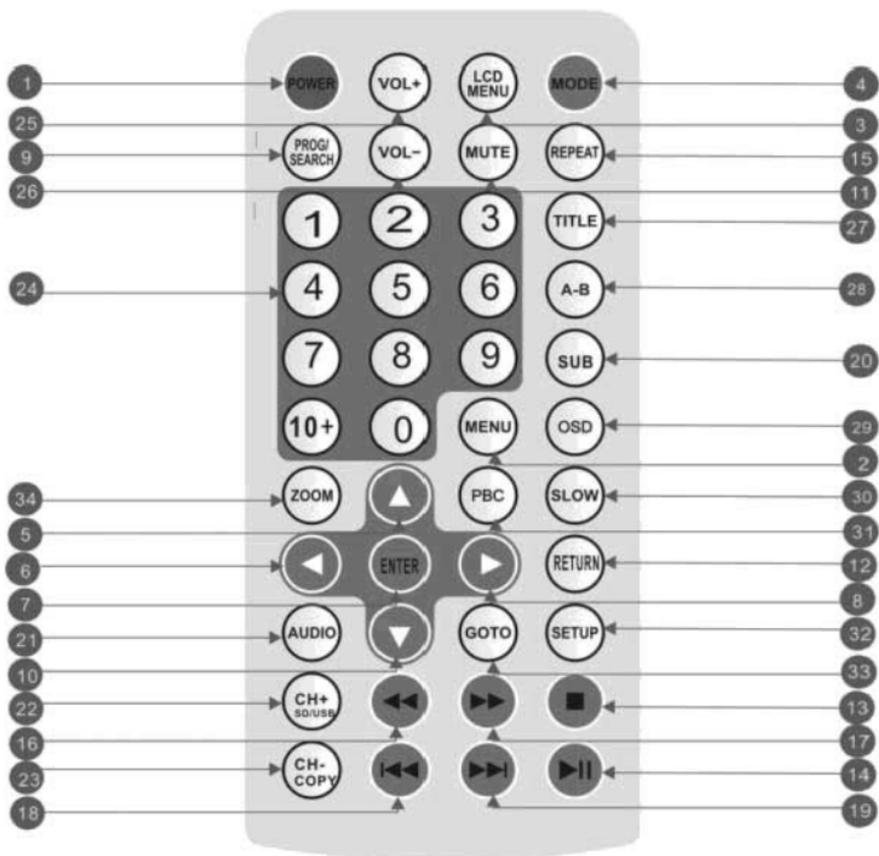

1	POWER	Press this button to play machine or shutdown.
2	MENU	In the video, DVD playback showed programs menu.
3	LCD MENU	Press this button can appear LCD Settings menu, short time press the "menu" button pop-up image parameters function.
4	MODE	On DVD mode ordinal click this button will switch to TV state - AV input - turn back DVD playback modes picture.
5	▲	In "Settings" menu state the function of upward.

6	◀	In "Settings" menu state the function of left.
7	ENTER	In "Settings" menu operation of selected function when OK confirm.
8	▶	In "Settings" menu state to the right of the function.
9	PROG/SEARCH	Channel surfing shortcut, channel surfing navigation way with quickly enter channel surfing state.
10	▼	In "Settings" menu state the function of down.
11	MUTE	Open/close the trumpet sound output cabin machine, note: AV output don't mute.
12	RETURN	Exits current operation, return to the front level operation.
13	■	Press this button to play and stop playback on time.
14	▶	Press this button to enter play state, then press this button to suspend play.
15	REPEAT	In DVD playback, repeat play button, aired favorite programs.
16	▶▶	In DVD playback, backward quickly, looking for specific objectives broadcast.
17	◀◀	In DVD playback, but fast forward, looking for specific objectives broadcast
18	◀◀	In DVD playback, can press on a paragraph or last program, to search for specific goals.
19	▶▶	In DVD playback, can press a paragraph or the next program, to search for specific goals.
20	SUBTITLE	Short time press "subtitle" again through short time press the direction key choose play contains many kinds of language subtitles.
21	AUDIO	The left/right/stereo track switching.
22	CH+ SD/USB	TV condition with "for" channel can be realized with feature. Channel Meanwhile compound the DVD player condition for disc playback/USB/SD switch button.
23	CH- COPY	TV condition for "channel decreased" can realize channel add function. Meanwhile composite DVD playback condition, can be conducted for COPY button discs/USB/SD COPY button

24	Number keys	Watching TV program or DVD playback video/audio CD /, can choose the place be fond of audio/video files show/playback.
25	VOL+	Press this button for the system sounds add features.
26	VOL-	Press this button for the system sounds reduced function.
27	TITLE	On DVD next play DVD and state title key can show all program title
28	A-B	On DVD next play video, according to state A - B key can cycle for A picture.
29	OSD	On DVD condition video/audio CD/broadcast, character display key can display disc information.
30	SLOW	On DVD next play CD/video state key can slow play sometime screen display slow play
31	PBC	On DVD conditions play super VCD disc, can enjoy the simple PBC interactive function.
32	SETUP	Short time press the "set" pop-up menu, then according to the direction key realization by short, each function switching.
33	GOTO	On DVD condition video/audio CD/broadcast GOTO keys, realize, according to time repertoire, search broadcast.
34	ZOOM	On DVD next play CD/video state, by complex modulation ZOOM keys but larger or smaller screen

Fix the batteries:

1. Flip the remote control to the back, take down the lid;
2. The battery warehouse polarity direction, put into two 7 battery;
3. According to remove the lid of a reverse direction, mount the lid.

Note:

1. Remote control do not use rechargeable batteries.
2. Do not mix use different brand, type of battery, don't put the old and new batteries together to use.
3. When the remote control function is not strong or control range be small please replace new battery.
4. Long-term no use remote control, please put the remote control not battery inside, lest

battery liquid leakage, corrosion, causing damage to the remote control.

5. Don't put the remote control in extremely hot or moist place.

6. Don't disassemble remote control,

7. Don't let light point-blank remote or panel infrared sensor, so as not to interfere with remote signal.

8. Within 5 meters away from the machine in 30° Angle and used only within the scope of the remote control best effect.

Basic Function Operation

1. Operation

1) Connect the machine to electric with power supply(100-240V) . Red light shows power on and charging.

2) Switch the ON button on the machine for screen display. Leaving the power switch OFF and unplug the adapter if not in using

3) Links with the TV set, please change the TV model into AV state

2. TFT picture adjustment

Press LCD MENU enter into LCD setup menu for adjustment.

3. Place disc

1) Press OPEN to open the disc cover

2) Hold the edge of the disc and buckle it slightly on the pivot.

4. Play /Pause

1) This player will automatically play once the disc is loaded.

2) Press ► | key, to pause

3) Press ► | key once more to resume play.

5. Character display

Press OSD to show disc information and operation function and press OSD once again to turn off the display.

6. DVD disc menu play

Some DVD discs are recorded with title menu or chapter menu.

When MENU key on the remote controller is pressed, the screen will display the menu at

your choice. Press direction keys to adjust and press ENTER to confirm and press number keys to select. Press MENU key again to return root menu. Press TITLE key once again to return title menu.

7. PBC play

It can enjoy PBC interactive function during play for the super VCD and VCD 2.0 discs with PBC function.

8. Select chapter play direct by Number key

Press number keys to directly select the chapter to play once the player finished the disc reading

- 1) Press number keys 1-9 for the chapters with the number less than 10
- 2) For the chapters with the number above 10, press 10+ key(it switches to 20+, 30+...when pressed in succession) , before pressing number key 0-9

9. Game function

- 1) Connect the joystick with the machine and place the game disc to the player for play. Then close the cover, the player can play soon.
- 2) Use the remote control for menu page change. Choose the game serial number by press 1-10+
- 3) Use the joystick to play games. Press RETURN key in the remote control or press MODE START at the same time to back game menu.

10. Play the program of USB/SD/MMC memory card

Switch the modal to DVD state, cove the open door, press SD/USB key to play the programs of memory card.

System Setup

1. TV Display Setup

Press LCD MENU for brightness, contrast ratio, hue and saturation change.

2. DVD Menu Setup

1) General Setup Page



- TV Display: Normal / PS. Normal / LB. Wide Screen.
- OSD Language : English, French, German, Spanish, Italian, Portuguese, Russian.
- Closed Caption: ON / OFF.
- Screen Saver: : ON / OFF.
- Set Last Memory State:; When the electricity cut off suddenly, the system can resume from last time play after getting electricity through again. ON / OFF.

2) Audio Setup Page: Speaker Setup and Sound Setup



- DOWNMIX Mode: Lt / Rt. , Stereo, Virtual Surround.
- Equalizer Setup Page: Rock, Popular, Live, Dance, Electronic, Classic, Soft.

3) Video Setup Page(adjust the LCD pictures quality) : sharp, brightness, contrast ratio, hue and saturation



4) Analogue TV setup



- a. Auto Search: Search TV programs automatically.
- b. Manual search: Manual search TV programs.
- c. Fine tune: adjust TV signal.
- d. Sound System: PAL_BG、PAL_DK、PAL_I、PAL_I、NTSC_M、SECAM_BG、SECAM_DK、PAL_M、PAL_N.

5) Preference Page:

- a. TV type: Its very important to select the correct TV type. If the selection is wrong, there



will be no picture on the screen.

- b. Audio Language: Choose the language when play Multilanguage disc
English, French, Spanish, Chinese, Japan, Korean, Russian, Thai etc.
- c. Subtitle Language: Choose the language when play Multilanguage disc
English, French, Spanish, Chinese, Japan, Korean, Russian, Thai etc.
- d. Menu Language: Choose the language when play Multilanguage disc
English, French, Spanish, Chinese, Japan, Korean, Russian, Thai etc.
- e. Age limit

1 Childhood	2 G	3 Pg	4 Pg 13
5 Pg-R	6 R	7 NC 17	8 Adult
- f. Password: work with classification disc.
- g. Default Value: Factory Reset.

Disc Play

1. Audio Track Selection

1) You may select the required language when playing DVD or super VCD discs with multi languages

During the play of DVD and super VCD, press AUDIO to choose the language(depends on the discs)

2) You may select mono L, mono R or stereo for the CD or VCD with multi audio tracks.

For instance, for the VCD discs with mono L is music and mono R for songs, you may select mono L to listen the music

3) During the play of VCD discs, press AUDIO to select audio track

2. Fast play

During the play of discs, it may work fast forward or rewind to search specific target.

1) Press ◀◀ enter into fast forward status. Every press of ◀◀ will adjust the forward speed.

FFX2 → FFX4 → FFX8 → FFX16 → FFX32 → Play

Press ▶▶ for normal play

2) Press ▶▶ enter into fast rewind status. Every press of ▶▶ will adjust the rewind speed.

FR X2 → FRX4 → FRX8 → FRX16 → FRX32 → Play

Press ▶▶ for normal play

3. Slow Play

You can enjoy slow motion video according to the following steps.

1) Press SLOW enter into slow display status. Every press of this key will adjust the slow speed

SFX2 → SFX4 → SFX8 → SFX16 → Play

Press ▶▶ for normal display

4. Repeat Play

It can select title repeat and chapter repeat during the play of DVD discs.

1) Chapter repeat

Press REPEAT till the screen displays "REPEAT CHAPTER"

2) Title Repeat

Press REPEAT till the screen display REPEAT TITLE

3) Cancel Repeat

Press REPEAT till the screen display REPEAT OFF

It can select single repeat and disc repeat during the play of super VCD, VCD and CD

1) Repeat One

Press REPEAT till the screen display "REPEAT ONE ",

2) Disc Repeat

Press REPEAT till the screen display "DISC REPEAT"

3) Cancel Repeat

Press REPEAT TILL the screen display disappears

Note: SVCD, VCD2. 0, VCD3. 0 discs can only work only under the PBC is off. VCD1. 1, CD discs can be operated directly

5. Turnoff PBC function

Press PBC and the screen show " PBC OFF " .

Press once again and the PBC is turned on

6. Certain Portion Repeat

During the display of disc, you may press "A-B" key to enjoy your prefer portion repeatedly

1) Press "A-B" at the beginning point of the contents to be repeated and the screen will display "Repeat A-" to set the start point A

2) Press "A-B" at the end point of the contents to be repeated and the screen will display "Repeat A-B" to set the end point B

3) Press "A-B" once again and the on screen display will disappear, then the repeat play will be cancelled.

7. Subtitle Selection (Only effective to DVD and SVCD)

You may select one subtitle display for the DVD and VCD with multi language

1) Press SUBTITLE to select one subtitle display

2) Cancel subtitle display: press SUBTITLE till the screen display OFF

Note: Subtitle cancel function depend on the discs. If the subtitle on the discs is non-selectable, then its void to press SUBTITLE

8. Chapter search, Time search

Press GOTO during disc play and press direction keys to select among the following options:

- 1) Title: To display current title. It can input the title number to be played
- 2) Chapter: To display current playing chapter. It can input the chapter number to be played
- 3) Time: To display the current playing time. It can input the time to be played
After choosing, press ENTER and quit the menu

9. Zoom Function(Only effective to DVD, SVCD, VCD)

To zoom in or zoom out the certain motion pictures or still image

- 1) During disc play, press ZOOM to zoom into 2x
- 2) Press ZOOM in turn to zoom into 3x, 4x and zoom out 1/2x, 1/3x and 1/4x.
- 3) When returning to original image, press ZOOM till the character disappear

10. MP3 Disc Play

MP3 adopt the third layer audio compression format of MPEG international standard, compress the acoustical signal with ratio 12: 1. A MP3 disc can record music around 600 minutes, i. e 170 songs with the high quality sound as the same as CD.

MP3 Disc Play

- 1) Place the disc, then the screen will display disc menu and the machine automatically play
- 2) Directory selection: Press ◀ to move the cursor to the directory area(the left side of the screen) . Press ▲ or ▼ to select one folder and press ENTER to confirm
- 3) Chapter Selection: Press ◀ to move the cursor to chapter area(the right side of the screen) . Press ▲ or ▼ to select one folder and press ENTER to play
- 4) Choose the chapter with remote control: Songs quantity under 10, you can choose directly with the NO on remote control.

11. MP4 Disc Play

- 1) Place the disc. The player will automatically play.
- 2) Press ENTER to choose the chapter.


12. Support JPG and TXT format (Some model support TXT)

CD Transcription and Multi Media Function

This function fits for MP3 and CD disc

1. Copy from MP3 disc

When it is playing MP3 discs, insert USB devices, press COPY button. the screen will show pictures as below.

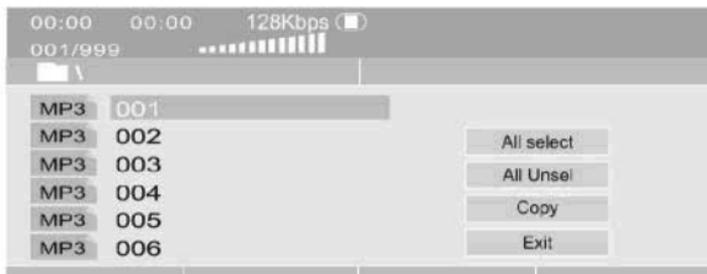

Press ENTER to select songs, then move cursor to "COPY" item, press ENTER to start. If need to copy all files in the MP3 disc, please move cursor to "All select" item, press ENTER

2. Copy from CD disc

When it is playing CD discs, insert USB device, press COPY button

CD RIP			
OPTION		TRACK	
SPEED	Normal	track01	04:06
BITRATE	128Kbps	track02	03:32
CREATE ID3	Yes	track03	02:52
DEVICE	USB 1	track04	03:26
SUMMARY		track05	02:16
selected track	0	track06	03:52
selected time	00:00	track07	02:35
start	exit	select all	select none

Press ENTER to select songs, then move cursor to "Select all" item, press ENTER to start. If need to copy all files in the CD disc, please move cursor to "All select" item, press ENTER

Receiving TV/FM Programs

Note: TV/FM/GAME FUNCTION ARE OPTIONAL

1. Receiving TV


- 1) Plug in the CATV adapter or antenna .
- 2) Press "MODEL" key to switch the model to TV state .
- 3) Choose the correct local TV system , NTSC or PAL .
- 4) Choose the correct sound system.
- 5) Press "SET UP" key to switch the model to TV state.
- 6) Press "search/Program" key to search program automatic.
- 7) When u using the whip antenna, it can achieve best receiving effects by adjusting the antenna direction and angle.(use the small antenna to search programs ,The Qty and quality of programs depend on the effect of local signal)
- 8) Press 1~10 select channel 1~10.The channel above 10 can be selected by pressing two numbers keys within two seconds.
- 9) Press "CH+" or "CH-" key to select next or previous channel .

2. Receiving FM

- 1) Plug in the antenna .
- 2) Press "MODEL" key to switch the model to FM state
- 3) Press "SET UP" key to FM set up system.
- 4) Press "search" to on the remote control key to receive the FM program.
- 5) When u using the whip antenna, it can achieve best receiving effects by adjusting the antenna direction and angle. (use the small antenna to search programs ,The Qty and quality of programs depend on the effect of local signal)
- 6) Press 1~10 select channel 1~10.The channel above 10 can be selected by pressing two numbers keys within two seconds.

AV OUT (Signal to TV)

Links with the TV set, please put the TV set in a state of AV.

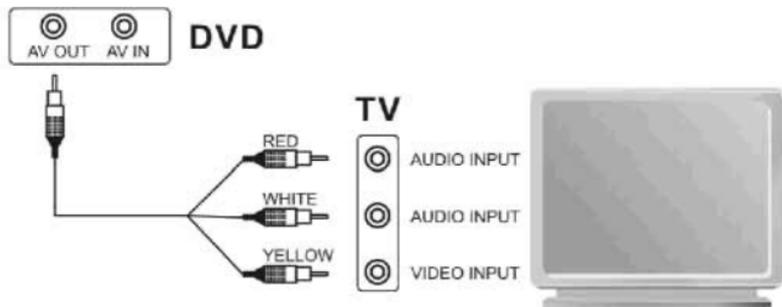

Note: Av line with his head for video signal, a red for audio signal.

Basic function operation

Open cooperation: Connecting with adaptor, please put ON/OFF to be on, DVD will completely be opened after 3 seconds, then change the DVD mode to be TV mode.

Note: open by ON/OFF or remote.

Press Setup to be DVD setup menu, choose menu by forward keys, selected menu will be bright color, then press enter to confirm operation.

DVD setup operation: Adjust TV, OSD language, closed captions setup, screen saver setup, last memory state, Audio, Video etc.

Press setup: the DVD system will be pause.

Troubleshooting

Fault phenomena	Solution
No power/no charging	<ul style="list-style-type: none"> Check if adaptor is connecting Check if put on/off to be on
No disc	<ul style="list-style-type: none"> Check if adaptor is connecting Check if have disc Check if disc settlement is wrong If damaging or dirty, please change it. If DVD is dirty, take out disc and charging 1-2hours Wrong disc formal
No pictures	<ul style="list-style-type: none"> Check TV is on, and Connecting in AV. Check the VIDEO setting is right. Check if wire is undamaged Clean disc Check the power keys is opening.

Picture with twist	Disc is already damaged. Reset system of TV or DVD
Disc wrong	Change the disc or clean
Picture on screen is not completed	Setting TV system Change the screen ratio on Setup
Can not choose song	Some disc does not support choosing
Wrong Remoter	Remoter is damaged If Remoter is forward to light If have remoter battery. Check if battery has power.
No Audio or Video output is not complete	Check if TV and Audio system is opening and setting rightly Check if TV and Audio system is connecting rightly Check if sound is zero Change sound channel and language No sound under Pause, fast forward, fast rewind. Sound setting is lower.

DVD Parameter

DVD Part technical specification

Compatible disc	DVD, SVCD, VCD, CD, CD-R/RW, JPEG, DVD, DVD, WMA, MPG, MP3, DIVX, VOB, AVI, MP4 etc ... (RM/RMVB is optional)
Supporting out device	USB/MMC/SD
Anti-shock function	DVD; 3 seconds; VCD/CD; 10seconds; MP3; 90seconds
Audio out	AUDIO; 2.0V±0.2, Speak: 8Ω/1.5W; Output of earphone: 15mW
Frequency	20HZ 20KHZ
Audio (S/N) Radio	≥50dB
Range of activity	≥50dB
VEDIO OUTPUT	1.0V±0.2Vp-p(75Ω)
VEDIO OUTPUT	PAL/NTSC/ANTO/SECAM

TV PARAMETER

Analogue receiver frequency	BG/DK/I/L; 48. 25MHz~863. 25MHz M; 65. 25MHZ~801. 25MHZ
AUDIO SYSTEM	DK, I, BG, L, M

Accessories

Please check accessories after open package

1. Standard Accessories

Power Adaptor

AV Cable

Earphone

Remote control

Manual

2. Optional Accessories

Car adaptor (Optional)

TV Antenna (Optional)

Game CD (Optional)

Game Joystick (Optional)