

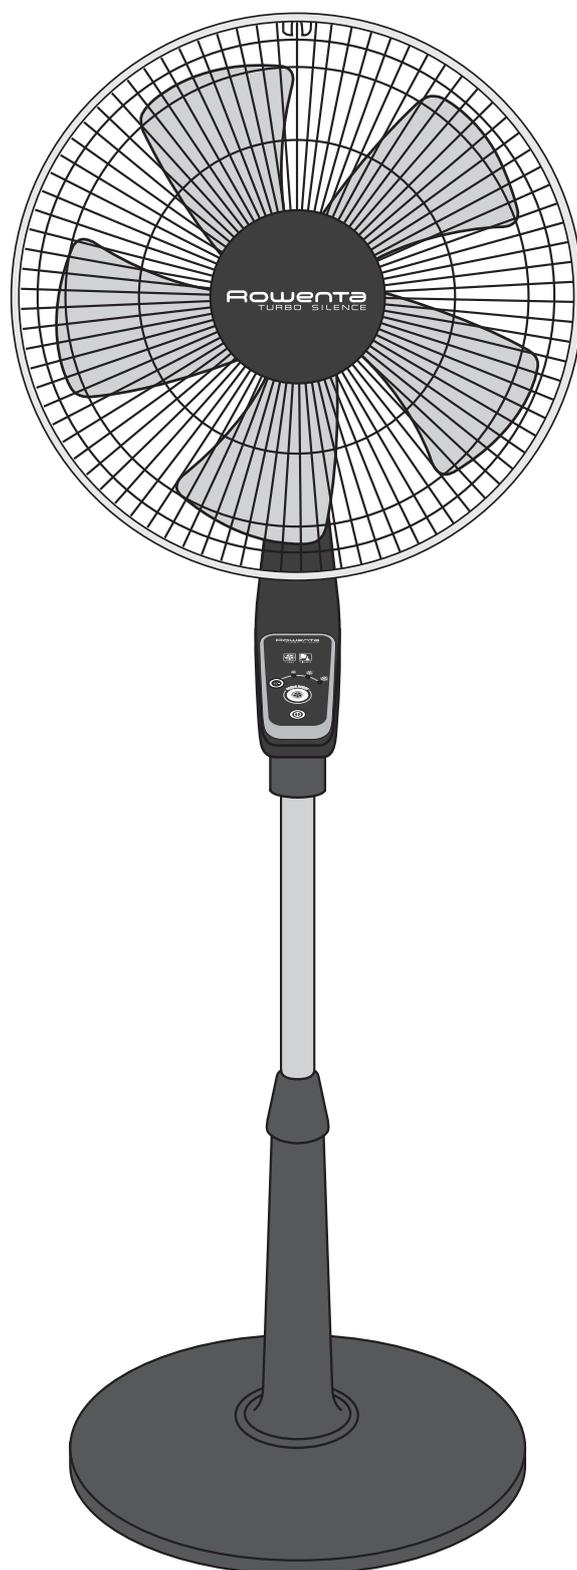
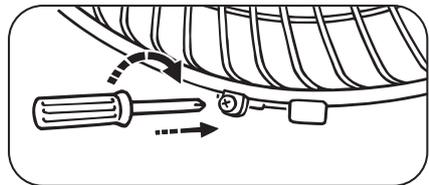
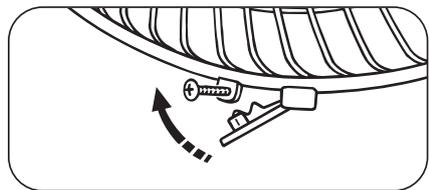
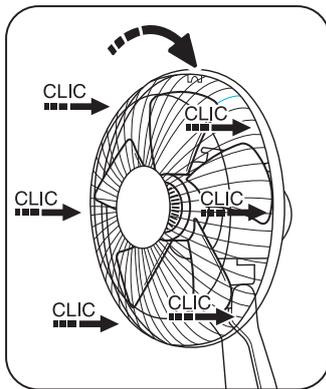
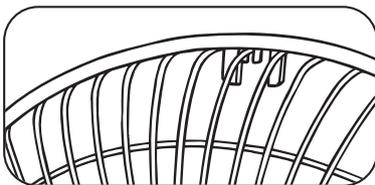
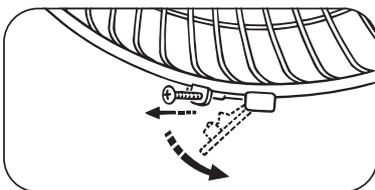
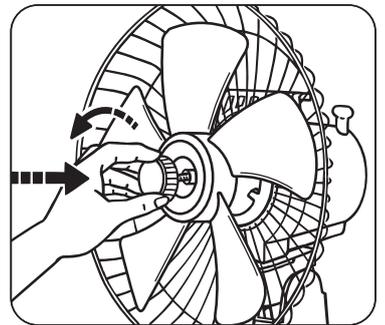
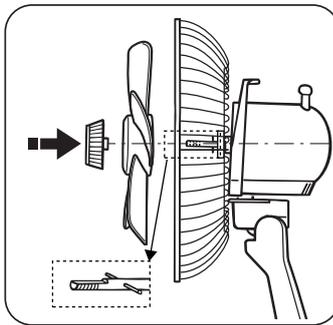
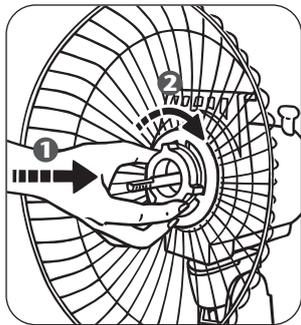
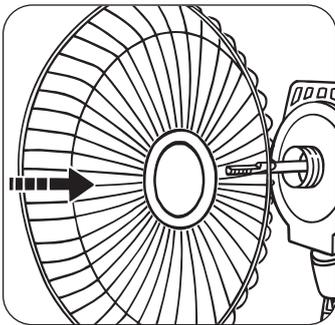
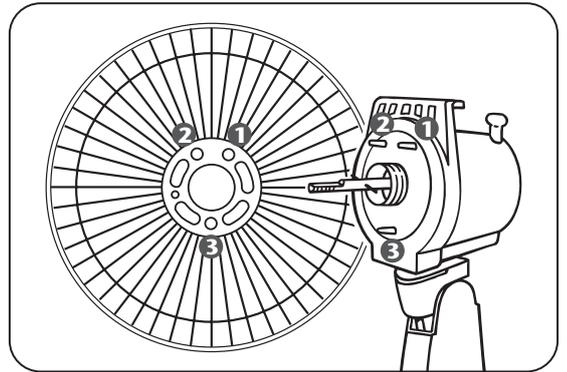
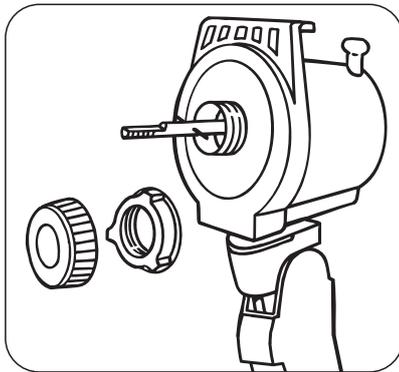


Rowenta®

TURBO SILENCE

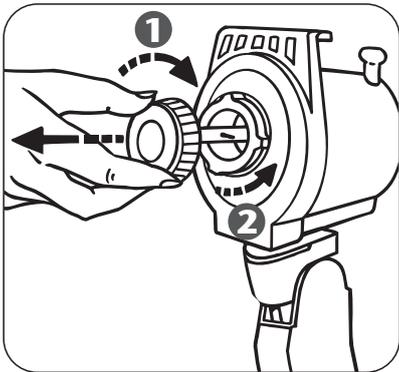

VU5550

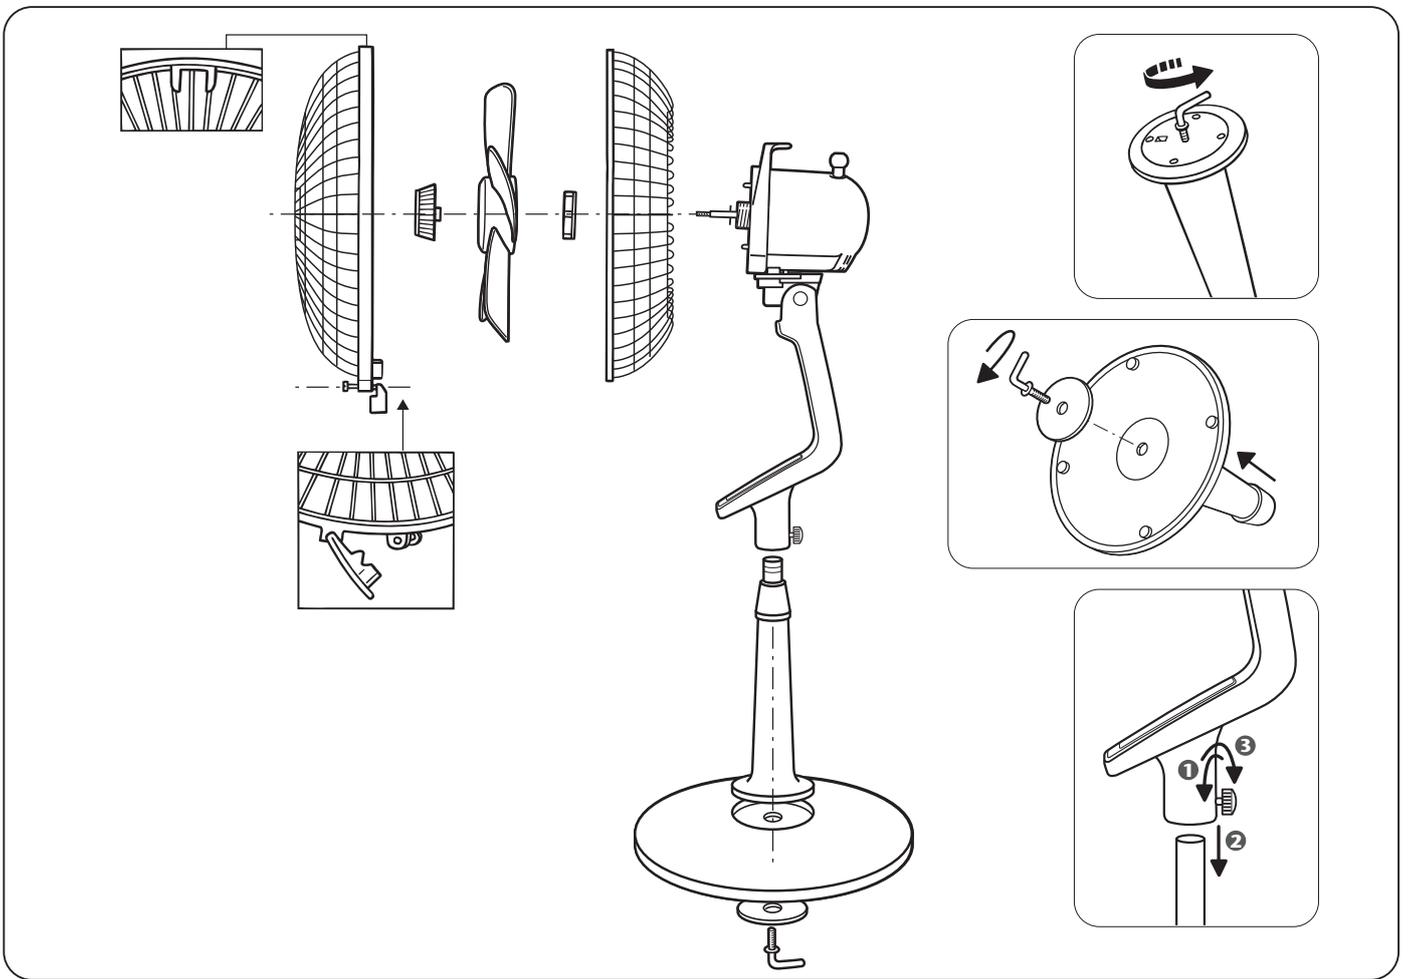

1 - WARNINGS

It is essential that you read these instructions carefully and comply with the following recommendations.

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- Before using, always check the condition of the appliance, the power socket and the power lead.
- Do not pull on the power cable or the appliance, even to unplug it from the wall socket.
- Never insert objects into the appliance (e.g. needles...).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use your appliance in a dusty room or a room where there is a risk of fire.
- This appliance is intended for domestic use only. It must therefore not be used in industrial applications.
- The warranty will be void in the event of damage arising from improper use.
- If the power cable is damaged, it must be replaced by the manufacturer, its after-sales service or a person with similar qualifications to avoid any danger.

2 - VERY IMPORTANT

- Keep the appliance 50 cm away from any objects (curtains, walls, aerosols, etc.)
- NEVER ALLOW WATER TO PENETRATE THE APPLIANCE.
- Do not touch the appliance with wet hands.
- Before operating, please ensure that :
 - The appliance is assembled according to the manufacturers instructions.
 - The appliance is placed on a stable and firm surface
 - The appliance is in a normal operating position (in an upright position on its feet).
- This appliance must not be used in a damp room.

3 - VOLTAGE

- Before using for the first time, check that the voltage of your mains supply is the same as that shown on the appliance and that your mains supply is suitable for the power indicated on the appliance.
- Your appliance can be used with a power plug without an earth connection. It is a class II appliance (dual electrical insulation □).


4 - ASSEMBLING

- Your appliance is supplied unassembled. For your safety, it is essential to assemble it correctly.
- You must set and use your appliance in compliance with the standards in force in your country.

5 - OPERATION


CAUTION : Do not try to raise the button (E) when the appliance is in use, as you could damage the oscillation mechanism.

When you switch the appliance on (plugged into the mains socket), the appliance is in "STAND BY" Mode (STOP). The electricity consumption is less than 0.5W.

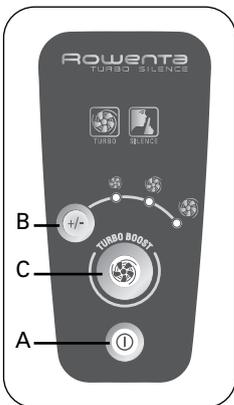


Operate the fan using the ON / STAND BY button (A). Then choose the speed you require by pressing once, twice or three times on the selection +/- button (B). For high performance ventilation, press directly on the TURBO BOOST (C) button which will light up in blue.

You can stop the fan by using the ON / STAND BY (A) button. **IMPORTANT:** We advise you to unplug your appliance when you are not using it.

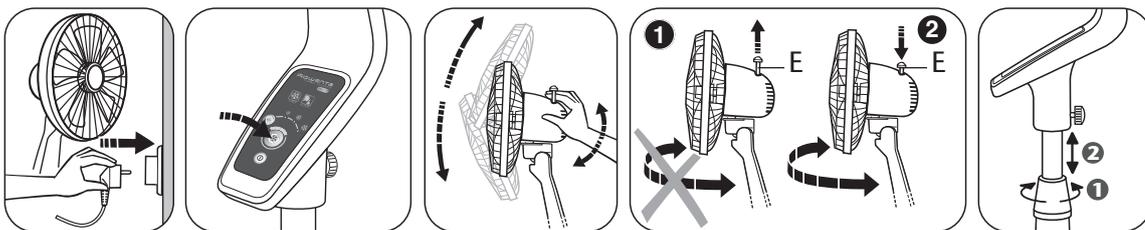

6 - REMOTE CONTROL

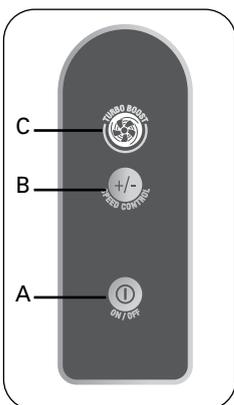

Remote control description:

- Button A: ON/STAND BY
- Button B: speed selector 1 / 2 or 3
- Button C: 4th speed TURBO BOOST selector

Using the remote control:

- Press once on the A button, the appliance starts on the last speed selected before STANDBY, then press again on button A: the appliance stops (STANDBY mode).
- Buttons B and C will only work once the appliance is running:
- Press repeatedly on button B to switch from the different speeds from 1 to 3.
- Press on button C to enable/disable the TURBO BOOST speed.

How the remote control works:

The information is transmitted to your appliance by infra-red by means of a transmitter diode located on the front of the remote control. The infra-red receiver is located on the fan's control panel. Make sure you don't scratch the transmitter diode or your fan's infra-red receiver.

To use the remote control, point the transmitter diode in the direction of the fan's infra-red receiver and press on the required button. Make sure that there aren't any obstacles between the transmitter diode and the receiver.

Remote control power supply:

The remote control uses 2 x 1.5 V type AAA or LR03 alkaline batteries, which are not included.



Place the batteries in their compartment making sure that you put them in with the positive and negative ends the right way round as shown in the battery compartment.

IMPORTANT: We advise you to unplug your appliance when it is not in use.

When storing the appliance for a longer period of time, please remove the batteries from the remote control.

7 - CLEANING

- Your appliance must be unplugged before proceeding with any cleaning work.
- You can clean it with a slightly damp cloth.
- **IMPORTANT: Never use abrasive products which might damage the appearance of your appliance.**

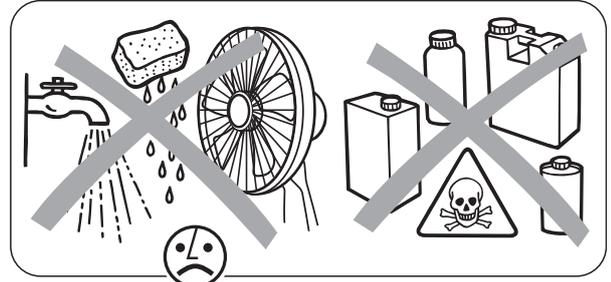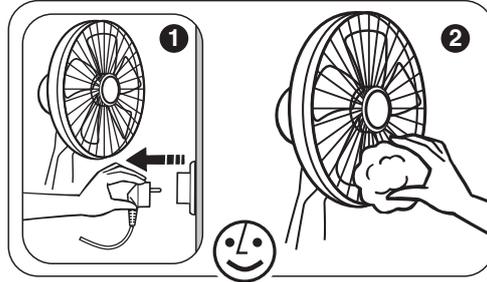


8 - STORAGE

- When you are not using your appliance, store it in a dry place.

9 - IN THE EVENT OF PROBLEMS

- Never dismantle your appliance yourself. A poorly repaired appliance may be dangerous for the user.
- If the appliance ceases to operate or is damaged in any way, contact **one of our authorised service centres.**

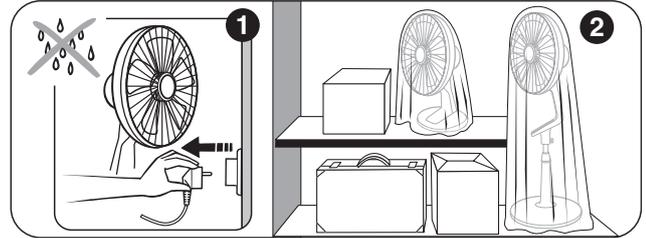

10 - ENVIRONMENT PROTECTION FIRST !

-  Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

This appliance uses batteries: help us look after the environment, by not throwing away your used batteries. Instead, bring them to anyone of the special battery collection points. Do not throw them away with your household waste.