



Getting Started

Copyright

Copyright © 2003 Fossil, Inc. All rights reserved. Wrist PDA is a trademark of Fossil, Inc. All other trademarks are the property of their respective owners.

Disclaimer and limitation of liability

Fossil, Inc., and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Fossil, Inc., and its suppliers assume no responsibility for any loss or claims by third parties which may arise through the use of this device; nor do they assume any responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data to protect against data loss.

Welcome!

Your Wrist PDA™ watch represents the ultimate in personal data portability, delivering the power and functionality of the familiar Palm OS® in an ultra-small, ultra-stylish package.



Your Wrist PDA includes these great features:

- Innovative design integrates the stylus into the watch
- Stylus-free, one-handed navigation using the Rocker switch, Back, and Page buttons (see page 15)
- Jot® character recognition—more flexible than Graffiti®—lets you enter text directly on the touch screen

- Large fonts for improved readability
- Customizable watch face that lets you change the style of the time display when not in PDA mode (see page 17)
- Includes Chapura® PocketMirror® Standard to synchronize your Wrist PDA with Microsoft® Outlook®
- Supports many third-party Palm OS® applications (see page 27)
- Supports infrared beaming with other Palm OS® devices (see your electronic *User Guide* for details)

Follow the steps in this booklet to install the Palm™ Desktop software, set up your Wrist PDA watch, enter a record, and perform a HotSync® operation.

1 Unpacking

Remove all items from the package, including:

- Wrist PDA watch
- HotSync Pod
- USB cable
- AC adapter
- extra stylus
- installation CD
- wristband link removal tool
- this *Getting Started* guide

2 Installing Palm Desktop software

NOTE

If you're already using a Palm OS[®] device with your computer, read "Installing Palm Desktop Software" in the electronic Wrist PDA *User Guide* and follow the instructions there instead. To view the manual, insert the installation CD in your computer and select **Documents** from the menu that automatically opens.

If this is your first Palm OS[®] device used with your computer, follow these steps to install the software:

1. Exit all running programs. If Microsoft[®] Outlook[®] is installed, be sure to exit the program before starting.
2. Do *not* plug in the USB cable for the HotSync Pod until instructed to do so on page 10.

3. Make sure your computer runs Windows® 98 Second Edition or a later Windows operating system (see “System Requirements” on page 40).
4. Insert the installation CD in your computer. The menu screen automatically opens:

**NOTE**

If you don't see this screen, click **Start, Run**. Type `x:\wristpda.exe`, replacing `x` with the letter of your CD-ROM drive.

5. Click **Wrist PDA Software** and follow the instructions on the screen.

NOTE

You may be required to have Administrator rights to install software on your computer. See your Windows documentation for details.

6. If Microsoft Outlook is installed on your computer, you will see this screen:



Select whether to use Palm™ Desktop software or Outlook to manage your personal information.

NOTE


If you choose to synchronize your Wrist PDA with Outlook, a separate installation program will launch after the Palm™ Desktop installer to help you install the Outlook conduit.

7. *Windows XP users:* If you see this screen, click **Continue Anyway** to continue the installation.



3 Connecting the HotSync Pod

1. Plug the USB cable into the  port on the HotSync Pod, then connect it to any available USB port on your computer.
2. Plug the power supply into an electrical outlet, then connect it to the  port on the HotSync Pod.

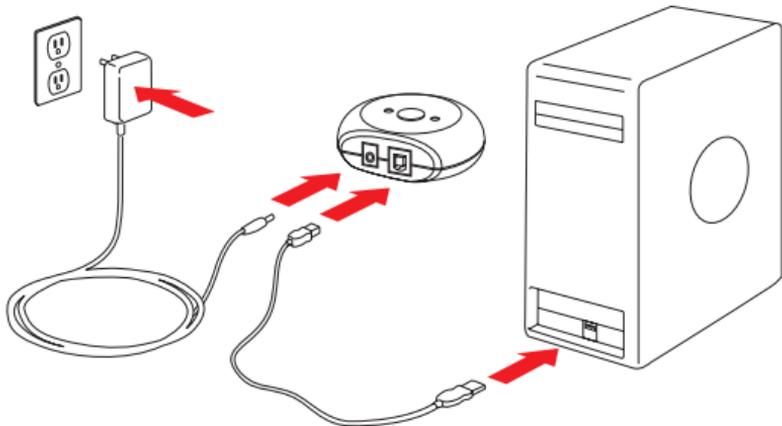

- Once it's connected, Windows detects the new hardware and installs it automatically. You may be asked to restart your computer.

Windows XP users:

- If you see this screen, select **Install the software automatically** and click **Next**.
- If you see this screen, click **Continue Anyway**.





4 Charging the watch

The Wrist PDA watch is off when you first unpack it.

1. Turn the watch over.
2. Connect the cable from the HotSync Pod to the port on the back of the watch.

Your Wrist PDA should turn on while charging.

3. Let the watch charge for 4 to 6 hours before using it for the first time.

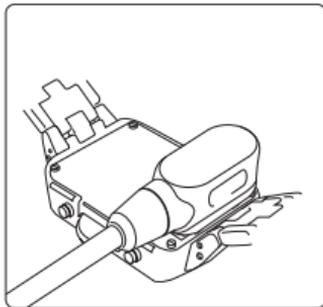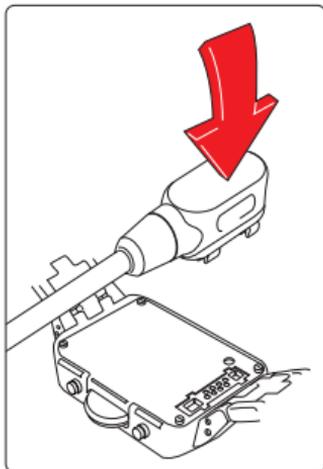

5 Setting the date and time

1. Once the watch is fully charged, disconnect it from the HotSync Pod.


You see this screen displayed on the watch.

2. Remove the stylus from the wristband. (The stylus is integrated into the metal wristband or into a holder on leather, plastic, and rubber wristbands.)

Setup 1 of 5

Welcome. The following screens will walk you through Setup, which takes just a few minutes.

1. Remove the stylus as shown:
2. Tap the stylus anywhere to continue.

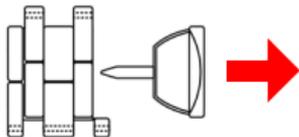

3. Follow the instructions on the watch to perform the setup process.

To set the time, use **Rocker Up** and **Rocker Down** to adjust the hour (see buttons on the next page). When the hour passes 12 o'clock, AM and PM will switch automatically. Use **Page Up** and **Page Down** to adjust the minutes. Press and hold the buttons to change the time more quickly. When the correct time is displayed, press **Rocker Enter**.



If you need to reset the time, you can access the time settings in the future from the Date & Time preferences screen. See page 30.

6 Using your Wrist PDA

Back button

press to view previous screen or applications; press and hold to activate EL backlight



Page Up

Rocker switch use for up, down, or enter; press and hold to access PDA mode

Page Down


NOTE

Tap the **Skills** icon to see basic information on using your watch.



7 Switching from the time to PDA mode

The time automatically displays after a brief period of inactivity (when you don't press any buttons or use the touch screen). This is called *auto off* or *sleep mode*, because the PDA is inactive at this time.

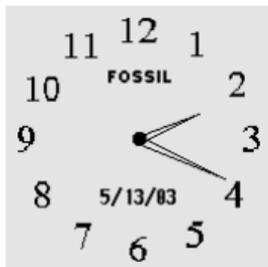

To return to PDA mode, press and hold the **Rocker switch**. Your watch will display the last application you were using before it entered sleep mode.

NOTE

To view the screen in low-light conditions, press and hold the **Back** button. This turns on the EL (electroluminescent) backlight.

8 Choosing a watch face

You can display the time in a variety of styles:

1. Make sure you're in PDA mode, then press the **Back** button on the left side of the watch to display your applications. Press the button several times until you see the ▼ All category in the upper-right.
2. Tap the  **Watch** application icon.
3. Press the **Rocker switch** up or down to select your favorite watch face, then press the **Back** button to return to your applications.

NOTE


When the time is displayed in sleep mode, you can also select different watch faces using the **Rocker switch**. (The Lock Watch Face option must be unchecked; see page 30.)

9 Writing on the screen

The screen is divided into two parts—the left for writing lowercase letters and the right for numbers.


NOTE

To display the division mark shown below, tap the  **Jot** icon and select **Show mode mark**.

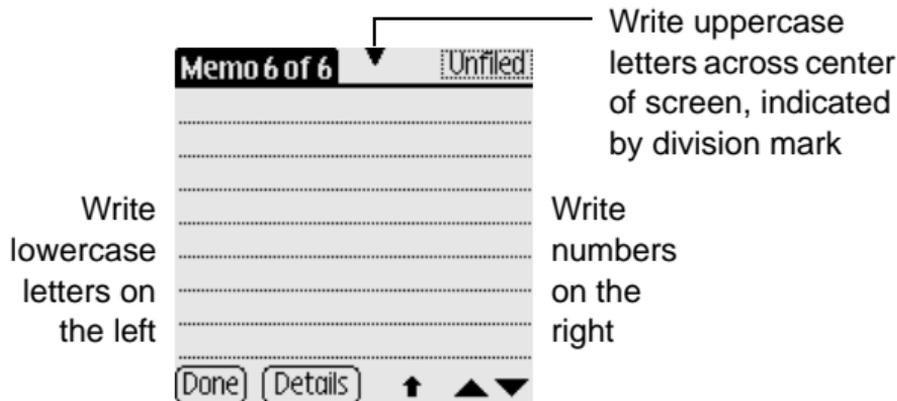


Tips for writing with Jot

- Unlike Graffiti[®] used by other Palm OS[®] devices, your Wrist PDA uses the latest generation writing style called Jot.[®] This lets you write more naturally, using standard upper- and lowercase printed letters.
- Letters can be formed in various ways (see wallet card on last page). Jot also recognizes most older Graffiti-based characters.
- To practice using Jot, tap the  **Jot** icon, then select **Tutorial**. Tap a letter to see how it's written, then try writing it yourself.

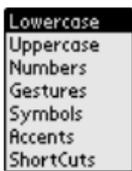

Tap here
for more
writing
tutorials

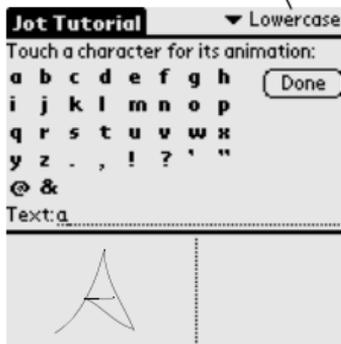


NOTE

To position the cursor for writing, tap once with the stylus.

To select several characters or a word, place the stylus at the beginning of the text and hold it in place until the watch “chirps.” Then drag the stylus to the right to highlight the selected text.

Tap, hold,
and drag to
select text

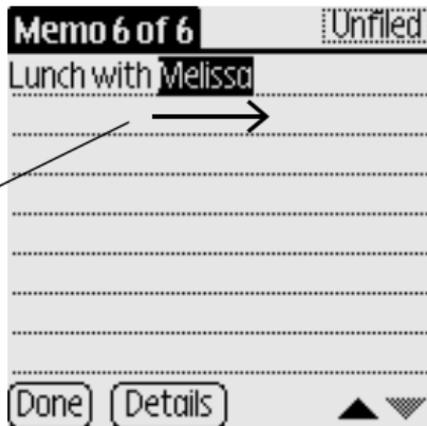


10 Entering a record on the watch

1. Press the **Back** button on the left side of the watch to display your applications.
2. Tap the  **Date Book** icon.
3. Enter an appointment.



11 Entering a record on the desktop

1. Double-click the  **Palm Desktop** icon on your computer's desktop to open the software.
2. Click the **Date** icon on the left.

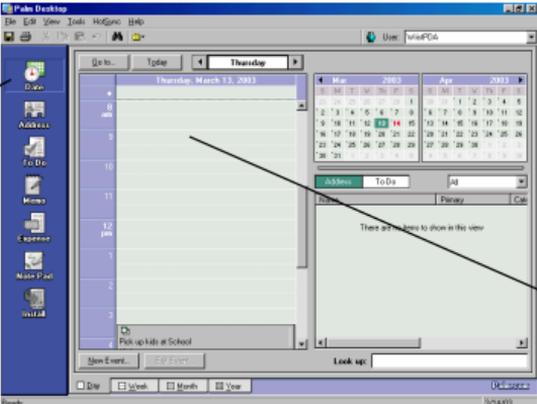

Click here to view Date Book

Select time and enter an appointment

3. Enter an appointment.

12 Synchronizing the watch with the desktop

HotSync operations synchronize data on your watch with data on your computer, so that information you enter appears in both places.

1. Connect your watch to the cable from the HotSync Pod (see page 12).
2. Make sure the HotSync Manager is running by checking for the  **HotSync Manager** icon in your computer's system tray (in the lower-right corner of your Windows desktop).

If you don't see the  icon, click **Start, Programs, Palm Desktop**, and select  **HotSync Manager**.

NOTE

If you want HotSync Manager to start automatically with Windows, click the HotSync Manager icon in your system tray and select **Setup**. On the **General** tab, select **Always available**, then click **OK**.

3. Press the **Back** button on the left side of your watch until the System category is displayed as shown.
4. Tap the  **HotSync** icon to open the application.

(You can also use the **Rocker switch** on the right side of the watch to highlight the application, then press in on the **Rocker switch** to open it.)


Select **System**



5. Once the HotSync application opens, tap the  **HotSync** icon as shown (or press enter with the **Rocker switch**). This starts the HotSync operation.

6. When performing a HotSync operation for the first time, you see a New User dialog box on your computer. Enter a name for your watch (for example, "Wrist PDA") and click **OK**.

7. Wait for a message on your watch that the process is complete.

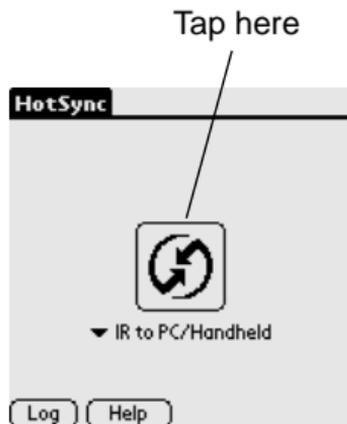

13 Getting more information

To learn more about using your watch, see the *Wrist PDA User Guide* in the Documents section of your installation CD.



Documents

For more information and to get the latest software updates, visit www.fossil.com or www.abacuswatches.com.

Installing third-party applications

In addition to your Wrist PDA's built-in applications, you can install many Palm OS® applications called add-on or third-party applications. There are thousands of such applications that perform many different functions.

For more information, please visit:

- <http://www.fossil.com/>
- <http://www.abacuswatches.com/>
- <http://www.palmgear.com/>
- <http://www.handango.com/>
- <http://www.palmbld.com/>

NOTE



Not all third-party applications can be run by every Palm OS® device. Make sure that the application you want to run is supported by Palm OS v4.1 and that you have enough internal RAM memory. Visit the web sites above to find lists of applications that are most likely to run correctly on the Wrist PDA.

If you have problems with a third-party application, contact the developer or publisher of the software for technical support. Third-party applications are not supported by Wrist PDA technical support.

Adjusting the wristband

If you have a metal wristband, you can adjust its size using the included wristband link removal tool.

1. Insert the tool as shown, pointing it the same direction as the arrows inscribed on the inside edge of the wristband.
2. Set the flat part of the tool on a table and press down on the edge of the band to eject the pin.
3. Repeat to remove the desired number of links.
4. Place the remaining links back together, inserting the pin the same way you took it out (the wider tip goes in last). Use the flat end of the tool to push it in fully.

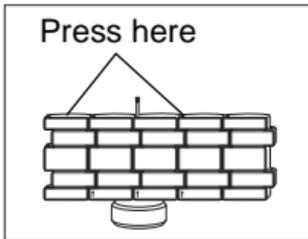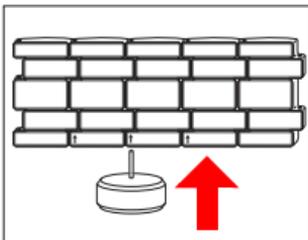

Customizing your Wrist PDA

You can use the Preferences screens to set a variety of options that customize how you use your Wrist PDA:

1. Make sure you're in PDA mode, then press the **Back** button on the left side of the watch to display your applications. Press the button several times until you see the ▼ **All** category in the upper-right corner.
2. Tap the  **Prefs** icon.
 - To change the time, select **Date & Time** from the menu in the upper-right.
 - To change the period of inactivity before your watch goes into sleep mode and displays the time: select **General** from the menu in the upper-right, then Change **Auto-Watch After** to the desired setting.

NOTE

Your Wrist PDA will display the time only if Watch Mode App is set to **Watch** on the **Wrist PDA** preferences screen.

- To change how long you have to press the **Rocker switch** to return to PDA mode when the time is displayed: select **Wrist PDA** from the menu in the upper-right, then change **Enter → PDA mode** to the desired setting.
- To change how long you have to press the **Back** button to turn on the backlight: on the Wrist PDA preferences screen, change **Back → Backlight** to the desired setting.
- To lock the watch face to keep it from being changed when you press the **Rocker switch**: on the Wrist PDA preferences screen, select **Lock Watch Face**.

FAQ and Troubleshooting

General Questions

Where can I find my Wrist PDA's warranty?

It is located on the Wrist PDA software installation CD.

Is my Wrist PDA waterproof or water-resistant?

No, your Wrist PDA is not water-resistant and you should never let it get wet or damp. Water can leak in and damage internal components. Always keep your Wrist PDA away from water or other liquids, much as you would any other Palm OS[®] device.

Battery Questions

How long does the battery last on my Wrist PDA?

The rechargeable battery on your Wrist PDA should last 4 days with an average of 30 minutes of PDA usage per day with no infrared port beaming and no backlight usage. This duration may vary depending on the amount of PDA usage, the temperature, and other factors.

Can I lose my data if the screen goes blank from not charging the battery?

After the screen goes blank, the watch should retain data for about one day. Beyond that time, you would have to synchronize your watch with your PC to restore data.

How can I maximize the battery life?

There are several settings you can change on your Wrist PDA to help extend battery life:

- In the Wrist PDA preferences, set the **Watch Mode App** to **None** instead of **Watch** (see page 30).
- In the General preferences, set **Auto-Watch After** to the lowest setting and set **Beam Receive** to **Off**.
- Limit use of the backlight.
- Limit use of the infrared port.
- Try not to use processor- and display-intensive applications such as games.

Operating Problems

I do not see anything on the Wrist PDA screen.

Your watch may be set to “sleep” with the screen off, or the batteries may need charging.

- Press and hold the **Rocker switch** for several seconds. If the display resumes, your **Watch Mode App** is set to **None**. You can change this setting on the Wrist PDA preferences screen (see page 30).
- Recharge your Wrist PDA. If your batteries are too low, the screen will turn off to conserve power.
- If the display does not come back on after charging is complete, try performing a soft reset as described in the next section.

How do I perform a soft reset?

If your watch stops responding to the stylus or control buttons, you may need to perform a soft reset. This does not affect any personal data stored on the watch. To perform the reset, gently insert the stylus into the hole labeled **Reset** on the back of the watch.

How do I perform a hard reset?

WARNING: *Performing a hard reset erases everything on your watch. All personal data, third-party applications, and records are deleted, and the watch is returned to its factory default settings.*

If possible, back up all personal data before performing a hard reset. Try resolving your problem first using a soft reset (see above).

To perform a hard reset, hold in on the **Rocker switch** and insert the stylus into the hole labeled **Reset** on the back on the watch. When the Palm Powered™ logo appears on the display, release the **Rocker switch**. When prompted, press the **Page Up** button to complete the reset, or press any other button to cancel.

HotSync Problems

I tried to perform a HotSync operation, but nothing happens.

- You must have the Wrist PDA USB drivers, Palm™ Desktop software, and HotSync Manager installed on your computer. See page 6.
- You must be using Windows 98SE, Windows Me, Windows 2000, or Windows XP.

- Check to make sure that the HotSync Manager is running. See page 23.
- If you are using a USB hub, connect the Wrist PDA directly to your computer's USB port (not into the hub).

I unplugged the HotSync Pod from the USB port and now HotSync Manager is not responding.

Restart Windows to resume normal operation.

To prevent this from happening again, always exit HotSync Manager before disconnecting the HotSync Pod from your computer. To exit HotSync Manager, click the the  **HotSync Manager** icon and select **Exit**. This lets you unplug the HotSync Pod safely.

Wrist PDA Specifications

- Palm OS® 4.1
- Motorola® DragonBall™ VZ 33MHz processor
- 2MB flash ROM memory + 2MB RAM memory
- LCD touch screen with 160 × 160 resolution and 16-level grayscale display
- Backlight for viewing in low light conditions
- USB interface
- Infrared port supports IRDA v1.2a communication with other Palm OS® devices
- Internal lithium-ion rechargeable battery (lasts approx. 4 days between charges, based on 30 minutes' PDA usage per day with no IR beaming or backlight usage)
- Non-waterproof/non-water-resistant case

System Requirements

Make sure your computer meets these requirements before installing your Palm™ Desktop software:

- Windows 98 Second Edition, Millennium Edition (Me), 2000 Professional, XP Home Edition, XP Professional (not supported: Apple® Macintosh® systems; Windows 3.1, 95, 98 First Edition, and NT® 4.0)
- Pentium 233MHz with MMX™ technology (Pentium III 450MHz or better recommended)
- 64MB RAM (at least 128MB for Windows XP)
- 800 × 600 display resolution with 16-bit color or better
- 150MB or more free hard disk space
- CD-ROM drive
- USB port (use of a USB hub not recommended)

End User License Agreement

This Agreement is between you, the end user ("Licensee" or "you"), and Fossil, Inc. ("Fossil"). BY INSTALLING, COPYING, OR OTHERWISE USING THE SOFTWARE, YOU ARE AGREEING TO THE TERMS OF THIS AGREEMENT, WHICH INCLUDES A SOFTWARE LICENSE AND A SOFTWARE DISCLAIMER OF WARRANTY (collectively, the "Agreement").

THIS AGREEMENT CONSTITUTES THE COMPLETE AGREEMENT BETWEEN YOU AND FOSSIL. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE ENTIRE PRODUCT TO THE PLACE WHERE YOU OBTAINED IT FOR A FULL REFUND.

LICENSE: In consideration of payment of the License Fee, which is a part of the price you paid for this product, Fossil, as Licensor, grants to you, the Licensee, a limited, nonexclusive right to use the Palm Source Software accompanying the Licensor Product (hereinafter the "Software") you purchased, subject to the terms and restrictions set forth in this Agreement. The Software includes the Palm Source Licensor Product Desktop Software and the Palm Source Licensor Product Platform Software.

As the Licensee, you own the Licensor Product, but Fossil retains title and ownership of the Software, regardless of the form or media in or on which the original or other copies may exist. This License is not a sale of the original Software or any copy. This Agreement does not grant you, the Licensee, any rights (whether by license, ownership or otherwise) in or to intellectual property with respect to the Software and all rights not expressly granted herein are reserved to Licensor and its suppliers.

You may use one exact copy of the Palm Source Licensor Product Platform Software only in connection with the Licensor Product. With respect to the Palm Source Licensor Product Desktop Software, you may reproduce and provide one (1) copy of such software on each personal computer or Licensor Product on which such software is used as permitted hereunder. Otherwise, the Software may be copied only as essential for backup or archive purposes in support of your use of the Software. You must reproduce and include all copyright notices and any other proprietary rights notices appearing on the Software on any copies that you make. All rights not expressly granted to you by this License are reserved by Fossil.

NO ASSIGNMENT: You may assign your right under this Agreement to an assignee of all of your rights and interest to the Software only if you transfer all copies of the Software subject to the Agreement to such assignee and such assignee agrees in writing to be bound by all the terms and conditions of this Agreement. If you transfer the Software, you must

at the same time either transfer all copies of the Software as well as the supporting documentation to the same party or destroy any such materials not transferred.

OTHER RESTRICTIONS: You acknowledge that the Software contains valuable trade secrets of Licensor and its suppliers. Accordingly, you agree not to (a) modify, adapt, alter, translate, or create derivative works from, (b) merge with other software or materials, (c) distribute, sublicense, lease, rent loan, or otherwise transfer to third parties, or (d) reverse engineer, decompile, disassemble or otherwise attempt to derive the source code of the Software. You agree not to copy this Software except as necessary to use it in accordance with this Agreement, and agree that any such copies of the Software shall contain the same proprietary notices which appear on and in the original copy of the Software. You may be held legally responsible for any copyright infringement that is caused by your failure to abide by the terms of this License. Further, to the extent that laws in your jurisdiction give you the right, despite contractual restrictions, to reverse engineer the Software to obtain information necessary to enable the Software to interoperate with other software, the restriction in clause (d) shall not apply, provided that the you must first notify Licensor of its desire to reverse engineer the software and Licensor and its suppliers, may, in their discretion, either provide such information to you or impose such reasonable terms and conditions to ensure that Licensor and its suppliers' rights are protected. Specifically, if you are a European Union ("EU") resident, information necessary to

achieve interoperability of the Software with other programs within the meaning of the EU Directive on the Legal Protection of Computer Programs is available to you upon request.

TERM AND TERMINATION: This License is effective until terminated. You may terminate it at any time by destroying the Software and documentation together with all copies and merged portions in any form. This License will also terminate automatically without notice from Fossil if you fail to comply with any provision of this License. Upon termination, you shall destroy all copies of the Software.

GOVERNING LAW: This Agreement is governed by the laws of the State of Texas and by the laws of the United States, excluding their conflicts of laws principles. The United Nations Convention on Contracts for the International Sale of Goods (1980) is hereby excluded in its entirety from application to this Agreement.

NO OTHER WARRANTIES: THE SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND AND FOSSIL EXPRESSLY DISCLAIMS ALL WARRANTIES, TERMS OR CONDITIONS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, SATISFACTORY QUALITY, TITLE, AND NONINFRINGEMENT. FURTHER, FOSSIL DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE, OR THE RESULTS OF THE USE, OF THE

SOFTWARE IN TERMS OF CORRECTNESS, RELIABILITY OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SOFTWARE IS ASSUMED BY YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

EXPORT RESTRICTIONS: You agree that you will not export or re-export the Software or accompanying documentation (or any copies thereof) or any products utilizing the Software or any such documentation in violation of any applicable laws or regulations of the United States or the country in which you obtained them.

THIRD PARTY BENEFICIARY: PalmSource is an express third party beneficiary of this Agreement.

LIMITATION OF LIABILITY: FOSSIL SHALL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR PUNITIVE DAMAGES OR LIABILITIES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL THEORY RELATED TO THIS PRODUCT. SUCH DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF BUSINESS, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWN TIME AND PURCHASER'S TIME EVEN IF LICENSOR OR ANY OF ITS REPRESENTATIVES HAVE BEEN

ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED REMEDY SPECIFIED IN THIS AGREEMENT IS DEEMED TO HAVE FAILED OF ITS ESSENTIAL PURPOSE. FOSSIL'S ENTIRE LIABILITY UNDER THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU ALLOCABLE TO THE SOFTWARE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

SEVERABILITY: In the event any provision of this Agreement is found to be invalid, illegal, or unenforceable, the validity, legality and enforceability of any of the remaining provisions shall not in any way be affected or impaired.

ENTIRE AGREEMENT: This Agreement and the accompanying Limited Warranty set forth the entire agreement between you and Fossil, supersedes all prior agreements, whether written or oral, with respect to the Software, and may be amended only in a writing signed by both parties.

Fossil, Inc.
2280 N. Greenville Avenue
Richardson, Texas 75082
United States of America

www.fossil.com

For a handy reference on forming Jot characters and special symbols, you can cut out the card below and keep it in your wallet.

WRIST 
with PALM OS®

a	α α AΛ	l	l L	w	W	double quote	⌞ ⌞
b	b b B B	m	m m	x	'X'	tab	⌞
c	C	n	n N N	y	y y	space	—
d	d d D D	o	o o	z	Z z	backspace	—
e	ε ε	p	p P	period	· or *	new line	/
f	f f f	q	q q q	comma	,	cut	✂
g	g g G G	r	r R R	apostrophe	'	copy	⌞
h	h h H	s	S	question	'?	paste	✂
i	i i	t	t	exclamation	!	undo	⌞
j	j i j J J	u	u U	ampersand	& &	command	/
k	'K'	v	v v	at	@	shortcut	⌞

WRIST PDA™

with PALM OS®

0	○ ○	6	6	dash	—	()
1		7	7	tilde	~))
2	2 2	8	8 8	+	+	=	=
3	3	9	9 9	*	'X'	backspace	—
4	'4' 4 4	period	· or *	/	/		
5	5 '5'	comma	—	\	\		

Write numbers and the following symbols to the right of the division marks.

Accent	Strokes	Example	Accent	Strokes	Example
` grave	\	à	~ tilde	N	ã
´ acute	/	á	¨ diaeresis	// or \\ or ..	ä
ˆ circumflex	^	â	° ring	○	â

Write accent marks to the right of the division marks after writing an upper or lower case letter.