

## Lil Sew-n-Sew LSS-202 Trouble Shooting

Occasionally, the bobbin case may become loose and move freely within the throat of the machine, or it may pop out. This can be remedied by re-aligning the bobbin as shown in Image 1, which is the correct position. Image 2 shows an incorrect position of the bobbin, popped out. The repositioning of the bobbin can be done by hand by turning it and gently shaking back and forth. If the bobbin is stuck and you are not able to turn it or reposition it by hand, a screwdriver can be used gently to lift it in order to reposition correctly and place the black knob to the left side of the white plastic edge as shown in Image 3. Please be careful to gently lift the plastic edge with the screwdriver, applying too much pressure can make the plastic edge break.

Image1: **Correct position** of the bobbin case. Black knob is on the left side of the white plastic edge and the bobbin is flat in the bobbin throat.

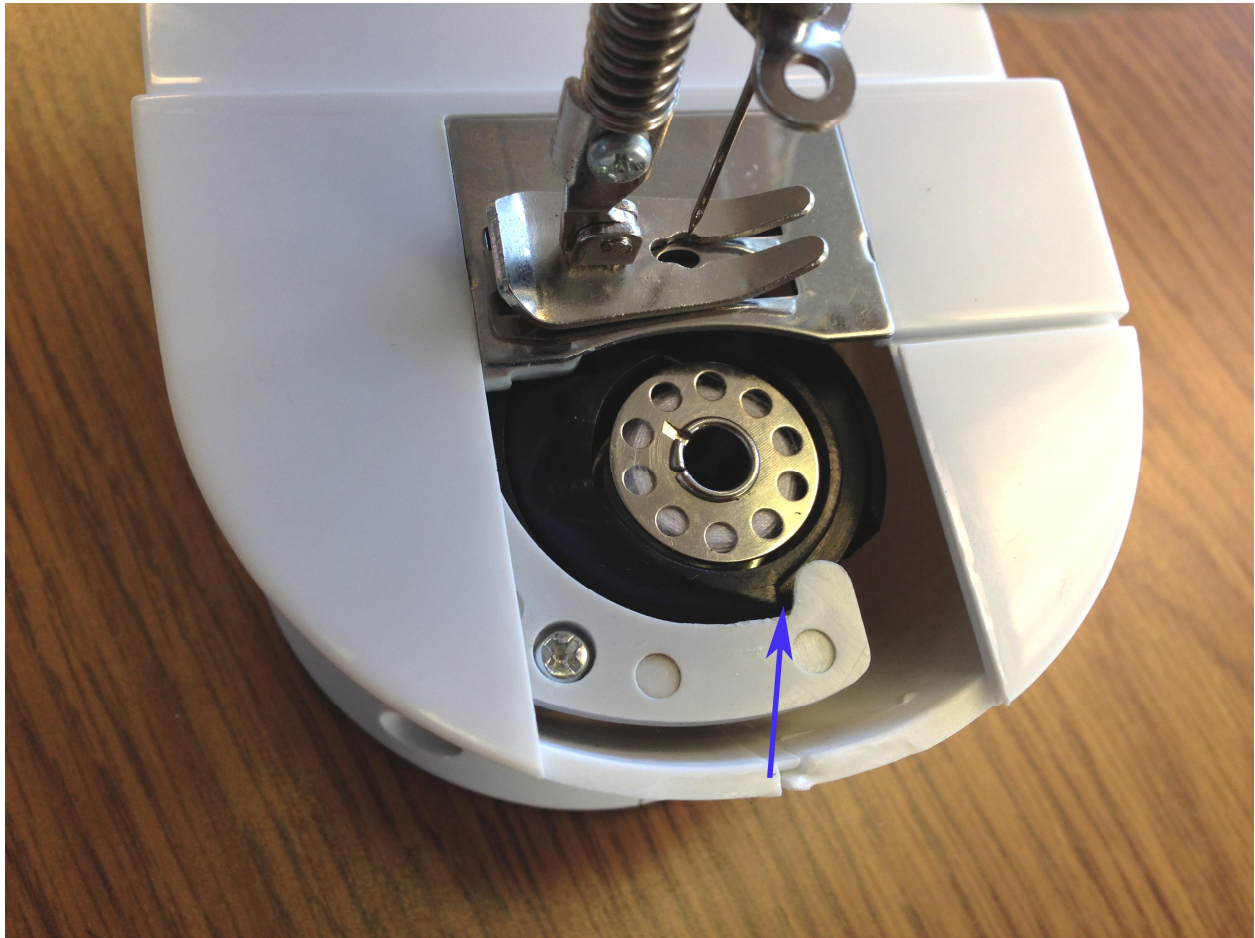


Image2: Incorrect position of the bobbin case. The bobbin has popped out of the throat of the machine.



Image3: Lifting the plastic edge to allow room to reposition the bobbin. Use caution to not break the plastic edge. The screw in the image can be loosened to allow for more leverage.

