 


Rowenta

FIRST CLASS - TRAVEL IRON

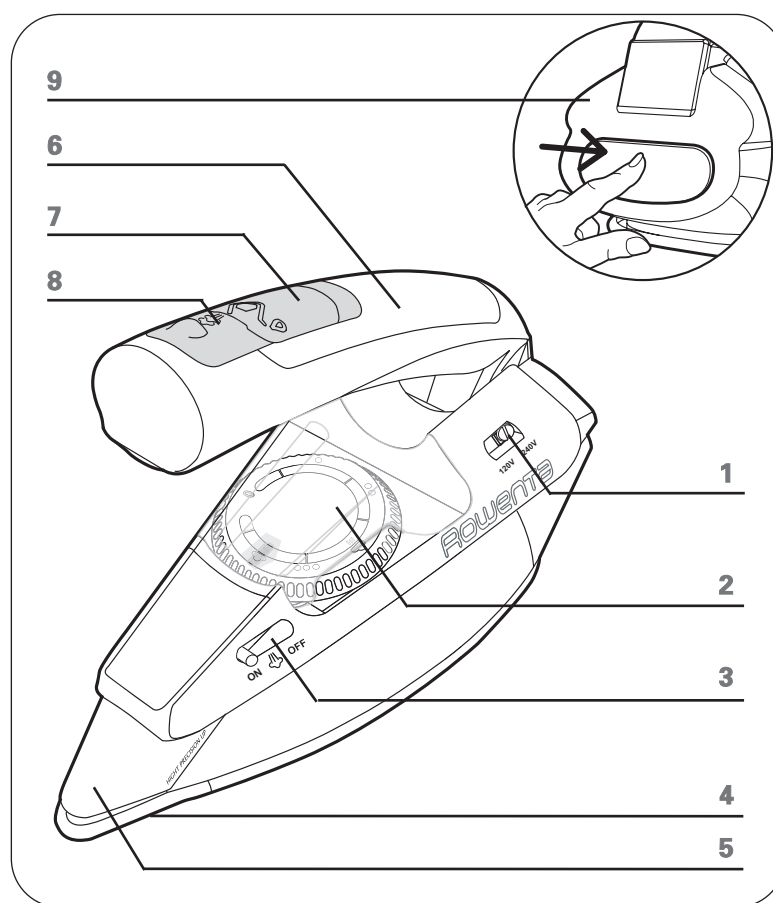

ref. 1103903537

www.rowenta.com

IMPORTANT SAFETY INSTRUCTIONS

When using your flatiron, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use iron only for its intended use.
2. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
3. The iron should always be turned to "Off" before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
5. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
6. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
9. If the malfunction indicator goes on, the flatiron is not operating normally. Disconnect from the power supply and have the flatiron serviced by qualified service personnel.
10. For use in North America, the voltage selector switch should be placed in the 120-volt position. For use in several countries overseas, the voltage selector switch may need to be placed in the 240-volt position. Confirm the voltage available at each overseas location before using the flatiron. For connection to a 240-volt supply, use a suitable attachment plug adapter of the proper configuration for the power supply receptacle.
11. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage operation contained in the instruction section of this manual.
12. This appliance was set at the factory to operate at 120 volt. Refer to the Operating Instructions section of this manual for conversion to 240 volt operation.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS

ENVIRONMENTAL PROTECTION FIRST!

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➡ When disposing of it, take it to a collection point or an approved service center.



DESCRIPTION


- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Voltage selector (120/240 V) 2. Temperature control 3. Steam switch 4. Microsteam 200 soleplate | <ol style="list-style-type: none"> 5. High precision tip 6. Folding handle 7. Water filling inlet 8. Burst of steam button 9. Handle release |
|---|---|

BEFORE IRONING

Remove the sticker on the soleplate or the protector soleplate*.

Adjust the voltage selector.

 - Adjust the iron to correct voltage for your location, using a sharp object. If the voltage selected is 120 V, the iron will operate at 100 to 120 V. If it is set at 240 V, the iron will operate at 200 to 240 V.

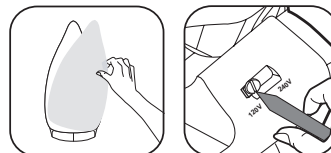


Note!

If necessary, check that you are using an adapter which meets the safety requirements of the country you are in.

Put the handle into the ironing position.

 - Press the release button on the rear side and raise the handle until it locks into position.
- For storing press release button again to close the handle.

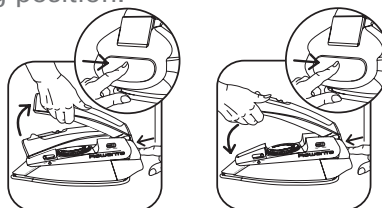

STEAM IRONING

Filling the water tank



Note !

Your iron has been designed to operate using untreated tap water.

 
Important: Heat concentrates the elements contained in water during evaporation. The types of water listed below may contain organic waste, or chemical elements that can cause spitting, brown staining, or premature wear of the appliance :

**Depending on the model: these accessories are specific to certain models or available as an option.*

water from clothes dryers, scented or softened water, water from refrigerators, batteries, air conditioners, rain water, boiled, filtered or bottled water.

Important : Before filling the water tank, unplug the iron .
The steam selector should be switched into the "OFF" position.
Do not hold the iron under the tap while filling.


Setting the temperature

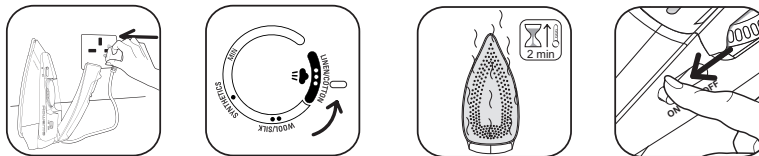

Your iron will only produce steam when the control is set within the coloured zone and the steam switch is in the on position.

USING BURST OF STEAM AND VERTICAL STEAM

 
To remove stubborn wrinkles and creases vertically.

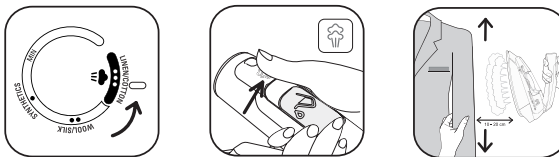

Hold down the burst of steam button and place the iron a few inches away from the garment to avoid burning delicate fabrics.


IMPORTANT Never direct the steam at people or animals !

 To remove stubborn wrinkles and creases.

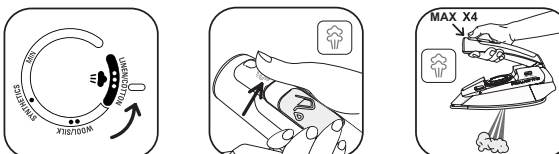

Steam ironing	Steam control set to ON OFF	Temperature set to ...	Fabric selected: Cotton Linen	Push burst of steam button.
------------------	-----------------------------------	------------------------------	--	--------------------------------

 DRY IRONING



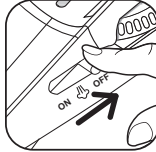


Dry ironing	Steam control set to 	Temperature set to	Fabric selected: Silk, Synthetics Wool	Burst of steam Temperature at setting ...
-------------	---	--------------------------------------	--	---

Our advice :



With the iron in DRY mode, start by ironing fabrics at a low temperature (.) before moving on to those requiring a higher temperature (...).

   If you turn the temperature control down, wait for approximately one minute for the temperature to adjust before ironing again. If you are ironing fabrics made from mixed fibers : set the iron temperature to the correct level for the most delicate fibers.

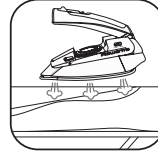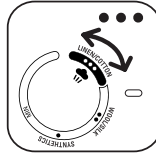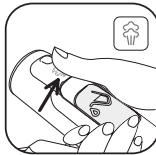

MAINTENANCE AND STORING OF YOUR IRON



 
 
Cleaning your iron.

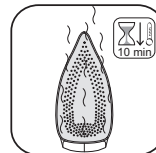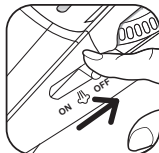

Important : Do not use sharp or abrasive cleaning agents or objects to clean soleplate or other parts of the iron.

Do not use any cleaning or descaling products.
Never hold the iron under a running tap.
Always empty the water tank when you have finished ironing.

    Storing your iron

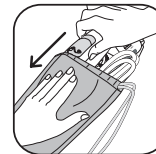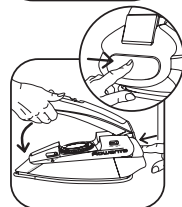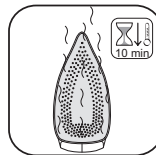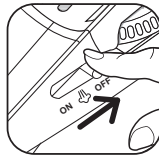

Turn steam switch to off position. Unplug iron from electrical outlet.
Make sure the iron is cold before storing it.

IMPORTANT Do not wind the cord around the hot soleplate.
Never store your iron placed down onto the soleplate.

Problems and possible causes	Solutions
Your iron produces little or no steam	
- The temperature selected is too low. - The steam control is set on OFF. - There is no water in the tank.	Set the temperature control to ... Switch the steam control to ON. Fill the water tank.
Water is dripping from the holes in the soleplate	
- You have been using the burst of steam button too often. - Steam is used before the iron is hot enough. - The iron is stored with water in the tank.	Wait a few seconds between each burst. Set the thermostat within the colored steam zone and wait until the iron is hot (approx. 2 min.) Empty the tank before storing the iron and set the steam control to OFF.
The problem persists.	Take your iron to an Approved Service Center.

In the interest of improving products, Rowenta reserves the right to change specifications without prior notice.

LIMITED WARRANTY

This Rowenta product is warranted for 1 year from date of purchase against defects in material and workmanship. During this period, any Rowenta product that, upon inspection by Rowenta, is proved defective, will be repaired or replaced, at Rowenta's option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product. This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow Rowenta's instructions, use on current or voltage other than that stamped on the product, or alteration or repair not authorized by Rowenta. Repair or disassembly by anyone other than a Rowenta authorized service center will void the warranty.

THE WARRANTIES SET FORTH HEREIN ARE EXCLUSIVE AND NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, ARE MADE BY ROWENTA OR ARE AUTHORIZED TO BE MADE WITH RESPECT TO THE PRODUCT. Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

If you believe your product is defective, bring the product (or send it, postage prepaid) along with proof of purchase to the nearest authorized Rowenta Service Center (see below). If you send the product, please include a letter explaining the nature of the claimed defect.

CORRESPONDENCE CAN BE SENT TO:

Groupe SEB USA
2121 Eden Road
Millville, NJ 08332, USA
Tel: 1-800-526-5377
www.rowentausa.com

OFFICE LOCATION ONLY. Letters will be accepted at this address and packages without a return authorization number will be refused or forwarded to a service center. To service product see service center information below.

SERVICE CENTER INFORMATION:

If your appliance needs service, ship the product to your nearest regional service center. Be sure to put your name on the outside of the shipping box (no P.O. boxes please), include a brief note describing the issue, and include a copy of the sales receipt if the product is in warranty. If in warranty, Rowenta will repair or replace the product at their discretion. If the product is out of warranty, you will be advised of the cost of repair before any work begins.

Turnpike Appliance
3495A Lawson Blvd.
Oceanside, NY 11572
516-483-5596

Authorized Appliance
1644 West Ogden Ave.
Downers Grove, IL 60515
630-852-1550

California Electric
1170G Burnett Ave.
Concord, CA 94520
925-827-1011

SERVICE CENTER INFORMATION IS SUBJECT TO CHANGE. Please visit our website at www.rowentausa.com or call 781-396-0600 for automated service center information.