



CASIO COMPUTER CO., LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

CASIO.

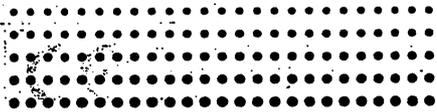


fx-82TL
fx-83WA
fx-85W
fx-85WA
fx-270W PLUS
fx-300W
fx-350TL
fx-911W
User's Guide

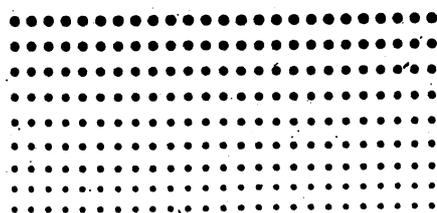


CASIO COMPUTER CO., LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

CASIO.

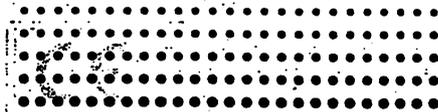

fx-82TL
fx-83WA
fx-85W
fx-85WA
fx-270W PLUS
fx-300W
fx-350TL
fx-911W
User's Guide

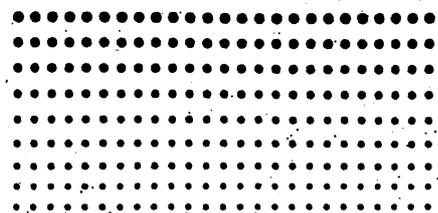

Removing and Replacing the Calculator's Cover


• To Remove the cover

Grasp the top of the cover, and slide the unit out from the bottom.

• To Replace the cover

Grasp the top of the cover, and slide the unit in from the bottom.

Always slide the unit into the cover with the unit's display end first. Never slide the keyboard end of the unit into the cover.

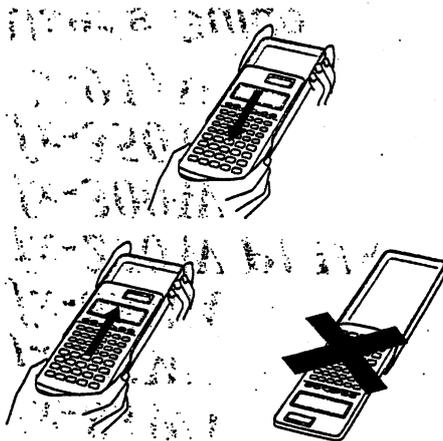

CE CASIO ELECTRONICS CO., LTD.
Unit 6, 1000 North Circular Road,
London NW2 7JD, U.K.

Removing and Replacing the Calculator's Cover


• To Remove the cover

Grasp the top of the cover, and slide the unit out from the bottom.

• To Replace the cover

Grasp the top of the cover, and slide the unit in from the bottom.

Always slide the unit into the cover with the unit's display end first. Never slide the keyboard end of the unit into the cover.

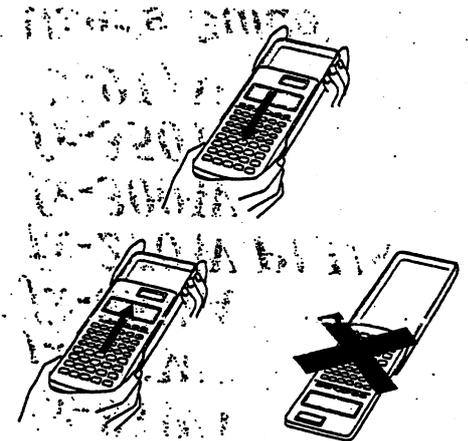

CE CASIO ELECTRONICS CO., LTD.
Unit 6, 1000 North Circular Road,
London NW2 7JD, U.K.

Safety Precautions

Be sure to read the following safety precautions before using this calculator. Keep this manual handy for later reference.

⚠ Caution

This symbol is used to indicate information that can result in personal injury or material damage if ignored.

Batteries

- After removing the batteries from the calculator, put them in a safe place where there is no danger of them getting into the hands of small children and accidentally swallowed.
- Keep batteries out of the reach of small children. If accidentally swallowed, consult with a physician immediately.
- Never charge batteries, try to take batteries apart, or allow batteries to become shorted. Never expose batteries to direct heat or dispose of them by incineration.
- Misuse of batteries can cause them to leak acid that can cause damage to nearby items and creates the possibility of fire and personal injury.
- Always make sure that a battery's positive ⊕ and negative ⊖ sides are facing correctly when you load it into the calculator.
- Remove the batteries if you do not plan to use the calculator for a long time.
- Use only the type of batteries specified for this calculator in this manual.

Disposing of the Calculator

- Never dispose of the calculator by burning it. Doing so can cause certain components to suddenly burst, creating the danger of fire and personal injury.

Safety Precautions

Be sure to read the following safety precautions before using this calculator. Keep this manual handy for later reference.

⚠ Caution

This symbol is used to indicate information that can result in personal injury or material damage if ignored.

Batteries

- After removing the batteries from the calculator, put them in a safe place where there is no danger of them getting into the hands of small children and accidentally swallowed.
- Keep batteries out of the reach of small children. If accidentally swallowed, consult with a physician immediately.
- Never charge batteries, try to take batteries apart, or allow batteries to become shorted. Never expose batteries to direct heat or dispose of them by incineration.
- Misuse of batteries can cause them to leak acid that can cause damage to nearby items and creates the possibility of fire and personal injury.
- Always make sure that a battery's positive ⊕ and negative ⊖ sides are facing correctly when you load it into the calculator.
- Remove the batteries if you do not plan to use the calculator for a long time.
- Use only the type of batteries specified for this calculator in this manual.

Disposing of the Calculator

- Never dispose of the calculator by burning it. Doing so can cause certain components to suddenly burst, creating the danger of fire and personal injury.

- The displays and illustrations (such as key markings) shown in this User's Guide are for illustrative purposes only, and may differ somewhat from the actual items they represent.
- The contents of this manual are subject to change without notice.
- In no event shall CASIO Computer Co., Ltd. be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials. Moreover, CASIO Computer Co., Ltd. shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

- The displays and illustrations (such as key markings) shown in this User's Guide are for illustrative purposes only, and may differ somewhat from the actual items they represent.
- The contents of this manual are subject to change without notice.
- In no event shall CASIO Computer Co., Ltd. be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials. Moreover, CASIO Computer Co., Ltd. shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

Handling Precautions

- Be sure to press the P button on the back of the calculator (step ⑥ on page 29 or 30) before using it for the first time (fx-82TL/fx-83WA/fx-270W PLUS/fx-350TL).
- Be sure to press the **ON** key before using the calculator for the first time (fx-85W/fx-85WA/fx-300W/fx-911W).
- Even if the calculator is operating normally, replace the battery at least once every three years for the fx-83WA/fx-85W/fx-85WA/fx-270W PLUS/fx-300W/fx-350TL/fx-911W, or at least once every two years for the fx-82TL.
Dead battery can leak, causing damage to and malfunction of the calculator. Never leave the dead battery in the calculator.
- The battery that comes with the calculator when you purchase it is for testing only. It may not provide full service life.
- Low battery power can cause memory contents to become corrupted or lost completely. Always keep written records of all important data.

•2•

Handling Precautions

- Be sure to press the P button on the back of the calculator (step ⑥ on page 29 or 30) before using it for the first time (fx-82TL/fx-83WA/fx-270W PLUS/fx-350TL).
- Be sure to press the **ON** key before using the calculator for the first time (fx-85W/fx-85WA/fx-300W/fx-911W).
- Even if the calculator is operating normally, replace the battery at least once every three years for the fx-83WA/fx-85W/fx-85WA/fx-270W PLUS/fx-300W/fx-350TL/fx-911W, or at least once every two years for the fx-82TL.
Dead battery can leak, causing damage to and malfunction of the calculator. Never leave the dead battery in the calculator.
- The battery that comes with the calculator when you purchase it is for testing only. It may not provide full service life.
- Low battery power can cause memory contents to become corrupted or lost completely. Always keep written records of all important data.

•2•

- Avoid use and storage in areas subjected to temperature extremes.
Very low temperatures can cause slow display response, total failure of the display, and shortening of battery life. Also avoid leaving the calculator in direct sunlight, near a window, near a heater or anywhere else it might become exposed to very high temperatures. Heat can cause discoloration or deformation of the calculator's case, and damage to internal circuitry.
- Avoid use and storage in areas subjected to large amounts of humidity and dust.
Take care never to leave the calculator where it might be splashed by water or exposed to large amounts of humidity or dust. Such elements can damage internal circuitry.
- Never drop the calculator or otherwise subject it to strong impact.
- Never twist or bend the calculator.
Avoid carrying the calculator in the pocket of your trousers or other tight-fitting clothing where it might be subjected to twisting or bending.
- Never try to take the calculator apart.
- Never press the keys of the calculator with a ball-point pen or other pointed object.
- Use a soft, dry cloth to clean the exterior of the unit. If the calculator becomes very dirty, wipe it off with a cloth moistened in a weak solution of water and a mild neutral household detergent. Wring out all excess moisture before wiping the calculator. Never use thinner, benzene or other volatile agents to clean the calculator. Doing so can remove printed markings and damage the case.

•3•

- Avoid use and storage in areas subjected to temperature extremes.
Very low temperatures can cause slow display response, total failure of the display, and shortening of battery life. Also avoid leaving the calculator in direct sunlight, near a window, near a heater or anywhere else it might become exposed to very high temperatures. Heat can cause discoloration or deformation of the calculator's case, and damage to internal circuitry.
- Avoid use and storage in areas subjected to large amounts of humidity and dust.
Take care never to leave the calculator where it might be splashed by water or exposed to large amounts of humidity or dust. Such elements can damage internal circuitry.
- Never drop the calculator or otherwise subject it to strong impact.
- Never twist or bend the calculator.
Avoid carrying the calculator in the pocket of your trousers or other tight-fitting clothing where it might be subjected to twisting or bending.
- Never try to take the calculator apart.
- Never press the keys of the calculator with a ball-point pen or other pointed object.
- Use a soft, dry cloth to clean the exterior of the unit. If the calculator becomes very dirty, wipe it off with a cloth moistened in a weak solution of water and a mild neutral household detergent. Wring out all excess moisture before wiping the calculator. Never use thinner, benzene or other volatile agents to clean the calculator. Doing so can remove printed markings and damage the case.

•3•

Contents

Safety Precautions	1
Handling Precautions	2
Two-line Display	5
Key Layout	6
Before Starting Calculations.....	8
■ Modes	8
■ Input Capacity	9
■ Making Corrections During Input	9
■ Replay Function	9
■ Error Locator	9
■ Exponential Display Formats	10
■ Answer Memory	10
Basic Calculations	11
Memory Calculations	11
■ Independent Memory	11
■ Variables	11
Fraction Calculations	12
■ Fraction Calculations	12
■ Decimal-to-Fraction Conversion	12
■ Fraction-to-Decimal Conversion	12
Percentage Calculations	13
Scientific Function Calculations	14
■ Trigonometric/Inverse Trigonometric Functions	14
■ Hyperbolic/Inverse Hyperbolic Functions	15
■ Angle Unit Conversion	15
■ Common and Natural Logarithms/ Antilogarithms	15
■ Square Roots, Cube Roots, Roots, Squares, Cubes, Reciprocals, Factorials, Random Numbers and π	16
■ FIX, SCI, RND	16
■ ENG Calculations	17
■ Coordinate Conversion (Pol(x, y), Rec (r, θ))	18

•4•

■ Permutation	18
■ Combination	18
Statistical Calculations	19
■ Standard Deviation (SD Mode)	19
■ Regression Calculations (REG Mode)	20
Formula Memory (fx-85W)	23
Base- n Calculations (fx-85W)	23
Degrees, Minutes, Seconds Calculations	25
Technical Information	25
■ When you have a problem.....	25
■ Error Messages	26
■ Order of Operations	27
■ Stacks	27
■ Power Supply	28
■ Input Ranges	31
Specifications	33

Two-line Display

5x3+2sin 60
16.73205081

You can simultaneously check the calculation formula and its answer.

The first line displays the calculation formula.
The second line displays the answer.

•5•

Contents

Safety Precautions	1
Handling Precautions	2
Two-line Display	5
Key Layout	6
Before Starting Calculations.....	8
■ Modes	8
■ Input Capacity	9
■ Making Corrections During Input	9
■ Replay Function	9
■ Error Locator	9
■ Exponential Display Formats	10
■ Answer Memory	10
Basic Calculations	11
Memory Calculations	11
■ Independent Memory	11
■ Variables	11
Fraction Calculations	12
■ Fraction Calculations	12
■ Decimal-to-Fraction Conversion	12
■ Fraction-to-Decimal Conversion	12
Percentage Calculations	13
Scientific Function Calculations	14
■ Trigonometric/Inverse Trigonometric Functions	14
■ Hyperbolic/Inverse Hyperbolic Functions	15
■ Angle Unit Conversion	15
■ Common and Natural Logarithms/ Antilogarithms	15
■ Square Roots, Cube Roots, Roots, Squares, Cubes, Reciprocals, Factorials, Random Numbers and π	16
■ FIX, SCI, RND	16
■ ENG Calculations	17
■ Coordinate Conversion (Pol(x, y), Rec (r, θ))	18

•4•

■ Permutation	18
■ Combination	18
Statistical Calculations	19
■ Standard Deviation (SD Mode)	19
■ Regression Calculations (REG Mode)	20
Formula Memory (fx-85W)	23
Base- n Calculations (fx-85W)	23
Degrees, Minutes, Seconds Calculations	25
Technical Information	25
■ When you have a problem.....	25
■ Error Messages	26
■ Order of Operations	27
■ Stacks	27
■ Power Supply	28
■ Input Ranges	31
Specifications	33

Two-line Display

5x3+2sin 60
16.73205081

You can simultaneously check the calculation formula and its answer.

The first line displays the calculation formula.
The second line displays the answer.

•5•

Key Layout

< fx-82TL / fx-83WA / fx-270W PLUS / fx-350TL >

Page	SHIFT	12 ALPHA	9 REPLAY	MODE	OFF
Page	16 $\frac{d}{dx}$	18 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	16 $\frac{d}{dx}$
Page	16 $\frac{d}{dx}$	12 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	17 ENG	12 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	11 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	15 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	20 STO	20 RCL	11 ()	20 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	19 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	20 7	20 8	20 9	9 DEL	11 19 AC/ON
Page	20 4	20 5	20 6	9 X	9 $\frac{d}{dx}$
Page	19 1	19 2	19 3	20 +	20 -
Page	17 0	16 .	16 EXP	15 Ans	13 =
Page			11	10	

fx-85WA/fx-300W/fx-911W:



Key Layout

< fx-82TL / fx-83WA / fx-270W PLUS / fx-350TL >

Page	SHIFT	12 ALPHA	9 REPLAY	MODE	OFF
Page	16 $\frac{d}{dx}$	18 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	16 $\frac{d}{dx}$
Page	16 $\frac{d}{dx}$	18 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	17 ENG	12 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	11 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	15 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	20 STO	20 RCL	11 ()	20 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	19 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	20 7	20 8	20 9	9 DEL	11 19 AC/ON
Page	20 4	20 5	20 6	9 X	9 $\frac{d}{dx}$
Page	19 1	19 2	19 3	20 +	20 -
Page	17 0	16 .	16 EXP	15 Ans	13 =
Page			11	10	

fx-85WA/fx-300W/fx-911W:



< fx-85W >

Page	SHIFT	12 ALPHA	9 REPLAY	MODE	2 ON
Page	23 CALC	18 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	16 $\frac{d}{dx}$
Page	23 CALC	16 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	17 ENG	12 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	11 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	15 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	20 STO	20 RCL	11 ()	20 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	19 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	20 7	20 8	20 9	9 DEL	11 19 AC
Page	20 4	20 5	20 6	9 X	9 $\frac{d}{dx}$
Page	19 1	19 2	19 3	20 +	20 -
Page	17 0	16 .	16 EXP	15 Ans	13 =
Page			11	10	

< fx-85W >

Page	SHIFT	12 ALPHA	9 REPLAY	MODE	2 ON
Page	23 CALC	18 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	16 $\frac{d}{dx}$
Page	23 CALC	16 $\frac{d}{dx}$	18 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	17 ENG	12 $\frac{d}{dx}$	16 $\frac{d}{dx}$	15 $\frac{d}{dx}$	15 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	11 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	25 $\frac{d}{dx}$	15 $\frac{d}{dx}$	14 $\frac{d}{dx}$	14 $\frac{d}{dx}$
Page	20 STO	20 RCL	11 ()	20 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	11 $\frac{d}{dx}$	19 $\frac{d}{dx}$	11 $\frac{d}{dx}$
Page	20 7	20 8	20 9	9 DEL	11 19 AC
Page	20 4	20 5	20 6	9 X	9 $\frac{d}{dx}$
Page	19 1	19 2	19 3	20 +	20 -
Page	17 0	16 .	16 EXP	15 Ans	13 =
Page			11	10	

Before Starting Calculations...

■ Modes

Application	Mode Name	Mode Indicator
Calculation Modes		
Normal calculations	COMP	—
Standard deviation calculations	SD	SD
Regression calculations	REG	REG
Base- <i>n</i> calculations (fx-85W only)	BASE-N	b (binary) o (octal) d (decimal) H (hexadecimal)
Angle Unit Modes		
Degrees	DEG	D
Radians	RAD	R
Grads	GRA	G
Display Modes		
Exponential notation (Canceling FIX and SCI specification)	NORM1 NORM2	— —
Number of decimal place specification	FIX	Fix
Number of significant digit specification	SCI	Sci

Note!

- Mode indicators appear in the lower part of the display, except for the Base-*n* indicators which appear in the exponent part of the display.
- You cannot set the angle unit or the display mode while the calculator is in the BASE-N mode (fx-85W).
- The COMP, SD, and REG modes can be used in combination with the angle unit modes.
- Be sure to check the current calculation mode (SD, REG, COMP) and angle unit mode (DEG, RAD, GRA) before beginning a calculation.

•8•

■ Input Capacity

- The memory area used for calculation input can hold 79 "steps." Whenever you input the 73rd step of any calculation, the cursor changes from "—" to "■" to let you know memory is running low. If you still need to input more, you should divide your calculation into two or more parts.

■ Making Corrections During Input

- Use \leftarrow and \rightarrow to move the cursor to the location you want.
- Press \square to delete the number or function at the current cursor position.
- Press \square \square to change to an insert cursor \square . Inputting something while the insert cursor is on the display inserts the input at the insert cursor position.
- Press \leftarrow , \rightarrow , \square \square , or \square returns to the normal cursor from the insert cursor.

■ Replay Function

- Pressing \square or \square recalls the last calculation you performed. You can then make any changes you want in the calculation and re-execute it.
- Pressing \square does not clear Replay memory, so you can recall the last calculation even after you press \square .
- Replay memory is cleared whenever you start a new calculation, change to another mode, or turn off power.

■ Error Locator

- Pressing \square or \square after an error occurs displays the calculation with the cursor positioned at the location where the error occurred.

Before Starting Calculations...

■ Modes

Application	Mode Name	Mode Indicator
Calculation Modes		
Normal calculations	COMP	—
Standard deviation calculations	SD	SD
Regression calculations	REG	REG
Base- <i>n</i> calculations (fx-85W only)	BASE-N	b (binary) o (octal) d (decimal) H (hexadecimal)
Angle Unit Modes		
Degrees	DEG	D
Radians	RAD	R
Grads	GRA	G
Display Modes		
Exponential notation (Canceling FIX and SCI specification)	NORM1 NORM2	— —
Number of decimal place specification	FIX	Fix
Number of significant digit specification	SCI	Sci

Note!

- Mode indicators appear in the lower part of the display, except for the Base-*n* indicators which appear in the exponent part of the display.
- You cannot set the angle unit or the display mode while the calculator is in the BASE-N mode (fx-85W).
- The COMP, SD, and REG modes can be used in combination with the angle unit modes.
- Be sure to check the current calculation mode (SD, REG, COMP) and angle unit mode (DEG, RAD, GRA) before beginning a calculation.

•8•

■ Input Capacity

- The memory area used for calculation input can hold 79 "steps." Whenever you input the 73rd step of any calculation, the cursor changes from "—" to "■" to let you know memory is running low. If you still need to input more, you should divide your calculation into two or more parts.

■ Making Corrections During Input

- Use \leftarrow and \rightarrow to move the cursor to the location you want.
- Press \square to delete the number or function at the current cursor position.
- Press \square \square to change to an insert cursor \square . Inputting something while the insert cursor is on the display inserts the input at the insert cursor position.
- Press \leftarrow , \rightarrow , \square \square , or \square returns to the normal cursor from the insert cursor.

■ Replay Function

- Pressing \square or \square recalls the last calculation you performed. You can then make any changes you want in the calculation and re-execute it.
- Pressing \square does not clear Replay memory, so you can recall the last calculation even after you press \square .
- Replay memory is cleared whenever you start a new calculation, change to another mode, or turn off power.

■ Error Locator

- Pressing \square or \square after an error occurs displays the calculation with the cursor positioned at the location where the error occurred.

- Example: $193.2 + 23 = 8.4$
 $193.2 + 28 = 6.9$

193.2 \times 23 \Rightarrow 8.4
 193.2 \times 28 \Rightarrow 6.9

- Example: $193.2 + 23 = 8.4$
 $193.2 + 28 = 6.9$

193.2 \times 23 \Rightarrow 8.4
 193.2 \times 28 \Rightarrow 6.9

Fraction Calculations

Fraction Calculations

- Use the COMP mode for fraction calculations.
- Values are automatically displayed in decimal format whenever the total number of digits of a fractional value (integer + numerator + denominator + separator marks) exceeds 10.

• Example 1: $\frac{2}{3} + 1\frac{4}{5}$

2 \div 3 \div 1 \div 4 \div 5 \Rightarrow 2.715

• Example 2: $\frac{1}{2} + 1.6$

1 \div 2 \div 1.6 \Rightarrow 2.1

- Fraction/decimal calculation results are always decimal.

Decimal-to-Fraction Conversion

• Example: $2.75 \rightarrow 2\frac{3}{4}$

2.75 \Rightarrow 2.75
 \Rightarrow 2.314
 \Rightarrow 11.4

Fraction-to-Decimal Conversion

• Example: $\frac{1}{2} \leftrightarrow 0.5$ (Fraction \leftrightarrow Decimal)

1 \div 2 \Rightarrow 1.2

•12•

\Rightarrow 0.5
 \Rightarrow 1.2

Fraction Calculations

Fraction Calculations

- Use the COMP mode for fraction calculations.
- Values are automatically displayed in decimal format whenever the total number of digits of a fractional value (integer + numerator + denominator + separator marks) exceeds 10.

• Example 1: $\frac{2}{3} + 1\frac{4}{5}$

2 \div 3 \div 1 \div 4 \div 5 \Rightarrow 2.715

• Example 2: $\frac{1}{2} + 1.6$

1 \div 2 \div 1.6 \Rightarrow 2.1

- Fraction/decimal calculation results are always decimal.

Decimal-to-Fraction Conversion

• Example: $2.75 \rightarrow 2\frac{3}{4}$

2.75 \Rightarrow 2.75
 \Rightarrow 2.314
 \Rightarrow 11.4

Fraction-to-Decimal Conversion

• Example: $\frac{1}{2} \leftrightarrow 0.5$ (Fraction \leftrightarrow Decimal)

1 \div 2 \Rightarrow 1.2

•12•

\Rightarrow 0.5
 \Rightarrow 1.2

Percentage Calculations

- Use the COMP mode for percentage calculations.

- Example 1: To calculate 12% of 1500

1500 \times 12 \Rightarrow 180

- Example 2: To calculate what percentage of 880 is 660

660 \div 880 \Rightarrow 75

- Example 3: To add 15% onto 2500

2500 \times 15 \div 100 \div 100 \Rightarrow 2875

- Example 4: To discount 3500 by 25%

3500 \times 25 \div 100 \div 100 \Rightarrow 2625

- Example 5: If 300 grams are added to a test sample originally weighing 500 grams, what is the percentage increase in weight?

$\frac{300 + 500}{500} \times 100 = 160$ (%)

300 \div 500 \div 100 \Rightarrow 160

- Example 6: If temperature changes from 40°C to 46°C, what percentage did it rise?

$\frac{46 - 40}{40} \times 100 = 15$ (%)

46 \div 40 \div 100 \Rightarrow 15

Percentage Calculations

- Use the COMP mode for percentage calculations.

- Example 1: To calculate 12% of 1500

1500 \times 12 \Rightarrow 180

- Example 2: To calculate what percentage of 880 is 660

660 \div 880 \Rightarrow 75

- Example 3: To add 15% onto 2500

2500 \times 15 \div 100 \div 100 \Rightarrow 2875

- Example 4: To discount 3500 by 25%

3500 \times 25 \div 100 \div 100 \Rightarrow 2625

- Example 5: If 300 grams are added to a test sample originally weighing 500 grams, what is the percentage increase in weight?

$\frac{300 + 500}{500} \times 100 = 160$ (%)

300 \div 500 \div 100 \Rightarrow 160

- Example 6: If temperature changes from 40°C to 46°C, what percentage did it rise?

$\frac{46 - 40}{40} \times 100 = 15$ (%)

46 \div 40 \div 100 \Rightarrow 15

Scientific Function Calculations

- Use the COMP mode for scientific function calculations.
- $\pi = 3.14159265359$

Trigonometric/Inverse Trigonometric Functions

- Example 1: $\sin 63^\circ 52' 41''$

fx-85W: → "D"
 Other models: → "D"

- Example 2: $\cos\left(\frac{\pi}{3}\right)$ rad

fx-85W: → "R"
 Other models: → "R"
 0.5

- Example 3: $\cos^{-1}\frac{\sqrt{2}}{2} = \frac{\pi}{4}$ rad

fx-85W: → "R"
 Other models: → "R"
 0.785398163
 0.25

- Example 4: $\tan^{-1}0.741$

fx-85W: → "D"
 Other models: → "D"
 36.53844577

•14•

Hyperbolic/Inverse Hyperbolic Functions

- Example 1: $\sinh 3.6$

18.28545536

- Example 2: $\sinh^{-1} 30$

4.094622224

Angle Unit Conversion

- Press to display the following menu.

D	R	G
1	2	3

- Pressing , , or converts the displayed value to the corresponding angle unit.

- Example : To convert 4.25 radians to degrees

fx-85W: → "D"
 Other models: → "D"
 4.25°
 243.5070629

Common and Natural Logarithms/Antilogarithms

- Example 1: $\log 1.23$ 0.089905111

- Example 2: $\ln 90$ ($=\log_e 90$)

4.49980967

- Example 3: e^{10} 22026.46579

- Example 4: $10^{1.5}$ 31.6227766

- Example 5: 2^4 16.

•15•

Scientific Function Calculations

- Use the COMP mode for scientific function calculations.
- $\pi = 3.14159265359$

Trigonometric/Inverse Trigonometric Functions

- Example 1: $\sin 63^\circ 52' 41''$

fx-85W: → "D"
 Other models: → "D"

- Example 2: $\cos\left(\frac{\pi}{3}\right)$ rad

fx-85W: → "R"
 Other models: → "R"
 0.5

- Example 3: $\cos^{-1}\frac{\sqrt{2}}{2} = \frac{\pi}{4}$ rad

fx-85W: → "R"
 Other models: → "R"
 0.785398163
 0.25

- Example 4: $\tan^{-1}0.741$

fx-85W: → "D"
 Other models: → "D"
 36.53844577

•14•

Hyperbolic/Inverse Hyperbolic Functions

- Example 1: $\sinh 3.6$

18.28545536

- Example 2: $\sinh^{-1} 30$

4.094622224

Angle Unit Conversion

- Press to display the following menu.

D	R	G
1	2	3

- Pressing , , or converts the displayed value to the corresponding angle unit.

- Example : To convert 4.25 radians to degrees

fx-85W: → "D"
 Other models: → "D"
 4.25°
 243.5070629

Common and Natural Logarithms/Antilogarithms

- Example 1: $\log 1.23$ 0.089905111

- Example 2: $\ln 90$ ($=\log_e 90$)

4.49980967

- Example 3: e^{10} 22026.46579

- Example 4: $10^{1.5}$ 31.6227766

- Example 5: 2^4 16.

•15•

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using F I . To input the data 110 ten times, for example, press 110 F I 10 DT .
- The above results can be obtained in any order, and not necessarily that shown above.
- To delete data you have just input, press DEL CL .

Regression Calculations (REG Mode)

- Press fx-85W 2 to enter the REG mode and then select one of the following regression types. For other models, press 3 .

- 1 : Linear regression
- 2 : Logarithmic regression
- 3 : Exponential regression
- 1 : Power regression
- 2 : Inverse regression
- 3 : Quadratic regression

- Data input always starts with SEL SEL to clear statistical memory.
- The values produced by a regression calculation depend on the values input, and results can be recalled using the key operations shown in the table below.

REG A	Σx^2	REG 100	$x\sigma_{n-1}$
REG B	Σx	REG Y	\bar{y}
REG C	n	REG X	$y\sigma_n$
REG D	Σy^2	REG Y	$y\sigma_{n-1}$
REG E	Σy	REG A	Regression coefficient A
REG F	Σxy	REG B	Regression coefficient B
REG M	Σx^3	REG C	Regression coefficient C
REG X	Σx^2y	REG 7	Correlation coefficient r
REG Y	Σx^4	REG X	\bar{x}
REG X	\bar{x}	REG Y	\bar{y}
REG X	$x\sigma_n$		

•20•

Linear Regression

The regression formula for linear regression is: $y = A + Bx$.

Example: Atmospheric Pressure vs. Temperature

Temperature	Atmospheric Pressure
10°C	1003 hPa
15°C	1005 hPa
20°C	1010 hPa
25°C	1011 hPa
30°C	1014 hPa

Perform linear regression to determine the regression formula terms and correlation coefficient for the data nearby. Next, use the regression formula to estimate atmospheric pressure at 18°C and temperature at 1000 hPa.

Enter REG Mode (Linear Regression)

fx-85W: 2 1

Other models: 3 1

SEL SEL (Memory Clear)

10 DT 1003 DT 15 DT 1005 DT
 20 DT 1010 DT 25 DT 1011 DT
 30 DT 1014 DT 30.
REG

(Regression Coefficient A) REG A = 997.4

(Regression Coefficient B) REG B = 0.56

(Correlation Coefficient r) REG 7 = 0.982607368

(Atmospheric Pressure at 18°C) 18 REG Y = 1007.48

(Temperature at 1000 hPa) 1000 REG X = 4.642857143

Quadratic Regression

The regression formula for quadratic regression is:
 $y = A + Bx + Cx^2$.

Input data using the following key sequence.

$\langle x\text{-data} \rangle$ DT $\langle y\text{-data} \rangle$ DT

•21•

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using F I . To input the data 110 ten times, for example, press 110 F I 10 DT .
- The above results can be obtained in any order, and not necessarily that shown above.
- To delete data you have just input, press DEL CL .

Regression Calculations (REG Mode)

- Press fx-85W 2 to enter the REG mode and then select one of the following regression types. For other models, press 3 .

- 1 : Linear regression
- 2 : Logarithmic regression
- 3 : Exponential regression
- 1 : Power regression
- 2 : Inverse regression
- 3 : Quadratic regression

- Data input always starts with SEL SEL to clear statistical memory.
- The values produced by a regression calculation depend on the values input, and results can be recalled using the key operations shown in the table below.

REG A	Σx^2	REG 100	$x\sigma_{n-1}$
REG B	Σx	REG Y	\bar{y}
REG C	n	REG X	$y\sigma_n$
REG D	Σy^2	REG Y	$y\sigma_{n-1}$
REG E	Σy	REG A	Regression coefficient A
REG F	Σxy	REG B	Regression coefficient B
REG M	Σx^3	REG C	Regression coefficient C
REG X	Σx^2y	REG 7	Correlation coefficient r
REG Y	Σx^4	REG X	\bar{x}
REG X	\bar{x}	REG Y	\bar{y}
REG X	$x\sigma_n$		

•20•

Linear Regression

The regression formula for linear regression is: $y = A + Bx$.

Example: Atmospheric Pressure vs. Temperature

Temperature	Atmospheric Pressure
10°C	1003 hPa
15°C	1005 hPa
20°C	1010 hPa
25°C	1011 hPa
30°C	1014 hPa

Perform linear regression to determine the regression formula terms and correlation coefficient for the data nearby. Next, use the regression formula to estimate atmospheric pressure at 18°C and temperature at 1000 hPa.

Enter REG Mode (Linear Regression)

fx-85W: 2 1

Other models: 3 1

SEL SEL (Memory Clear)

10 DT 1003 DT 15 DT 1005 DT
 20 DT 1010 DT 25 DT 1011 DT
 30 DT 1014 DT 30.
REG

(Regression Coefficient A) REG A = 997.4

(Regression Coefficient B) REG B = 0.56

(Correlation Coefficient r) REG 7 = 0.982607368

(Atmospheric Pressure at 18°C) 18 REG Y = 1007.48

(Temperature at 1000 hPa) 1000 REG X = 4.642857143

Quadratic Regression

The regression formula for quadratic regression is:
 $y = A + Bx + Cx^2$.

Input data using the following key sequence.

$\langle x\text{-data} \rangle$ DT $\langle y\text{-data} \rangle$ DT

•21•

• Example:

x_i	y_i
29	1.6
50	23.5
74	38.0
103	46.4
118	48.0

Perform quadratic regression to determine the regression formula terms and correlation coefficient for the data nearby. Next, use the regression formula to estimate the values for \hat{y} (estimated value of y) for $x_i = 16$ and \hat{x} (estimated value of x) for $y_i = 20$.

Enter REG mode (Quadratic regression)

fx-85W: MODE MODE 2 ▶ 3

Other models: MODE 3 ▶ 3

ON [Sci] =

29 ▶ 1.6 DT 50 ▶ 23.5 DT

74 ▶ 38.0 DT 103 ▶ 46.4 DT

118 ▶ 48.0 DT

118.
REG

(Regression Coefficient A) ON [A] = -35.59856934

(Regression Coefficient B) ON [B] = 1.495939413

(Regression Coefficient C) ON [C] = -6.71629667⁻⁰³

(\hat{y} when $x_i = 16$) 16 ON [Y] = -13.38291067

(\hat{x} , when $y_i = 20$) 20 ON [X] = 47.14556728

(\hat{x} , when $y_i = 20$) ON [X] = 175.5872105

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using ON [I] . To input the data "20 and 30" five times, for example, press 20 ▶ 30 ON [I] 5 DT .
- The above results can be obtained in any order, and not necessarily that shown above.
- To delete data you have just input, press ON [CL] .

Formula Memory (fx-85W)

- Formula memory lets you input a single formula in memory, and then input values for the formula's variables to calculate results.
- Memory can hold a single formula, up to 79 steps long. This function can be used in the COMP mode only.
- Note that the formula is actually stored in memory when you press the ON key in the sequence below.

• Example: To save the following formula, recall it, and then use it to calculate a result: $Y = X^2 + 3X - 12$

Input the formula.

ON [Y] ON [=] ON [X] ON [+] ON [X] ON [-] 12 ON [=] $Y=X^2+3X-12$
3 ON [X] ON [=] 12 ON [=] 0.

Store it in memory.

ON [X] ON [=] 0.

Input a value for its variable.

7 ON [=] 58.

ON [X] ON [=] 7.

8 ON [=] 76.

- Formula memory is cleared whenever you start a new calculation, change to another mode, or turn off power.

Base- n Calculations (fx-85W)

- In addition to decimal values, calculations can be performed using binary, octal and hexadecimal values.
- You can specify the default number system to be applied to all input and displayed values, and the number system for individual values you input.
- You cannot use scientific functions in binary, octal, decimal, and hexadecimal calculations. You cannot input values that include decimal part and an exponent.
- If you input a value that includes a decimal part, the unit automatically cuts off the decimal part.
- Negative binary, octal, and hexadecimal values are produced by taking the two's complement.

• Example:

x_i	y_i
29	1.6
50	23.5
74	38.0
103	46.4
118	48.0

Perform quadratic regression to determine the regression formula terms and correlation coefficient for the data nearby. Next, use the regression formula to estimate the values for \hat{y} (estimated value of y) for $x_i = 16$ and \hat{x} (estimated value of x) for $y_i = 20$.

Enter REG mode (Quadratic regression)

fx-85W: MODE MODE 2 ▶ 3

Other models: MODE 3 ▶ 3

ON [Sci] =

29 ▶ 1.6 DT 50 ▶ 23.5 DT

74 ▶ 38.0 DT 103 ▶ 46.4 DT

118 ▶ 48.0 DT

118.
REG

(Regression Coefficient A) ON [A] = -35.59856934

(Regression Coefficient B) ON [B] = 1.495939413

(Regression Coefficient C) ON [C] = -6.71629667⁻⁰³

(\hat{y} when $x_i = 16$) 16 ON [Y] = -13.38291067

(\hat{x} , when $y_i = 20$) 20 ON [X] = 47.14556728

(\hat{x} , when $y_i = 20$) ON [X] = 175.5872105

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using ON [I] . To input the data "20 and 30" five times, for example, press 20 ▶ 30 ON [I] 5 DT .
- The above results can be obtained in any order, and not necessarily that shown above.
- To delete data you have just input, press ON [CL] .

Formula Memory (fx-85W)

- Formula memory lets you input a single formula in memory, and then input values for the formula's variables to calculate results.
- Memory can hold a single formula, up to 79 steps long. This function can be used in the COMP mode only.
- Note that the formula is actually stored in memory when you press the ON key in the sequence below.

• Example: To save the following formula, recall it, and then use it to calculate a result: $Y = X^2 + 3X - 12$

Input the formula.

ON [Y] ON [=] ON [X] ON [+] ON [X] ON [-] 12 ON [=] $Y=X^2+3X-12$
3 ON [X] ON [=] 12 ON [=] 0.

Store it in memory.

ON [X] ON [=] 0.

Input a value for its variable.

7 ON [=] 58.

ON [X] ON [=] 7.

8 ON [=] 76.

- Formula memory is cleared whenever you start a new calculation, change to another mode, or turn off power.

Base- n Calculations (fx-85W)

- In addition to decimal values, calculations can be performed using binary, octal and hexadecimal values.
- You can specify the default number system to be applied to all input and displayed values, and the number system for individual values you input.
- You cannot use scientific functions in binary, octal, decimal, and hexadecimal calculations. You cannot input values that include decimal part and an exponent.
- If you input a value that includes a decimal part, the unit automatically cuts off the decimal part.
- Negative binary, octal, and hexadecimal values are produced by taking the two's complement.

- You can use the following logical operators between values in Base-*n* calculations: and (logical product), or (logical sum), xor (exclusive logical sum), xnor (exclusive logical sum negation), Not (negation), and Neg (minus).
- The following are the allowable ranges for each of the available number systems.

Binary	$1000000000 \leq x \leq 1111111111$ $0 \leq x \leq 0111111111$
Octal	$4000000000 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$
Decimal	$-2147483648 \leq x \leq 2147483647$
Hexadecimal	$80000000 \leq x \leq FFFFFFFF$ $0 \leq x \leq 7FFFFFFF$

- Example 1:** To perform the following calculation and produce a binary result:

10111₂ + 11010₂
Binary mode MODE 2 BIN 0.₂
10111₂ + 11010₂ 0.₂
= 110001.₂

- Example 2:** To perform the following calculation and produce an octal result:

7654₈ + 12₁₀
Octal mode MODE 2 OCT 0.₈
LOGIC LOGIC LOGIC 4 (o) 7654₈ 0.₈
LOGIC LOGIC LOGIC 1 (d) 12₁₀ 0.₈
= 516.₈

- Example 3:** To perform the following calculation and produce a hexadecimal result:

120₁₆ or 1101₂
Hexadecimal mode MODE 2 HEX 0._H
120₁₆ LOGIC 2 (or)
LOGIC LOGIC LOGIC 3 (b) 1101₂ 0._H
= 12d._H

•24•

Degrees, Minutes, Seconds Calculations

- You can perform sexagesimal calculations using degrees (hours), minutes, and seconds, and convert between sexagesimal and decimal values.

- Example 1:** To convert the decimal value 2.258 to a sexagesimal value

2.258 2.258
= 2°15'28.8

- Example 2:** To perform the following calculation:

12°34'56" × 3.45
12 34 56 × 3.45 0.
= 43°24'31.2

Technical Information

■ When you have a problem.....

If calculation results are not what you expect or if an error occurs, perform the following steps.

- MODE 1 (COMP mode)
- fx-85W: MODE MODE 1 (DEG mode)
Other models: MODE MODE 1 (DEG mode)
- fx-85W: MODE MODE MODE 3 1 (NORM 1 mode)
Other models: MODE MODE MODE 3 1 (NORM 1 mode)
- Check the formula you are working with to confirm it is correct.
- Enter the correct modes to perform the calculation and try again.

<fx-82TL/fx-83WA/fx-270W PLUS/fx-350TL>

If the above steps do not correct your problem, press the P button (see page 29 or 30) on the back of the calculator to reset it. Pressing the P button deletes all data stored in calculator memory. Make sure you always keep written copies of all important data.

•25•

- You can use the following logical operators between values in Base-*n* calculations: and (logical product), or (logical sum), xor (exclusive logical sum), xnor (exclusive logical sum negation), Not (negation), and Neg (minus).

- The following are the allowable ranges for each of the available number systems.

Binary	$1000000000 \leq x \leq 1111111111$ $0 \leq x \leq 0111111111$
Octal	$4000000000 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$
Decimal	$-2147483648 \leq x \leq 2147483647$
Hexadecimal	$80000000 \leq x \leq FFFFFFFF$ $0 \leq x \leq 7FFFFFFF$

- Example 1:** To perform the following calculation and produce a binary result:

10111₂ + 11010₂
Binary mode MODE 2 BIN 0.₂
10111₂ + 11010₂ 0.₂
= 110001.₂

- Example 2:** To perform the following calculation and produce an octal result:

7654₈ + 12₁₀
Octal mode MODE 2 OCT 0.₈
LOGIC LOGIC LOGIC 4 (o) 7654₈ 0.₈
LOGIC LOGIC LOGIC 1 (d) 12₁₀ 0.₈
= 516.₈

- Example 3:** To perform the following calculation and produce a hexadecimal result:

120₁₆ or 1101₂
Hexadecimal mode MODE 2 HEX 0._H
120₁₆ LOGIC 2 (or)
LOGIC LOGIC LOGIC 3 (b) 1101₂ 0._H
= 12d._H

•24•

Degrees, Minutes, Seconds Calculations

- You can perform sexagesimal calculations using degrees (hours), minutes, and seconds, and convert between sexagesimal and decimal values.

- Example 1:** To convert the decimal value 2.258 to a sexagesimal value

2.258 2.258
= 2°15'28.8

- Example 2:** To perform the following calculation:

12°34'56" × 3.45
12 34 56 × 3.45 0.
= 43°24'31.2

Technical Information

■ When you have a problem.....

If calculation results are not what you expect or if an error occurs, perform the following steps.

- MODE 1 (COMP mode)
- fx-85W: MODE MODE 1 (DEG mode)
Other models: MODE MODE 1 (DEG mode)
- fx-85W: MODE MODE MODE 3 1 (NORM 1 mode)
Other models: MODE MODE MODE 3 1 (NORM 1 mode)
- Check the formula you are working with to confirm it is correct.
- Enter the correct modes to perform the calculation and try again.

<fx-82TL/fx-83WA/fx-270W PLUS/fx-350TL>

If the above steps do not correct your problem, press the P button (see page 29 or 30) on the back of the calculator to reset it. Pressing the P button deletes all data stored in calculator memory. Make sure you always keep written copies of all important data.

•25•

<fx-85W/fx-85WA/fx-300W/fx-911W>

If the above steps do not correct the problem, press the \square key. The calculator performs a self-check operation and deletes all data stored in memory if any abnormality is detected. Make sure you always keep written copies of all important data.

■ Error Messages

The calculator is locked up while an error message is on the display. Press \square to clear the error, or press \square or \square to display the calculation and correct the problem. See "Error Locator" on page 9 for details.

Ma ERROR

- **Cause**
 - Calculation result is outside the allowable calculation range.
 - Attempt to perform a function calculation using a value that exceeds the allowable input range.
 - Attempt to perform an illogical operation (division by zero, etc.).
- **Action**
 - Check your input values and make sure they are all within the allowable ranges. Pay special attention to values in any memory areas you are using.

Stk ERROR

- **Cause**
 - Capacity of the numeric stack or operator stack is exceeded.
- **Action**
 - Simplify the calculation. The numeric stack has 10 levels and the operator stack has 24 levels.
 - Divide your calculation into two or more separate parts.

Syn ERROR

- **Cause**
 - Attempt to perform an illegal mathematical operation.
- **Action**
 - Press \square or \square to display the calculation with the cursor located at the location of the error. Make necessary corrections.

•26•

Arg ERROR

- **Cause**
 - Improper use of argument
- **Action**
 - Press \square or \square to display the location of the cause of the error and make required corrections.

■ Order of Operations

Calculations are performed in the following order of precedence.

- ① Coordinate transformation: Pol (x, y), Rec (r, θ)
 - ② Type A functions:
With these functions, the value is entered and then the function key is pressed.
 $x^2, x^{-1}, x!, \dots$
 - ③ Powers and roots: $x^y, \sqrt[n]{x}$
 - ④ a^b/c
 - ⑤ Abbreviated multiplication format in front of π , memory name, or variable name: $2\pi, 5A, \pi A$ etc.
 - ⑥ Type B functions:
With these functions, the function key is pressed and then the value is entered.
 $\sqrt{\quad}, \sqrt[3]{\quad}, \log, \ln, e^x, 10^x, \sin, \cos, \tan, \sin^{-1}, \cos^{-1}, \tan^{-1}, \sinh, \cosh, \tanh, \sinh^{-1}, \cosh^{-1}, \tanh^{-1}, (-)$
 - ⑦ Abbreviated multiplication format in front of Type B functions: $2\sqrt{3}, A\log 2$ etc.
 - ⑧ Permutation and combination: nPr, nCr
 - ⑨ $\times, +$
 - ⑩ $+, -$
- Operations of the same precedence are performed from right to left. $e^{\ln \sqrt{120}} \rightarrow e^{\ln(\sqrt{120})}$
 - Other operations are performed from left to right.
 - Operations enclosed in parentheses are performed first.

■ Stacks

This calculator uses memory areas, called "stacks," to temporarily store values (numeric stack) and commands (command stack) according to their precedence during calculations. The numeric stack has 10 levels and the command stack has 24 levels. A stack error (Stk ERROR) occurs whenever you try to perform a calculation that is so complex that the capacity of a stack is exceeded.

•27•

<fx-85W/fx-85WA/fx-300W/fx-911W>

If the above steps do not correct the problem, press the \square key. The calculator performs a self-check operation and deletes all data stored in memory if any abnormality is detected. Make sure you always keep written copies of all important data.

■ Error Messages

The calculator is locked up while an error message is on the display. Press \square to clear the error, or press \square or \square to display the calculation and correct the problem. See "Error Locator" on page 9 for details.

Ma ERROR

- **Cause**
 - Calculation result is outside the allowable calculation range.
 - Attempt to perform a function calculation using a value that exceeds the allowable input range.
 - Attempt to perform an illogical operation (division by zero, etc.).
- **Action**
 - Check your input values and make sure they are all within the allowable ranges. Pay special attention to values in any memory areas you are using.

Stk ERROR

- **Cause**
 - Capacity of the numeric stack or operator stack is exceeded.
- **Action**
 - Simplify the calculation. The numeric stack has 10 levels and the operator stack has 24 levels.
 - Divide your calculation into two or more separate parts.

Syn ERROR

- **Cause**
 - Attempt to perform an illegal mathematical operation.
- **Action**
 - Press \square or \square to display the calculation with the cursor located at the location of the error. Make necessary corrections.

•26•

Arg ERROR

- **Cause**
 - Improper use of argument
- **Action**
 - Press \square or \square to display the location of the cause of the error and make required corrections.

■ Order of Operations

Calculations are performed in the following order of precedence.

- ① Coordinate transformation: Pol (x, y), Rec (r, θ)
 - ② Type A functions:
With these functions, the value is entered and then the function key is pressed.
 $x^2, x^{-1}, x!, \dots$
 - ③ Powers and roots: $x^y, \sqrt[n]{x}$
 - ④ a^b/c
 - ⑤ Abbreviated multiplication format in front of π , memory name, or variable name: $2\pi, 5A, \pi A$ etc.
 - ⑥ Type B functions:
With these functions, the function key is pressed and then the value is entered.
 $\sqrt{\quad}, \sqrt[3]{\quad}, \log, \ln, e^x, 10^x, \sin, \cos, \tan, \sin^{-1}, \cos^{-1}, \tan^{-1}, \sinh, \cosh, \tanh, \sinh^{-1}, \cosh^{-1}, \tanh^{-1}, (-)$
 - ⑦ Abbreviated multiplication format in front of Type B functions: $2\sqrt{3}, A\log 2$ etc.
 - ⑧ Permutation and combination: nPr, nCr
 - ⑨ $\times, +$
 - ⑩ $+, -$
- Operations of the same precedence are performed from right to left. $e^{\ln \sqrt{120}} \rightarrow e^{\ln(\sqrt{120})}$
 - Other operations are performed from left to right.
 - Operations enclosed in parentheses are performed first.

■ Stacks

This calculator uses memory areas, called "stacks," to temporarily store values (numeric stack) and commands (command stack) according to their precedence during calculations. The numeric stack has 10 levels and the command stack has 24 levels. A stack error (Stk ERROR) occurs whenever you try to perform a calculation that is so complex that the capacity of a stack is exceeded.

•27•

■ Power Supply

The type of battery you should use depends on the model number of your calculator.

<fx-85W/fx-85WA/fx-300W/fx-911W>

The TWO WAY POWER system actually has two power supplies: a solar cell and a G13 Type (LR44) button battery. Normally, calculators equipped with a solar cell alone can operate only when relatively bright light is present. The TWO WAY POWER system, however, lets you continue to use the calculator as long as there is enough light to read the display.


• Replacing the Battery

Either of the following symptoms indicates battery power is low, and that the battery should be replaced.

- Display figures are dim and difficult to read in areas where there is little light available.
- Nothing appears on the display when you press the  key.

• To replace the battery

- ① Remove the six screws that hold the back cover in place and then remove the back cover.
- ② Remove the old battery.
- ③ Wipe off the sides of new battery with a dry, soft cloth. Load it into the unit with the positive ⊕ side facing up (so you can see it).
- ④ Replace the back cover and secure it in place with the six screws.
- ⑤ Press  to turn power on. Be sure not to skip this step.

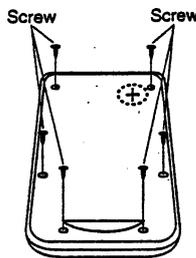

•28•

<fx-82TL>


This calculator is powered by single AA-size battery.

• Replacing the Battery

Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

• To replace the battery

- ① Press  to turn power off.
- ② Remove the six screws that hold the back cover in place and then remove the back cover.
- ③ Remove the old battery.
- ④ Load a new battery into the unit so its positive ⊕ and negative ⊖ sides are facing correctly.
- ⑤ Replace the back cover and secure it in place with the six screws.
- ⑥ Use a thin, pointed object to press the P button. Be sure not to skip this step.
- ⑦ Press  to turn power on.

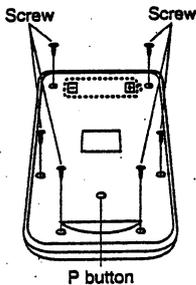

•29•

■ Power Supply

The type of battery you should use depends on the model number of your calculator.

<fx-85W/fx-85WA/fx-300W/fx-911W>

The TWO WAY POWER system actually has two power supplies: a solar cell and a G13 Type (LR44) button battery. Normally, calculators equipped with a solar cell alone can operate only when relatively bright light is present. The TWO WAY POWER system, however, lets you continue to use the calculator as long as there is enough light to read the display.


• Replacing the Battery

Either of the following symptoms indicates battery power is low, and that the battery should be replaced.

- Display figures are dim and difficult to read in areas where there is little light available.
- Nothing appears on the display when you press the  key.

• To replace the battery

- ① Remove the six screws that hold the back cover in place and then remove the back cover.
- ② Remove the old battery.
- ③ Wipe off the sides of new battery with a dry, soft cloth. Load it into the unit with the positive ⊕ side facing up (so you can see it).
- ④ Replace the back cover and secure it in place with the six screws.
- ⑤ Press  to turn power on. Be sure not to skip this step.

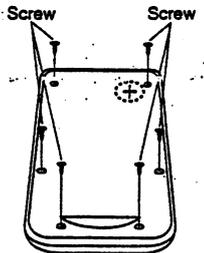

•28•

<fx-82TL>


This calculator is powered by single AA-size battery.

• Replacing the Battery

Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

• To replace the battery

- ① Press  to turn power off.
- ② Remove the six screws that hold the back cover in place and then remove the back cover.
- ③ Remove the old battery.
- ④ Load a new battery into the unit so its positive ⊕ and negative ⊖ sides are facing correctly.
- ⑤ Replace the back cover and secure it in place with the six screws.
- ⑥ Use a thin, pointed object to press the P button. Be sure not to skip this step.
- ⑦ Press  to turn power on.

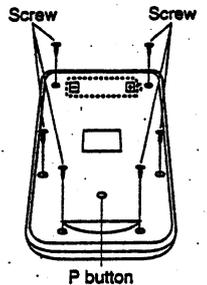

•29•

<fx-83WA / fx-270W PLUS / fx-350TL>


This calculator is powered by single G13 Type (LR44) button battery.

• Replacing the Battery

Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

• To replace the battery

- ① Press OFF to turn power off.
- ② Remove the two screws that hold the battery cover in place and then remove the battery cover.
- ③ Remove the old battery.
- ④ Wipe off the side of new battery with a dry, soft cloth. Load it into the unit with the positive (+) side facing up (so you can see it).
- ⑤ Replace the battery cover and secure it in place with the two screws.
- ⑥ Use a thin, pointed object to press the P button. Be sure not to skip this step.
- ⑦ Press ON to turn power on.

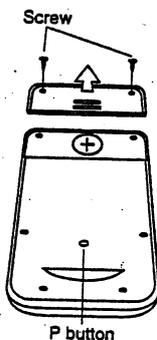

• Auto Power Off

Calculator power automatically turns off if you do not perform any operation for about six minutes. When this happens, press ON (fx-85W/ fx-85WA / fx-300W/ fx-911W: ON) to turn power back on.

<fx-83WA / fx-270W PLUS / fx-350TL>


This calculator is powered by single G13 Type (LR44) button battery.

• Replacing the Battery

Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

• To replace the battery

- ① Press OFF to turn power off.
- ② Remove the two screws that hold the battery cover in place and then remove the battery cover.
- ③ Remove the old battery.
- ④ Wipe off the side of new battery with a dry, soft cloth. Load it into the unit with the positive (+) side facing up (so you can see it).
- ⑤ Replace the battery cover and secure it in place with the two screws.
- ⑥ Use a thin, pointed object to press the P button. Be sure not to skip this step.
- ⑦ Press ON to turn power on.

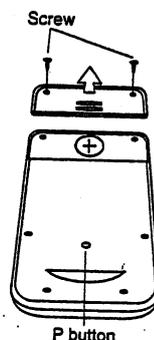

• Auto Power Off

Calculator power automatically turns off if you do not perform any operation for about six minutes. When this happens, press ON (fx-85W/ fx-85WA / fx-300W/ fx-911W: ON) to turn power back on.

■ Input Ranges

Internal digits: 12
Accuracy: As a rule, accuracy is ± 1 at the 10th digit.

Functions	Input Range
sin x	DEG $0 \leq x \leq 4.499999999 \times 10^{10}$
	RAD $0 \leq x \leq 785398163.3$
	GRA $0 \leq x \leq 4.499999999 \times 10^{10}$
cos x	DEG $0 \leq x \leq 4.500000008 \times 10^{10}$
	RAD $0 \leq x \leq 785398164.9$
	GRA $0 \leq x \leq 5.000000009 \times 10^{10}$
tan x	DEG Same as sin x, except when $ x = (2n-1) \times 90$.
	RAD Same as sin x, except when $ x = (2n-1) \times \pi/2$.
	GRA Same as sin x, except when $ x = (2n-1) \times 100$.
$\sin^{-1} x$	$0 \leq x \leq 1$
$\cos^{-1} x$	$0 \leq x \leq 1$
$\tan^{-1} x$	$0 \leq x \leq 9.999999999 \times 10^{99}$
sinh x	$0 \leq x \leq 230.2585092$
cosh x	$0 \leq x \leq 230.2585092$
$\sinh^{-1} x$	$0 \leq x \leq 4.999999999 \times 10^{99}$
$\cosh^{-1} x$	$0 \leq x \leq 4.999999999 \times 10^{99}$
tanh x	$0 \leq x \leq 9.999999999 \times 10^1$
$\tanh^{-1} x$	$0 \leq x \leq 9.999999999 \times 10^1$
$\log x / \ln x$	$0 < x$
10^x	$-9.999999999 \times 10^{99} \leq x \leq 99.99999999$
e^x	$-9.999999999 \times 10^{99} \leq x \leq 230.2585092$
\sqrt{x}	$0 \leq x < 1 \times 10^{100}$
x^2	$ x < 1 \times 10^{100}$
$1/x$	$ x < 1 \times 10^{100}; x \neq 0$
$\sqrt[3]{x}$	$ x < 1 \times 10^{100}$
$x!$	$0 \leq x \leq 69$ (x is an integer)

■ Input Ranges

Internal digits: 12
Accuracy: As a rule, accuracy is ± 1 at the 10th digit.

Functions	Input Range
sin x	DEG $0 \leq x \leq 4.499999999 \times 10^{10}$
	RAD $0 \leq x \leq 785398163.3$
	GRA $0 \leq x \leq 4.499999999 \times 10^{10}$
cos x	DEG $0 \leq x \leq 4.500000008 \times 10^{10}$
	RAD $0 \leq x \leq 785398164.9$
	GRA $0 \leq x \leq 5.000000009 \times 10^{10}$
tan x	DEG Same as sin x, except when $ x = (2n-1) \times 90$.
	RAD Same as sin x, except when $ x = (2n-1) \times \pi/2$.
	GRA Same as sin x, except when $ x = (2n-1) \times 100$.
$\sin^{-1} x$	$0 \leq x \leq 1$
$\cos^{-1} x$	$0 \leq x \leq 1$
$\tan^{-1} x$	$0 \leq x \leq 9.999999999 \times 10^{99}$
sinh x	$0 \leq x \leq 230.2585092$
cosh x	$0 \leq x \leq 230.2585092$
$\sinh^{-1} x$	$0 \leq x \leq 4.999999999 \times 10^{99}$
$\cosh^{-1} x$	$0 \leq x \leq 4.999999999 \times 10^{99}$
tanh x	$0 \leq x \leq 9.999999999 \times 10^1$
$\tanh^{-1} x$	$0 \leq x \leq 9.999999999 \times 10^1$
$\log x / \ln x$	$0 < x$
10^x	$-9.999999999 \times 10^{99} \leq x \leq 99.99999999$
e^x	$-9.999999999 \times 10^{99} \leq x \leq 230.2585092$
\sqrt{x}	$0 \leq x < 1 \times 10^{100}$
x^2	$ x < 1 \times 10^{100}$
$1/x$	$ x < 1 \times 10^{100}; x \neq 0$
$\sqrt[3]{x}$	$ x < 1 \times 10^{100}$
$x!$	$0 \leq x \leq 69$ (x is an integer)

Functions	Input Range
nPr	$0 \leq n \leq 99, r \leq n$ (n, r is an integer) $1 \leq (n!/(n-r)!) \leq 9.999999999 \times 10^{99}$
nCr	$0 \leq n \leq 99, r \leq n$ (n, r is an integer)
$\text{Pol}(x, y)$	$ x , y \leq 9.999999999 \times 10^{99}$ $(x^2 + y^2) \leq 9.999999999 \times 10^{99}$
$\text{Rec}(r, \theta)$	$0 \leq r \leq 9.999999999 \times 10^{99}$ θ : Same as $\sin x, \cos x$
" "	$ a , b, c < 1 \times 10^{100}$ $0 \leq b, c$
" "	$ x < 1 \times 10^{100}$ Decimal \leftrightarrow Sexagesimal Conversions $0^\circ 0' 0'' \leq x \leq 999999999^\circ 59'$
x^y	$x > 0: -1 \times 10^{100} < \log x < 100$ $x = 0: y > 0$ $x < 0: y = n, \frac{1}{2n+1}$ (n is an integer) However: $-1 \times 10^{100} < y \log x < 100$
$\sqrt[x]{y}$	$y > 0: x \neq 0$ $-1 \times 10^{100} < 1/x \log y < 100$ $y = 0: x > 0$ $y < 0: x = 2n+1, \frac{1}{n}$ ($n \neq 0; n$ is an integer) However: $-1 \times 10^{100} < 1/x \log y < 100$
a^b/c	Total of integer, numerator, and denominator must be 10 digits or less (including division marks).
SD (REG)	$ x < 1 \times 10^{99}$ $ y < 1 \times 10^{99}$ $ n < 1 \times 10^{99}$ $x\sigma_n, y\sigma_n, \bar{x}, \bar{y}$ $A, B, r: n \neq 0$ $x\sigma_{n-1}, y\sigma_{n-1}: n \neq 0, 1$

* Errors are cumulative with such internal continuous calculations as $x^y, \sqrt[x]{y}, x!$, and $\sqrt[3]{x}$, so accuracy may be adversely affected.

•32•

Functions	Input Range
nPr	$0 \leq n \leq 99, r \leq n$ (n, r is an integer) $1 \leq (n!/(n-r)!) \leq 9.999999999 \times 10^{99}$
nCr	$0 \leq n \leq 99, r \leq n$ (n, r is an integer)
$\text{Pol}(x, y)$	$ x , y \leq 9.999999999 \times 10^{99}$ $(x^2 + y^2) \leq 9.999999999 \times 10^{99}$
$\text{Rec}(r, \theta)$	$0 \leq r \leq 9.999999999 \times 10^{99}$ θ : Same as $\sin x, \cos x$
" "	$ a , b, c < 1 \times 10^{100}$ $0 \leq b, c$
" "	$ x < 1 \times 10^{100}$ Decimal \leftrightarrow Sexagesimal Conversions $0^\circ 0' 0'' \leq x \leq 999999999^\circ 59'$
x^y	$x > 0: -1 \times 10^{100} < \log x < 100$ $x = 0: y > 0$ $x < 0: y = n, \frac{1}{2n+1}$ (n is an integer) However: $-1 \times 10^{100} < y \log x < 100$
$\sqrt[x]{y}$	$y > 0: x \neq 0$ $-1 \times 10^{100} < 1/x \log y < 100$ $y = 0: x > 0$ $y < 0: x = 2n+1, \frac{1}{n}$ ($n \neq 0; n$ is an integer) However: $-1 \times 10^{100} < 1/x \log y < 100$
a^b/c	Total of integer, numerator, and denominator must be 10 digits or less (including division marks).
SD (REG)	$ x < 1 \times 10^{99}$ $ y < 1 \times 10^{99}$ $ n < 1 \times 10^{99}$ $x\sigma_n, y\sigma_n, \bar{x}, \bar{y}$ $A, B, r: n \neq 0$ $x\sigma_{n-1}, y\sigma_{n-1}: n \neq 0, 1$

* Errors are cumulative with such internal continuous calculations as $x^y, \sqrt[x]{y}, x!$, and $\sqrt[3]{x}$, so accuracy may be adversely affected.

•32•

Specifications

Power Supply:

- fx-82TL:** Single AA-size battery (R6P (SUM-3))
fx-85W/fx-85WA/fx-300W/fx-911W:
Solar cell and a single G13 Type button battery (LR44)
fx-83WA/fx-270W PLUS/fx-350TL:
Single G13 Type button battery (LR44)

Battery Life:

- fx-82TL:** Approximately 17,000 hours continuous display of flashing cursor.
Approximately 2 years when left with power turned off.
fx-85W/fx-85WA/fx-300W/fx-911W:
Approximately 3 years (1 hour use per day).
fx-83WA/fx-270W PLUS/fx-350TL:
Approximately 12,000 hours continuous display of flashing cursor.
Approximately 3 years when left with power turned off.

Dimensions:

- fx-82TL:** 19.3(H)×76(W)×164(D) mm
 $\frac{3}{4}$ "(H)×3"(W)×6 $\frac{7}{16}$ "(D)
fx-83WA/fx-85W/fx-85WA/fx-270W PLUS/fx-300W/fx-350TL/fx-911W:
10(H)×76(W)×150(D) mm
 $\frac{3}{8}$ "(H)×3"(W)×5 $\frac{7}{8}$ "(D)

Weight:

- fx-82TL:** 115 g (4.1 oz) including battery
fx-85W/fx-85WA/fx-300W/fx-911W:
80 g (2.8 oz) including battery
fx-83WA/fx-270W PLUS/fx-350TL:
90 g (3.2 oz) including battery

Power Consumption: 0.0001W

Operating Temperature: 0°C - 40°C (32°F - 104°F)

•33•

Specifications

Power Supply:

- fx-82TL:** Single AA-size battery (R6P (SUM-3))
fx-85W/fx-85WA/fx-300W/fx-911W:
Solar cell and a single G13 Type button battery (LR44)
fx-83WA/fx-270W PLUS/fx-350TL:
Single G13 Type button battery (LR44)

Battery Life:

- fx-82TL:** Approximately 17,000 hours continuous display of flashing cursor.
Approximately 2 years when left with power turned off.
fx-85W/fx-85WA/fx-300W/fx-911W:
Approximately 3 years (1 hour use per day).
fx-83WA/fx-270W PLUS/fx-350TL:
Approximately 12,000 hours continuous display of flashing cursor.
Approximately 3 years when left with power turned off.

Dimensions:

- fx-82TL:** 19.3(H)×76(W)×164(D) mm
 $\frac{3}{4}$ "(H)×3"(W)×6 $\frac{7}{16}$ "(D)
fx-83WA/fx-85W/fx-85WA/fx-270W PLUS/fx-300W/fx-350TL/fx-911W:
10(H)×76(W)×150(D) mm
 $\frac{3}{8}$ "(H)×3"(W)×5 $\frac{7}{8}$ "(D)

Weight:

- fx-82TL:** 115 g (4.1 oz) including battery
fx-85W/fx-85WA/fx-300W/fx-911W:
80 g (2.8 oz) including battery
fx-83WA/fx-270W PLUS/fx-350TL:
90 g (3.2 oz) including battery

Power Consumption: 0.0001W

Operating Temperature: 0°C - 40°C (32°F - 104°F)

•33•