

EPSON®

INK JET PRINTER

STYLUS® PHOTO R1800

User's Guide

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson printer. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

A Note Concerning Responsible Use of Copyrighted Materials

Ink jet printers, digital cameras, and scanners, like photocopiers and conventional cameras, can be misused by improper copying and reprinting of copyrighted material. While some countries' laws permit limited copying of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. Epson encourages each user to be responsible and respectful of the copyright laws when using ink jet printers, digital cameras, and scanners.

Trademarks

Epson and Epson Stylus are registered trademarks, and Epson UltraChrome, Epson UltraChrome Hi-Gloss, and PRINT Image Matching are trademarks of Seiko Epson Corporation.

BorderFree and RPM are registered trademarks, PhotoEnhance and UltraSmooth are trademarks, and Epson PhotoCenter, Epson Store, SoundAdvice, and Epson Connection are service marks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

The ENERGY STAR emblem does not represent EPA endorsement of any product or service.

Contents

Welcome!	7
PRINT Image Matching and Exif Print	8
About PRINT Image Matching	8
About Exif Print	9
About Your Software	9
About Your Documentation	10
Viewing the On-screen Reference Guide	11
Printer Buttons	12
Loading Paper	13
Loading Paper in the Sheet Feeder	14
Loading Special Paper in the Sheet Feeder	16
Loading Multiple Sheets of Matte Paper	17
Loading Special Paper in the Single Sheet Guide	18
Loading Roll Paper	22
Printing From Start to Finish	27
Basic Printing in Windows	28
Selecting the Settings You Use Most Often	30
Customizing Your Windows Print Settings	31
Basic Printing With Mac OS X	33
Customizing Your Macintosh Print Settings	38
Selecting the Correct Media Type	40

Printing Special Photos	41
Printing on Roll Paper	41
Selecting Roll Paper Print Settings	42
Removing Your Printed Photos	45
Removing and Storing Roll Paper	46
Using PRINT Image Matching	46
Using the P.I.M. II Plug-in for Adobe Photoshop	47
Printing Borderless Cut Sheets	48
Windows	49
Mac OS X	50
Managing Color With Profiles	52
Printing With a Color Profile	52
Solving Color Management Problems	61
Printing a Custom Profile Test Target	61
Creating a Custom Profile	65
Easy Printing With Photoshop Elements 3.0	66
Printing on CDs and DVDs	69
Cleaning the Roller	70
Inserting a CD or DVD	70
Printing Your Design	73
Adjusting the Print Position	74
Adjusting the Print Density	75

Maintaining Your Printer	77
Cleaning the Print Head	77
Automatically Checking and Cleaning the Print Head	78
Running the Head Cleaning Utility	79
Replacing an Ink Cartridge	80
Checking the Ink Supply	81
Purchasing Ink Cartridges	81
Ink Cartridge Precautions	82
Removing and Installing Ink Cartridges	82
Aligning the Print Head	84
Automatically Aligning the Print Head	84
Manually Aligning the Print Head	85
Cleaning the Printer	86
Transporting the Printer	87
Solving Problems	89
Printer Parts	90
Printer Lights	91
Diagnosing Printer Problems	91
Running a Printer Check	93
Problems and Solutions	94
Setup and Software Installation Problems	94
Printer Problems	95
Quality Problems	96
Paper Problems	98
CD/DVD Problems	100
Miscellaneous Problems	100
Uninstalling and Reinstalling Printer Software	102
Where To Get Help	103
Technical Support for Other Photo Software	104

Requirements and Notices	105
Windows System Requirements	105
Macintosh System Requirements	105
Important Safety Instructions	106
Ink Cartridge Safety Instructions	107
ENERGY STAR Compliance	107
FCC Compliance Statement	108
Declaration of Conformity	109
Epson America, Inc. Limited Warranty	109
Index	113

Welcome!

Your Epson Stylus® Photo R1800 gives you beautiful archival prints on a wide variety of glossy and matte papers in many sizes.

Your outstanding printouts result from these advanced features:

- Eight individually-replaceable Epson® ink cartridges let you print at up to 5760 × 1440 dpi (dots per inch).
- Large gamut, pigment-based, Epson UltraChrome Hi-Gloss™ inks and compatible papers deliver brilliant, long-lasting, water-resistant prints.
- Unique gloss optimizer cartridge provides a uniform gloss coat on glossy papers so your prints look like they came from a photo lab.
- Ink droplets as small as 1.5 picoliters give you finer detail and highlights.
- Photo Black and Matte Black ink cartridges for optimum print density on many types of paper without switching cartridges.
- Large format capabilities let you print panoramics, portraits, and specialty prints up to 13 × 44 inches.
- Versatile paper handling lets you create BorderFree®, frame-ready prints in popular sizes, including 4 × 6, 5 × 7, 8 × 10, 13 × 19, and others.
- Direct printing on the surface of ink-jet printable CDs and DVDs for expressive disc labels.
- Roll paper feeder for continuous printing of multiple photos or panoramics.
- Automatic print head cleaning and alignment utilities analyze your print quality and improve it quickly and easily.
- Fast connections through Hi-Speed USB 2.0 and FireWire® (IEEE 1394) ports.

Note: To achieve the highest USB speed, your computer must also have a Hi-Speed USB 2.0 port connected to the printer with a Hi-Speed USB 2.0 cable.

PRINT Image Matching and Exif Print

Your Epson Stylus Photo R1800 printer supports these innovative digital image formats to give you the best photo prints possible:

- PRINT Image Matching® (both P.I.M. and P.I.M. II)
- Exif Print

About PRINT Image Matching

Epson's revolutionary PRINT Image Matching (P.I.M.) technology lets your digital camera and printer work together automatically to produce the best prints possible. Digital camera manufacturers that support PRINT Image Matching include Epson, Casio®, Fujifilm, JVC®, Konica®, Kyocera®, Leica®, Minolta®, NEC, Nikon®, Olympus®, Pentax®, Ricoh®, Sanyo®, Sharp, Sony®, and Toshiba®. Check with your camera's manufacturer or visit www.printimagematching.com to find out if PRINT Image Matching technology is included with your camera.

With PRINT Image Matching, the digital camera manufacturer can set specific printing options for each camera model. These options include:

- contrast, sharpness, and brightness
- gamma level, color space, color saturation, and noise reduction
- shadow point, highlight point, and color balance

The camera saves this information in each JPEG or TIFF image file. Your printer—along with the P.I.M. II Plug-in for Adobe® Photoshop® (included with your printer)—uses the information to ensure the most accurate image reproduction.

But don't worry if your camera doesn't include PRINT Image Matching technology—your Epson Stylus Photo R1800 gives great photo printing results, just without the adjustments P.I.M.-enabled cameras may add.

About Exif Print

The Exif (Exchangeable Image File) Print format includes information about your digital camera settings in JPEG/TIFF files so your printer and application can use them to create accurate print settings. Most digital cameras store Exif Print information such as shutter speed, metering, flash, and exposure settings, resolution, and lens use in the JPEG/TIFF image file. Your printer—along with the P.I.M. II Plug-in for Adobe Photoshop—uses the information to ensure the most accurate image reproduction.

About Your Software

Your printer CD-ROM includes all the software you need for printing. See the *Start Here* sheet for installation instructions.

- **Your printer driver** runs your printer and lets you control how your documents look. You can't print without it.

Tip: It's a good idea to check Epson's support web site periodically for free updates to your printer driver. Visit <http://support.epson.com>. Download instructions are posted for your convenience.

- **Your photo software** includes these great tools:

P.I.M. II Plug-in for Adobe Photoshop lets you retain PRINT Image Matching, P.I.M. II, and Exif Print image quality when you import JPEG or TIFF files from your P.I.M.-enabled digital camera into Photoshop 6.0, 7.0, and CS, or Photoshop Elements 1.0, 2.0, and 3.0.

EPSON Print CD lets you print directly on ink jet printable CDs and DVDs.

Easy Photo Print works with certain photo printing applications to make controlling printing on your Stylus Photo R1800 fast and easy.

EPSON RAW Print (for Windows) helps you open and print RAW-formatted images.

Epson Premium ICC Color Profiles work with Adobe Photoshop and other software applications to control the colors in your prints on various paper types. You can download additional profiles at <http://support.epson.com>.

Epson PhotoCenterSM is Epson's free photo-sharing web site where you can store, organize, and share your photos; print high-resolution photos straight from the web; and create free online postcards. Your printer software installer lets you add a link to Epson PhotoCenter on your desktop.

About Your Documentation

To set up your printer and install its software, see the *Start Here* sheet.

This book contains system requirements, important safety information, your warranty, and instructions on:

- Loading all types of paper
- Printing with Windows® or MacOS® X
- Printing on ink jet printable CDs and DVDs
- Maintaining the printer
- Solving basic problems

Please follow these guidelines throughout:

Warnings must be followed carefully to avoid bodily injury.

Cautions must be observed to avoid damage to your equipment.

Notes contain important information about your printer.

Tips contain hints for better printing.


For more details about your printer, network setup instructions and specifications, see your on-screen *Reference Guide*, as described in the next section.

Viewing the On-screen Reference Guide

Follow the instructions on the *Start Here* sheet to install the on-screen *Reference Guide*, if you haven't already.

Note: You need a browser—such as Microsoft® Internet Explorer 4.0 or later, Safari™ 1.0 or later, Mozilla Firefox 1.0 or later, or Netscape® Navigator® 3.0 or later—to view the manual. If you are using a different browser, the pages may not display correctly.

1. Double-click the **SPR1800 Reference Guide** icon on your desktop.
2. Click a topic on the left to expand the table of contents.
3. Click on the topic you want to view.
 - If there's a right arrow , click it to view subtopics, then click on a topic.
 - If there's a down arrow , click it to close a subtopic list.

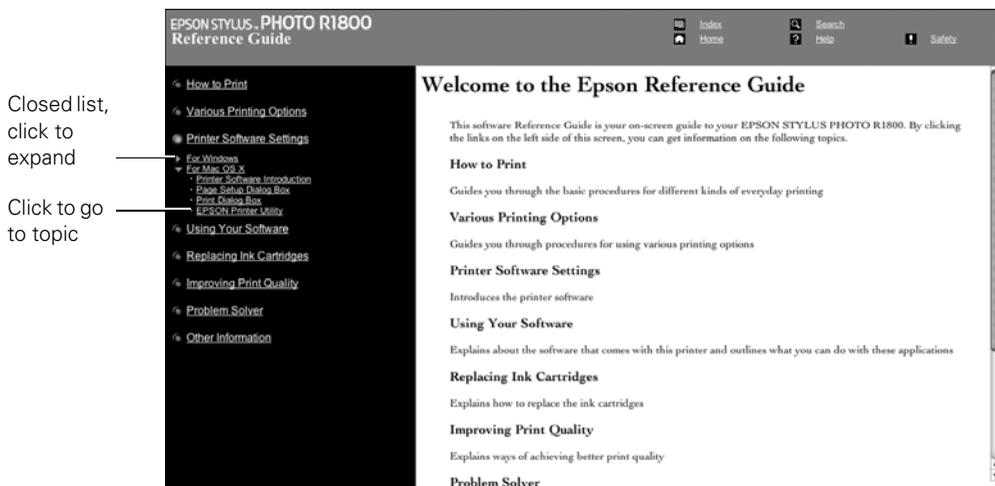

Note: If you see an icon for a graphic when viewing your *Reference Guide* in Netscape Navigator, click the **Reload** button to load the graphic.

Printer Buttons

The tables below summarize the functions of the printer buttons.

Printer buttons

Button	Uses
 paper	Loads or ejects paper. Resumes printing after a paper-out or multiple-sheet-feed error. Cancels a print job while printing.
 ink	Moves the print head to the ink cartridge replacement position and returns it to its home position. Cleans the print head. Hold down the button for three seconds when the red  ink light is off.
 roll paper	Prints a cutting guideline and feeds roll paper to the removal position after roll paper printing. Returns roll paper to the printing position after cutting. Reverses roll paper out of the printer when held down for 3 seconds.
 power	Turns the printer on and off. Hold down the button until the Power light comes on or goes off.

Loading Paper


You can load a variety of paper types in your printer, as described in these sections:

Paper/Media	Where to load	See page
Plain paper Epson Premium Glossy Photo Paper Epson Premium Semigloss Photo Paper Epson Premium Luster Photo Paper Epson Photo Quality Ink Jet Paper Epson Photo Quality Self Adhesive Sheets Epson Premium Bright White Paper Epson Enhanced Matte Paper* Epson Matte Paper Heavyweight* Epson Double-Sided Matte Paper*	Sheet feeder	14, 16
Epson UltraSmooth™ Fine Art Paper PremierArt™ Matte Scrapbook Photo Paper for Epson Epson Velvet Fine Art Paper Epson Watercolor Paper - Radiant White	Single sheet guide	18
Roll paper	Roll paper holder	22
Ink jet printable CDs and DVDs	CD/DVD tray	70


* This matte paper requires the matte sheet support when loading multiple sheets larger than letter-size; smaller paper can be loaded without it. See page 16.

Loading Paper in the Sheet Feeder


1. Open the paper support and pull up the support extensions.

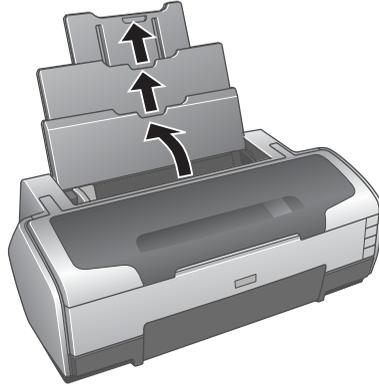

2. Push in the bottom of the output tray. The tray opens and moves up.

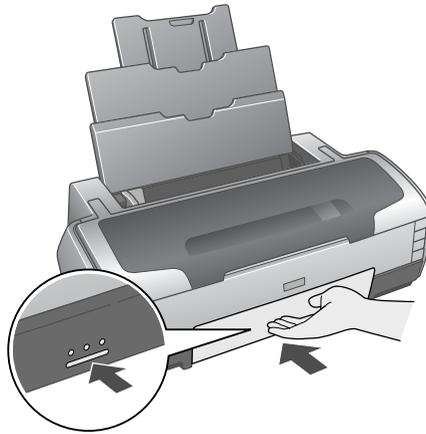

3. Pull out the output tray extension.
4. Place your paper in the printer and slide it against the right side of the sheet feeder.

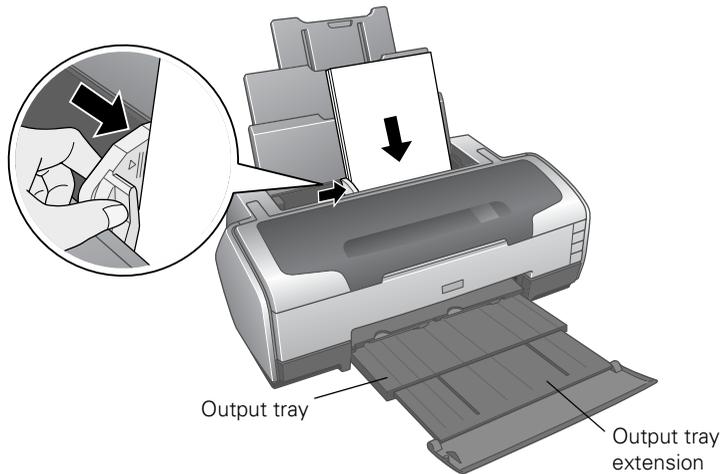

Check the following as you load paper:

- Always load the short edge first, even for printing landscape-oriented documents.
 - Load the printable side face up. It's usually whiter or brighter than the other side.
 - Load letterhead or preprinted paper into the printer top edge first.
 - Don't load paper above the arrow on the left edge guide.
5. Adjust the left edge guide to fit lightly against the paper.


Loading Special Paper in the Sheet Feeder

You can load these Epson ink jet papers in the sheet feeder as follows:

Paper type	Loading capacity
Epson Enhanced Matte Paper* Epson Matte Paper Heavyweight* Epson Double-Sided Matte Paper* Epson Premium Glossy Photo Paper Epson Premium Semigloss Photo Paper Epson Premium Luster Photo Paper	20 sheets (10 sheets for A3 or Super B sizes)
Epson Photo Quality Ink Jet Paper	100 sheets (50 sheets for A3 or Super B sizes)
Epson Premium Bright White Paper	80 sheets
Epson Photo Quality Self Adhesive Sheets	1 sheet at a time

* This matte paper requires the matte sheet support when loading multiple sheets larger than letter-size; smaller paper can be loaded without it. See page 16.

If the special paper has a cut corner, load the paper so the cut corner is positioned as shown here. Check the paper package for additional handling instructions.

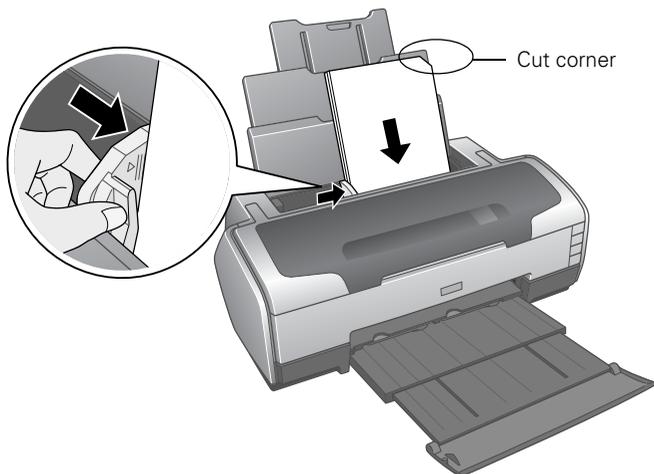


Note: Always keep unused paper in the original package and store it flat to prevent curling.

Loading Multiple Sheets of Matte Paper


If you are loading multiple sheets of the following papers in sizes larger than letter (8.5 × 11 inches), attach the matte sheet support to the top of the sheet feeder to help separate the sheets of paper:

- Epson Enhanced Matte Paper
- Epson Matte Paper Heavyweight
- Epson Double-Sided Matte Paper

1. Open the paper support and pull up its extensions.

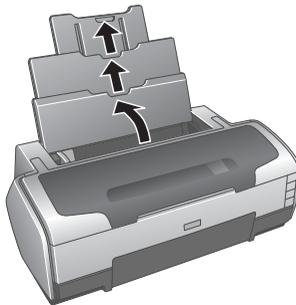

2. Place the hooks on the back of the matte sheet support over the paper support extension, then slide it all the way down.

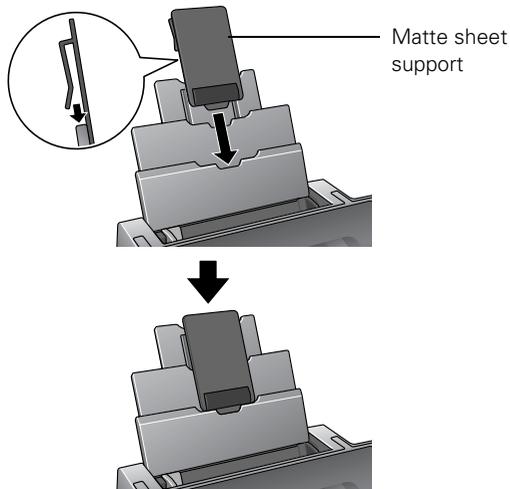


Note: Remove the matte sheet support when you load other types of paper.


Loading Special Paper in the Single Sheet Guide

Load these types of paper in the single sheet guide:


- Epson Watercolor Paper - Radiant White
 - Epson Velvet Fine Art Paper
 - Epson UltraSmooth Fine Art Paper
 - PremierArt Matte Scrapbook Photo Paper for Epson
1. Remove the roll paper holder, if it's installed (see page 22); make sure the CD/DVD tray guide is closed (see page 70); and close the paper support and its extensions.
 2. Slide the roll paper edge guide all the way to the right.

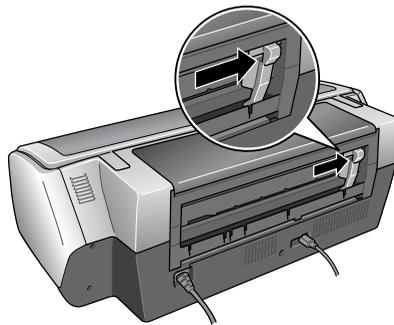


3. Line up the notches on the single sheet guide with the slots on the back of the printer and insert them as shown. Then insert the tabs on the top of the guide into the slot beneath the printer cover.

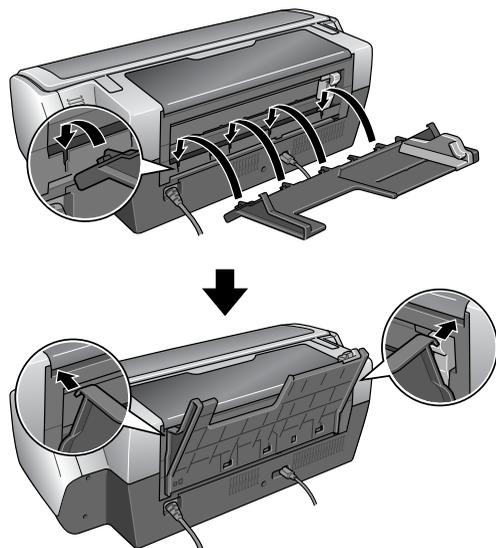


4. Turn on the printer (the printer must be on to load paper in the single sheet guide correctly).
5. Insert one sheet of paper against the right edge, then slide the edge guide against the sheet.

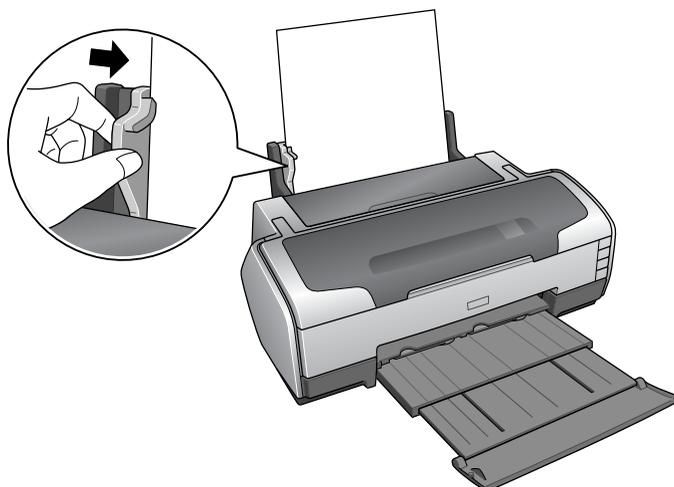


6. Guide the paper into the slot and feed it into the printer until the paper meets resistance.

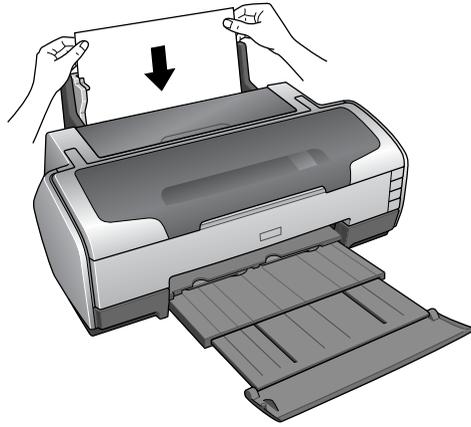

7. Maintain a constant pressure against the paper until the printer pulls the paper in slightly. Let go of the paper to allow the printer to adjust the paper position.

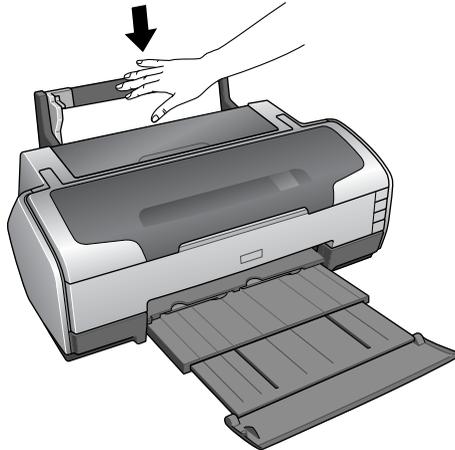

8. Open the printer cover and look down into the printer to make sure the paper is straight; if not, press the ↶ roll paper button for 3 seconds to back the paper out. Press the ↷ paper button to clear the paper out error, then load the paper again.

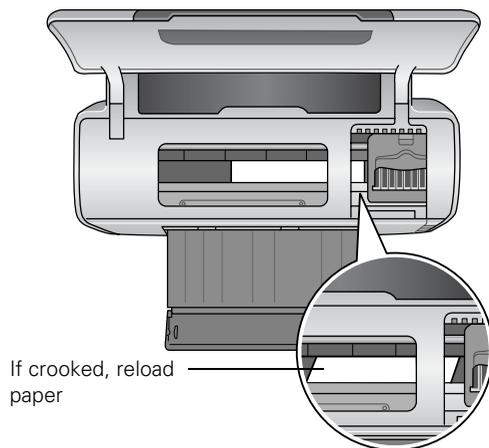


9. Before printing, select **Manual - Roll** as the Source setting (Windows) or **Manual - Roll** as the Paper Source setting (Macintosh) in your printer software (see page 28 for Windows or page 33 for Macintosh).

Loading Roll Paper


You can load 4-inch, 8.3-inch, or 13-inch wide roll paper for printing multiple photos or panoramics, with or without borders.

Tip: It's a good idea to check your ink levels before loading and printing on roll paper. (See page 81.) If you need to replace a cartridge with roll paper loaded, you should remove the paper or marks may appear in your printout.


1. Turn on the printer and remove any paper loaded in the sheet feeder at the top of the printer.
2. If the output tray and extension are open, push them in, but leave the flap at the end of the tray down.
3. Swing out the roll paper guides until they are straight.

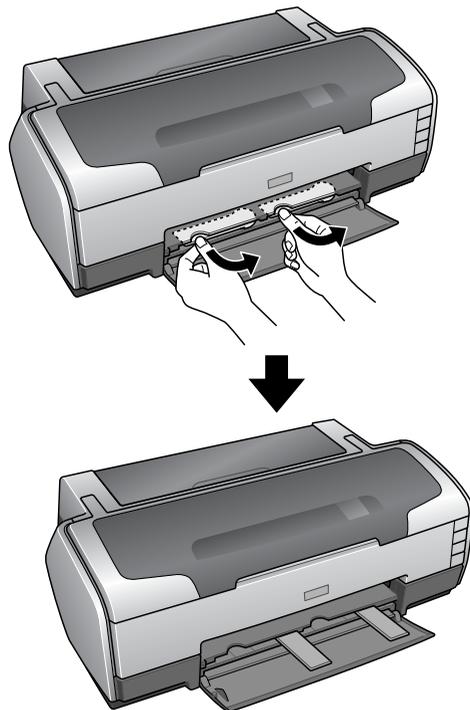

4. Place the roll paper on the holders as shown, then remove the tape and protective paper from the end of the roll.

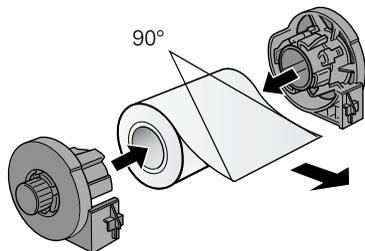


5. Make sure the end of the paper is cut straight across, with 90° corners. If the end is cut diagonally, you may have problems feeding the paper.
6. If the paper curls at the end, roll it backwards between a folded sheet of paper to uncurl it.

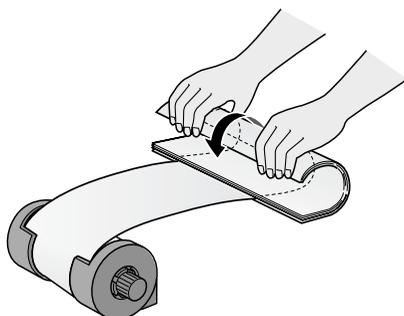


Avoid touching the printable surface of the roll paper.

7. Insert the left roll paper holder (marked with an orange triangle) into the far left slot (also marked with an orange triangle). Then insert the other holder into the corresponding slot on the right.

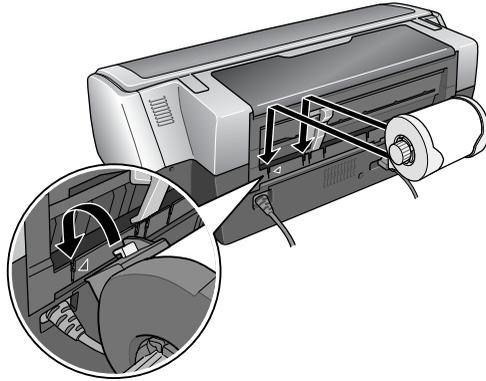


8. Load the paper part of the way into the roll paper feeder (under the white rollers), then slide the right roll paper edge guide to fit lightly against the paper.

Caution: Don't load roll paper into the sheet feeder or the slot behind the paper support; make sure it is below the white rollers.

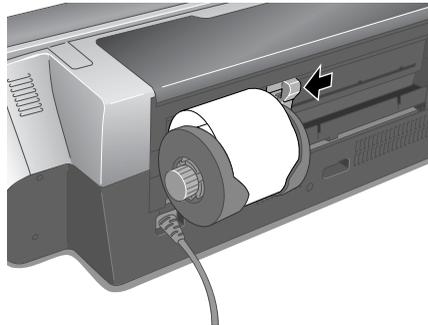

9. Push the paper into the feeder as far as it will go; the printer feeds the paper automatically.

10. To verify that the paper is loaded straight, open the printer cover and look into the printer.

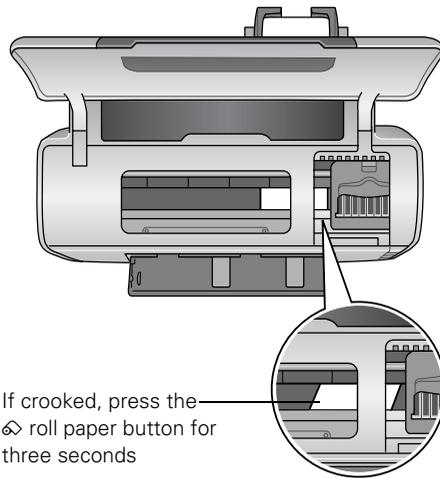

If the paper is crooked, press the  roll paper button for three seconds to back the paper all the way out.

Then turn the roll paper holder knobs to roll up the paper. Press the  paper button to clear the paper out error. Repeat steps 7 through 9 to reload the paper.

Follow the instructions on page 41 to print on roll paper.

Printing From Start to Finish

Follow the steps in these sections to print using your printer's basic features:

- “Basic Printing in Windows” on page 28
- “Customizing Your Windows Print Settings” on page 31
- “Basic Printing With Mac OS X” on page 33
- “Customizing Your Macintosh Print Settings” on page 38
- “Selecting the Correct Media Type” on page 40

To print on roll paper or borderless cut sheets, or to print P.I.M. or color-managed photos, see “Printing Special Photos” beginning on page 41.

Note: During printing, the left paper guide moves away from the paper slightly. Do not re-adjust this while the printer is printing. The printer will re-adjust the edge guide once printing is complete.


Tip: Whenever you print, make sure you:

- **Use the right paper.**
For the best-looking photos, most vivid colors, and greatest detail, always use genuine Epson papers and Epson UltraChrome Hi-Gloss inks.
- **Choose the right printer settings for the paper.**
Your printer automatically adjusts itself for the type of paper you've selected, so make sure your printer settings are correct for the paper you loaded.


Basic Printing in Windows

Follow these steps to print a document or image using the basic printer settings:

1. From the File menu, click Print. You see a Print window like this one:

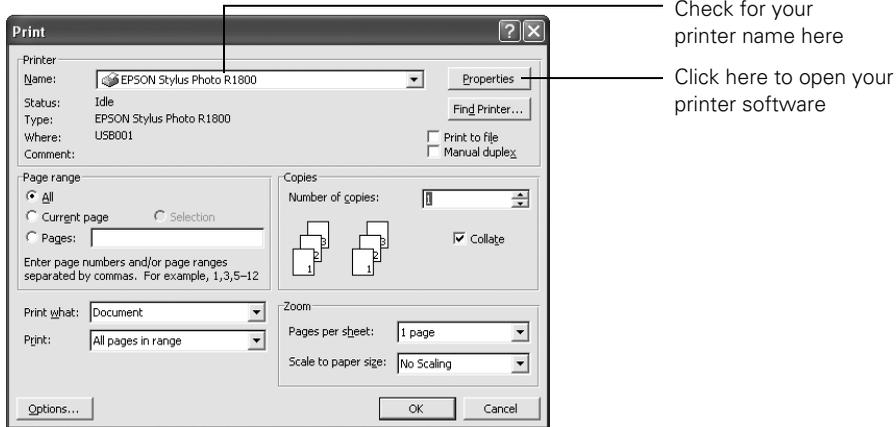

2. Make sure EPSON Stylus Photo R1800 is selected.
3. Click the Properties or Preferences button. (If you see a Setup, Printer, or Options button, click it first.)
4. Click the Main tab in the printer settings window to see your basic settings.

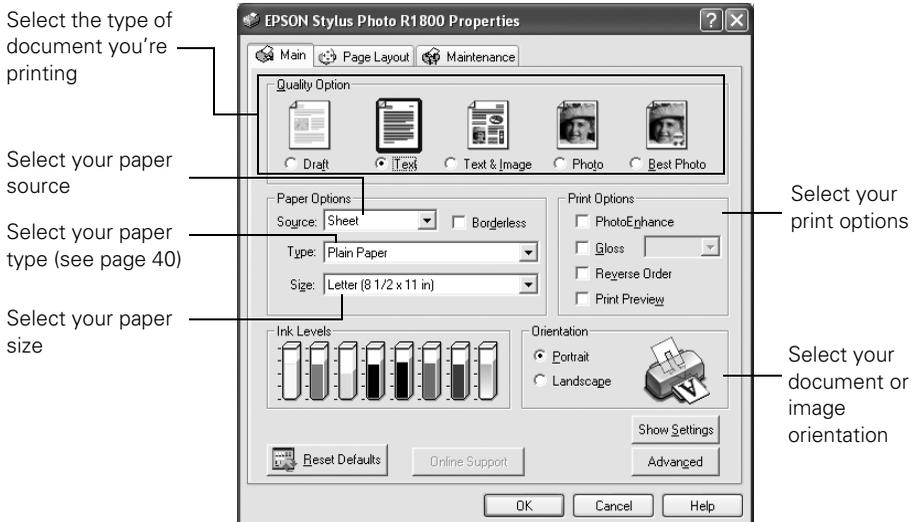

5. Select one of these document types as the Quality Option setting:
 - **Draft:** For rough drafts with reduced print quality
 - **Text:** For text-only documents (like letters) with good print quality
 - **Text & Image:** For documents with text and images with higher print quality
 - **Photo:** For photos and graphics with good print quality and speed
 - **Best Photo:** For photos or graphics with high print quality
6. Select the way your paper is loaded as the Source setting:
 - **Sheet:** For paper loaded in the sheet feeder at the top of the printer
 - **Roll:** For roll paper loaded in the roll paper feeder on the back of the printer (see page 41)
 - **Manual - Roll:** For paper loaded in the single sheet guide (see page 18)
 - **CD/DVD:** For CDs or DVDs loaded in the CD/DVD tray (see page 69)
7. Select the type of paper you loaded as the Type setting. See page 40 for details.


Note: For printing photos without borders on certain paper types, click the **Borderless** checkbox. See page 48 for details.
8. Select the size of paper you loaded as the Size setting.
9. Select the direction you want your image or document to print as the Orientation setting. Select **Portrait** for vertical orientation or **Landscape** for horizontal.
10. Select any other options you want to use in the Print Options box:
 - **PhotoEnhance™:** Improves the contrast, saturation, and color balance of low-resolution photos (affects only your printout)
 - **Gloss:** Applies gloss optimizer on certain paper types. **Auto** applies it only to the image area; **Full** applies it to the entire page
 - **Reverse Order:** Prints multiple page documents last-page-first so you don't need to reorder the pages
 - **Print Preview:** Displays a preview of your printed image or document before printing so you can check it for position on the page

Note: For more information about printer settings, click the ? or **Help** button. For additional print settings, click the **Advanced** button at the bottom of the screen and see page 31 for details.

11. Click **OK**. You return to the Print window.

12. Click **OK** or **Print** to start printing.

During printing, this window appears. Use it to cancel, pause, or resume printing and see how much ink you have left.

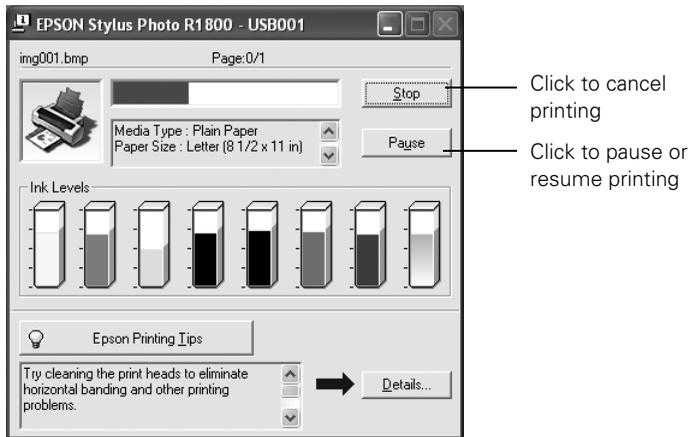

Caution: Don't open Epson Status Monitor, pause printing, or respond to ink messages when your printer is printing. This may cause your printer to pause and leave an uneven surface on your printout. If ink is low, wait until printing finishes before checking ink levels or replacing a cartridge. If you replace an ink cartridge in the middle of a print job, the quality of your printout may decline. For best results, check ink levels and replace cartridges, if necessary, before printing large or high-resolution print jobs.

Selecting the Settings You Use Most Often

Your printer settings apply only to the program you're currently using. If you want, you can change the Windows default printer settings for all your programs.


1. Right-click the  printer icon in the lower right corner of your screen.
2. Select **Printer Settings**. You see the window shown on page 28.
3. Select the default settings you want for all your applications, then click **OK**.

You can still change the printer settings in individual programs, if necessary.

Customizing Your Windows Print Settings

Follow these steps to print a document or image using advanced printer settings in Windows:

1. On the Main tab, click the **Advanced** button in the bottom right corner.
2. Click **Continue**. The Basic settings change to the Advanced settings:

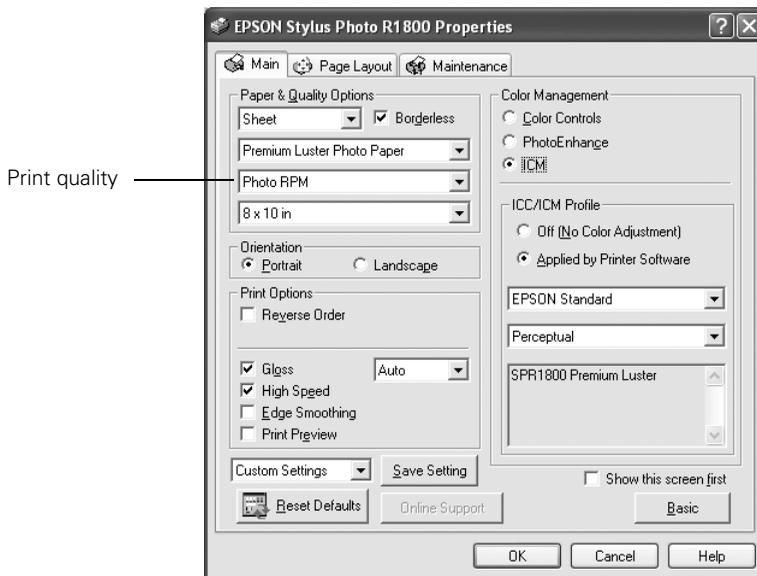

Note: If you want to use the Advanced screen each time you access your printer settings, select the **Show this screen first** checkbox.

3. The Advanced settings include the same options as the Basic settings, plus these:
 - **Print quality:** Lets you specify a print quality for your selected paper type, including Photo RPM® for the highest print quality (5760 × 1440 dpi) on certain paper types. (Printing takes longer in this mode.)
 - **High Speed:** Speeds up printing by allowing printing back and forth across the page, instead of in just one direction. (Print quality may decrease.)
 - **Edge Smoothing:** Prints smoother edges on low-resolution images, such as bars in a graph.

- **Color Controls:** Lets you adjust the Brightness, Contrast, Saturation, and Cyan, Magenta, and Yellow color levels in your printout.
- **ICM:** Uses standard color profiles for your printer to match colors in your image. If you're using custom or Epson Premium ICC profiles in a program such as Photoshop, select ICM then click **Off (No Color Adjustment)**.

Caution: Incorrectly applying this function or using it in an incomplete color management workflow may result in excessively light or dark prints.

Note: To print with custom color profiles using Photoshop, see “Managing Color With Profiles” on page 52.

- Once you've finished selecting advanced settings, you can:
 - Click **OK** to save your settings, return to the Print dialog box, and print.
 - Click the **Basic** button to return to the Basic settings.
 - Click the **Page Layout** tab and continue with step 5 to select layout options.
- Select the following page layout settings as necessary:

Select image or document position options here

Select image or document resizing options here; these affect only your printed image

Add a watermark to your printed page here

Select multi-page document options here and here

Adjust the size of borderless images here (available when borderless is selected on the Main settings screen)

Note: For more information on printer settings, or instructions on saving them as a group so you can reuse them later, click the **Help** or ? button.

- Click **OK** to save your settings, return to the Print dialog box, and print.


Basic Printing With Mac OS X

Follow the steps below to print a document or image using the basic printer settings.


For roll paper printing, see page 41. For borderless printing, see page 48. For CD/DVD printing, see page 69.

Make sure you added your printer in the Printer Setup Utility or Print Center, as described on the *Start Here* sheet.

1. From the File menu, select **Page Setup**.
2. Open the **Format for** menu and select your printer.

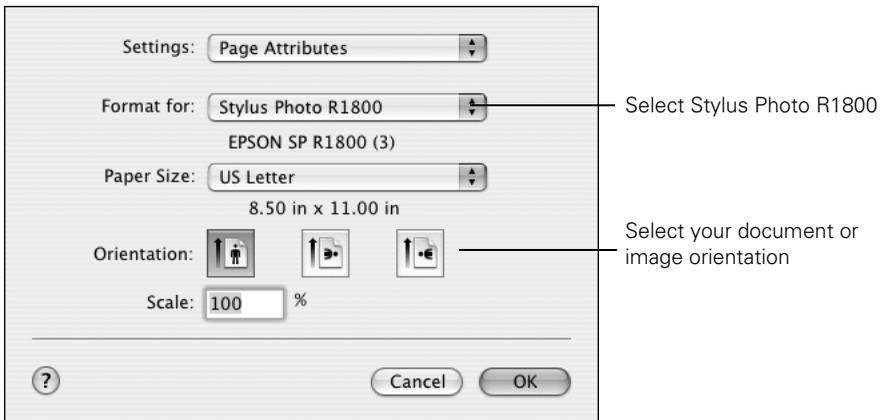

- Choose the paper size for the paper you loaded, then select the source setting from the submenu for that size.

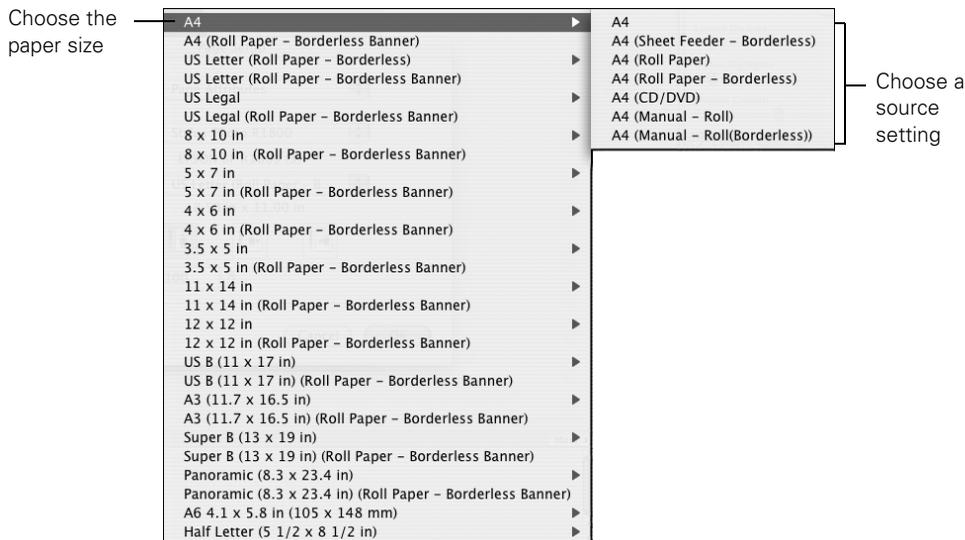

- For prints on paper loaded in the sheet feeder with borders around the image, select just a paper size in the menu and submenu.
- For borderless prints on paper loaded in the sheet feeder, select a size with **Sheet Feeder - Borderless** as the source.
- For prints with borders around the image on paper loaded in the single sheet guide, select a size with **Manual - Roll** as the source.
- For borderless prints on paper loaded in the single sheet guide, select a size with **Manual - Roll (Borderless)** as the source.


For roll paper printing instructions, see page 41.

For CD/DVD printing instructions, see page 69.


Note: For more information on borderless printing, see page 48.

Caution: When printing non-borderless print jobs using a custom paper size, make sure the selected size matches the paper you loaded and is within the printable area for your printer. For example, never choose a paper size wider than your printer's sheet feeder or longer than your paper length.

- Select the direction you want your image or document to print as the Orientation setting. Select  for vertical orientation,  for horizontal facing right, or  for horizontal facing left.
- Click OK.
- Select Print from the File menu. You see a screen like this:

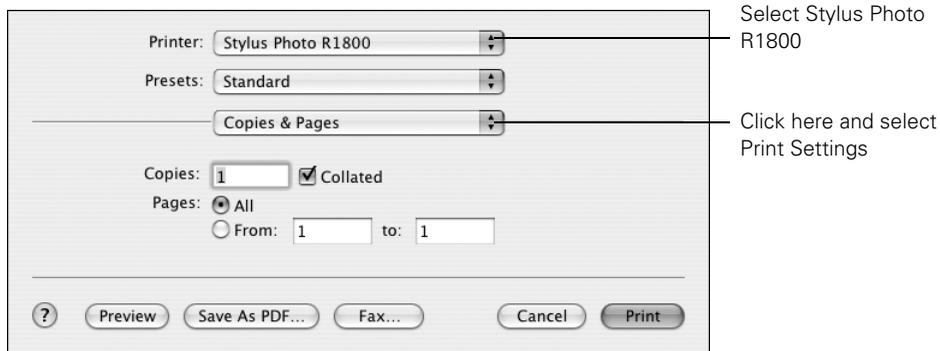

- Open the Printer menu and select Stylus Photo R1800.
- Select Print Settings from the pop-up menu. You see your basic print settings:

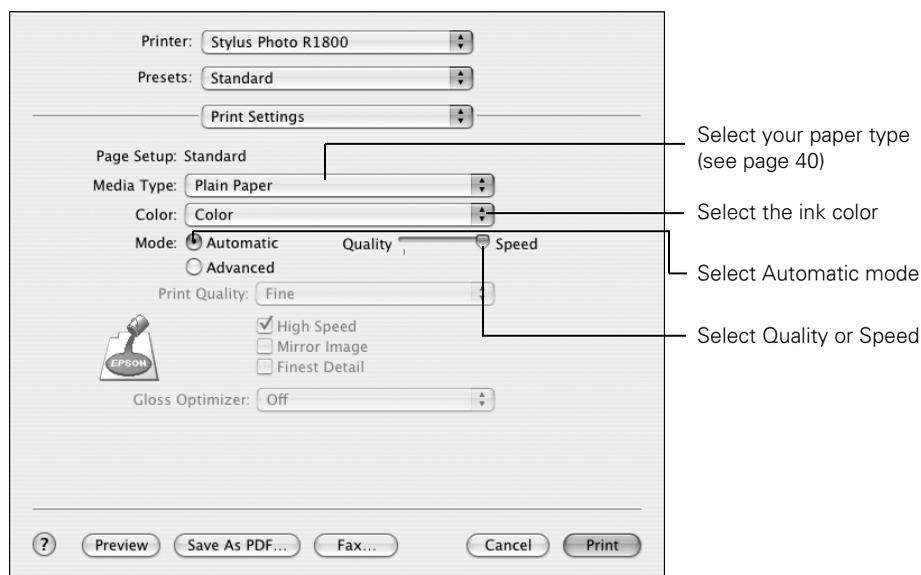

9. Select the type of paper you loaded as the **Media Type** setting. See page 40.

Note: If you can't choose your paper type, check your Page Setup settings to make sure you selected the correct paper size and source. (See page 34.)

10. For the ink setting, select **Color** (for color documents and black and white photographs) or **Black** (for black text documents).

11. Select **Automatic** as the **Mode** setting for the best results printing basic documents or images. (For instructions on using **Advanced mode**, see page 38.)

12. Move the slider to the **Quality** setting to print images or documents using higher print quality, or to the **Speed** setting for faster printing.

Note: For more information about printer settings, click **Help**.


13. You can also choose these options in the pop-up menu:

- **Copies & Pages**, to select the number of copies or a page range
- **Layout**, to select page layout options
- **Output Options**, to save your print job as a PDF file
- **Scheduler**, to specify a time for a document to print
- **Paper Handling**, to reverse page order and set other page options
- **ColorSync**, to select Quartz® filters through ColorSync®
- **Color Management**, to select ColorSync, adjust the color controls, change the gamma setting, or turn off color adjustments by the printer software (see page 39 for color management details)
- **Expansion** (if you selected a **Borderless** option as the paper size/source setting), adjusts the borderless image size to remove borders completely
- **Extension Setting**, select **Thick media** here to correct ink smearing when printing on thick paper
- **Summary**, to view a list of all your selections

14. Click **Print**.

Caution: Don't pause printing or respond to ink messages when your printer is printing. This may cause your printer to pause and leave an uneven surface on your printout. If ink is low, wait until printing finishes before checking ink levels or replacing a cartridge. If you replace an ink cartridge in the middle of a print job, the quality of your printout may decline. For best results, check ink levels and replace cartridges, if necessary, before printing large or high-resolution print jobs.

15. To monitor the progress of your print job, click your printer's  icon or the  Print Center icon when it appears in the dock. Then double-click **Stylus Photo R1800**. You see this screen:

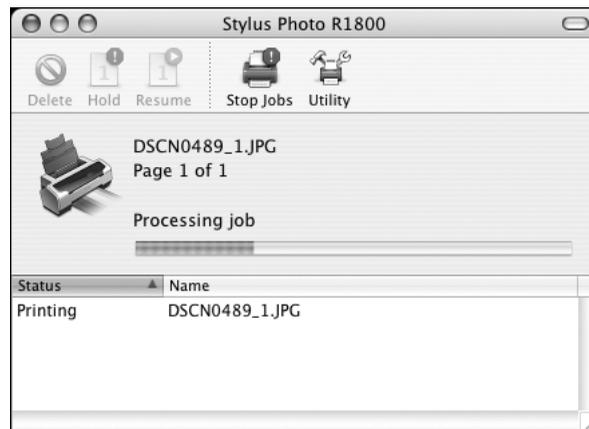


16. Monitor the progress of your print job or do one of the following:
 - Click the print job, then click **Delete** to delete the job
 - Click the print job, then click **HOLD** to pause printing
 - Click a print job marked “Hold” and click **Resume** to resume printing
 - If multiple print jobs are listed, click a print job, then click the **Priority** arrow as necessary to reorder the jobs
17. When you're finished, close your printer's status window (OS X 10.3) or Print Center (OS X 10.2).

Customizing Your Macintosh Print Settings

Follow these steps to print using advanced printer settings on a Macintosh®:

1. From the File menu, select **Print**.
2. Select **Print Settings** from the pop-up menu.
3. To access advanced settings, click **Advanced**.

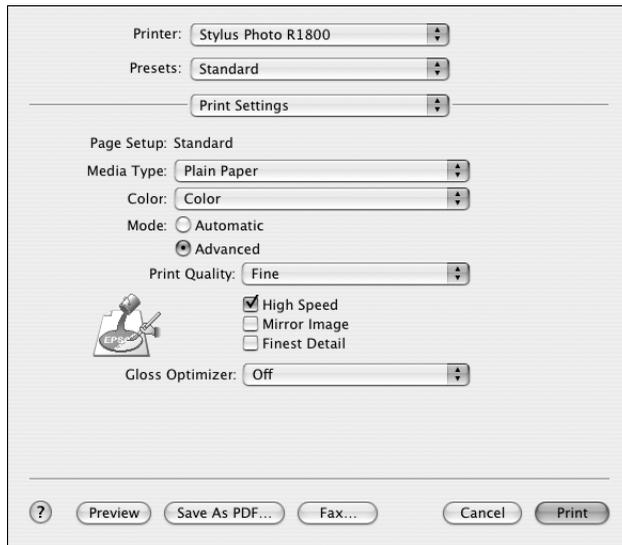

4. In addition to the basic settings, you can select these advanced options:
 - **Print Quality:** Lets you specify a print quality for your selected paper type, including **Photo RPM** for the highest print quality (5760 × 1440 dpi) on certain paper types. (Printing takes a bit longer in this mode.)
 - **High Speed:** Speeds up printing by allowing printing back and forth across the page, instead of in just one direction.
 - **Mirror Image:** Inverts the image horizontally.
 - **Finest Detail:** Places ink droplets in the most precise manner for high quality printing. (Printing takes longer in this mode.)
 - **Gloss Optimizer:** Applies gloss optimizer on certain paper types.

Note: For more information on advanced settings, or instructions on saving them as a group so you can reuse them later, click ?

5. To select Color Management options, select **Color Management** from the pop-up menu. Select Color Management options as follows:

- **Color Controls:** Let you adjust the Brightness, Contrast, Saturation, Gamma, and cyan, magenta, and yellow levels in your printout.
- **ColorSync:** Uses standard ColorSync profiles for your printer to help match colors in your image. [If you're using custom profiles or the Epson Premium ICC profiles in an application such as Adobe Photoshop, select **Off (No Color Adjustment)** instead.]
- **No Color Adjustment:** Turns off your printer's color management features so you can use profiles in an application such as Adobe Photoshop instead.

Note: To print with custom or Premium ICC color profiles when you're using Photoshop, see "Managing Color With Profiles" on page 52.

6. Click **Print**.

Selecting the Correct Media Type

Select the correct **Type** or **Media Type** setting so your printer knows what kind of paper you're using and adjusts the ink coverage accordingly.

Paper or other media loaded	Type or Media Type setting
Plain paper sheets Epson Premium Bright White Paper	Plain Paper
Epson Photo Quality Ink Jet Paper Epson Photo Quality Self Adhesive Sheets	Photo Quality Ink Jet Paper
Epson Enhanced Matte Paper	Enhanced Matte Paper
Epson Matte Paper Heavyweight PremierArt Matte Scrapbook Photo Paper for Epson	Matte Paper - Heavyweight
Epson Double-Sided Matte Paper	Double-Sided Matte Paper
Epson Premium Glossy Photo Paper	Premium Glossy Photo Paper
Epson Premium Luster Photo Paper	Premium Luster Photo Paper
Epson Premium Semigloss Photo Paper	Premium Semigloss Photo Paper
Epson Watercolor Paper - Radiant White Epson UltraSmooth Fine Art Paper	Watercolor Paper - Radiant White
Epson Velvet Fine Art Paper	Velvet Fine Art Paper
Ink jet printable CDs or DVDs	CD/DVD
Ink jet printable CDs or DVDs with a premium surface	CD/DVD Premium Surface

Printing Special Photos

When you need to print photos using the special Stylus Photo R1800 printing features, follow the instructions in these sections:

- “Printing on Roll Paper” below
- “Using PRINT Image Matching” on page 46
- “Printing Borderless Cut Sheets” on page 48
- “Managing Color With Profiles” on page 52
- “Easy Printing With Photoshop Elements 3.0” on page 66

Printing on Roll Paper

Before you print on roll paper, load roll paper as described on page 22.

Then follow the steps in the next sections to select your roll paper settings, control printing, and remove and store roll paper.

Caution: Don't open Epson Status Monitor, pause printing, or respond to any on-screen, low ink messages when your printer is printing. This may cause your printer to pause and leave an uneven surface on your printout. If your ink is running low, wait until printing finishes before checking ink levels or attempting to replace a cartridge. If you must replace an ink cartridge in the middle of a print job, the quality of your printout may decline. For best results, check your ink levels and replace ink cartridges, if necessary, before printing large or high-resolution print jobs.

Selecting Roll Paper Print Settings

Follow the steps in one of these sections to select your roll paper print settings:

- “Windows” below
- “Mac OS X” on page 43

Windows


1. Start your print application, open your photo file, and resize it as necessary.
2. Open the File menu, click Print, then click Properties or Preferences.
3. Select the type of roll paper you loaded as the Type option:
 - Premium Semigloss Photo Paper
 - Premium Luster Photo Paper
 - Premium Glossy Photo Paper
4. If you’ll be printing photos without any borders, click the Borderless box.
5. Select the photo size as the Size setting.



If you’re printing a panoramic photo, select **User Defined** from the Size list and enter the size of your photo. Make sure the width of your photo is 4, 8.3, or 13 inches maximum, depending on the width of the roll paper you loaded. Also set the margins to 0 in your printing software.

Note: Don’t select any of these settings when printing on roll paper: PhotoEnhance, Reverse Order. For the source, don’t choose Sheet, Manual - Roll, or CD/DVD.

6. Choose **Roll** as the Source setting. The Roll Paper Options dialog box pops up:

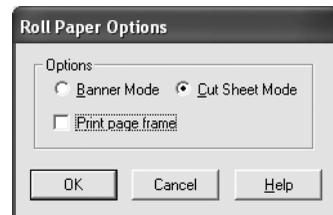


7. Select the roll paper settings based on the type of printing you're doing, then click **OK**:

Type of printing	Roll Paper Options
Borderless photos	Cut Sheet Mode or Banner Mode
Photos with borders or panoramics	Cut Sheet Mode

8. Click **OK**.
9. Click **OK** or **Print**. Follow the steps on page 45 to remove your printed photos.

Mac OS X

1. Start your print application, open your photo file, and resize it as necessary.
2. Click **File > Page Setup**.
3. Select **Stylus Photo R1800** as the Format for setting:

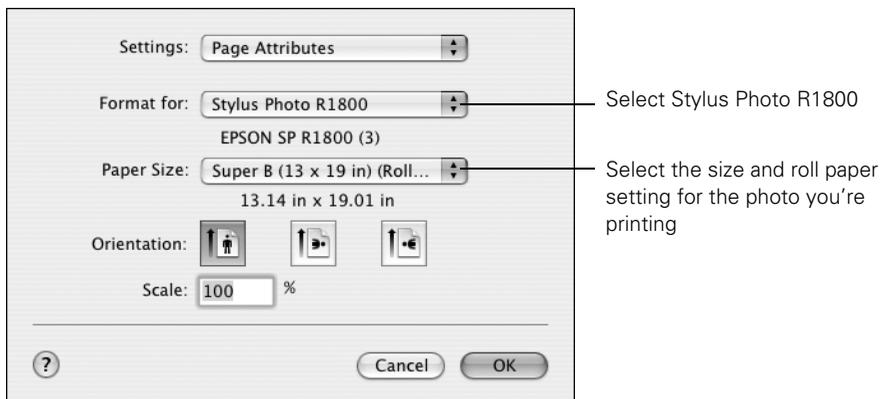


4. Select the **Roll Paper** or **Roll Paper - Borderless** setting for your photo size as the Paper Size setting.

To print without a border between photos, choose the **Roll Paper - Borderless Banner** setting for your photo size.


Make sure the width of your photo is 4, 8.3, or 13 inches maximum, depending on the width of the roll paper you loaded. Also set the margins to 0 in your printing software.

5. Click **OK** to close the Page Setup dialog box.
6. Click **File > Print** to open the printer settings dialog box.
7. For the Printer setting, select **Stylus Photo R1800**.

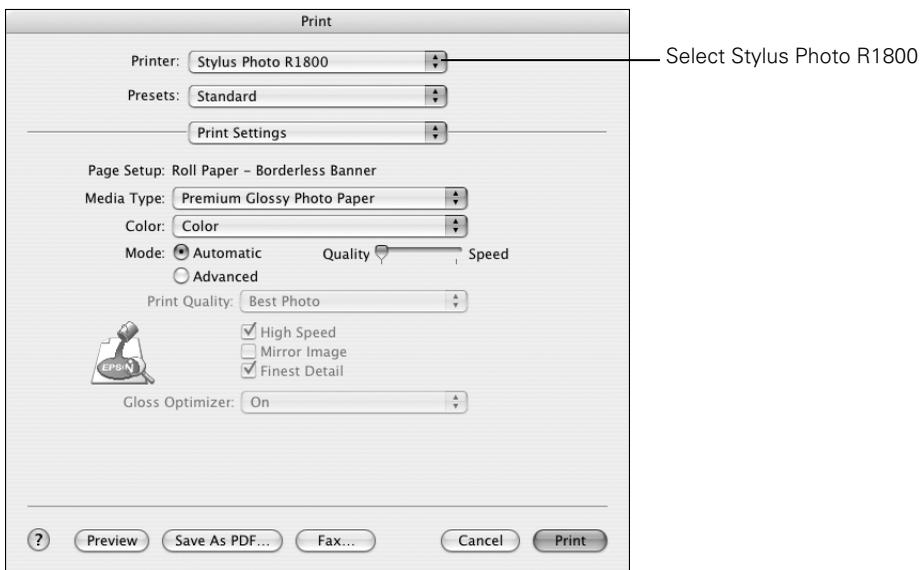

8. Select **Print Settings** from the pop-up menu.
9. Select the type of roll paper you loaded as the Media Type option:
 - Premium Semigloss Photo Paper
 - Premium Luster Photo Paper
 - Premium Glossy Photo Paper
10. Move the slider to the **Quality** setting (if available).

11. Choose Roll Paper Option from the pop-up menu.

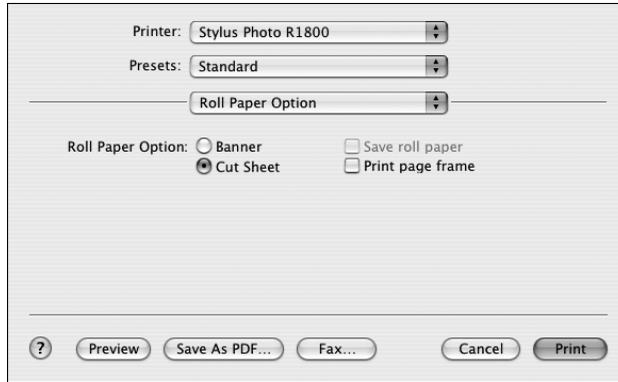

12. Select the roll paper settings based on the type of printing you're doing.


Type of printing	Roll Paper Options
Borderless photos	Cut Sheet Mode or Banner Mode
Photos with borders or panoramics	Cut Sheet Mode

13. When you're finished, click Print.

14. Follow the steps below to remove your printed photos.


Removing Your Printed Photos

1. Press the  roll paper button once to feed the paper forward.
2. Cut the paper on the printed cutting line.
3. If you want to print another job on roll paper, press the  roll paper button once again; the paper returns to the correct print position.
4. Follow the steps in the next section if you're finished printing on roll paper.

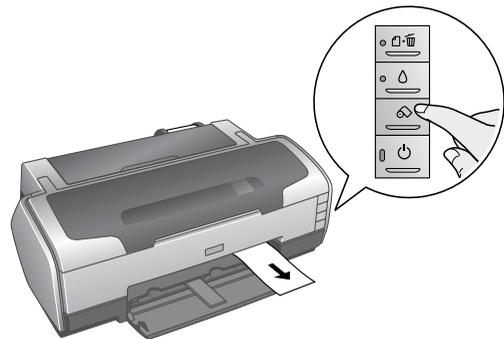

Removing and Storing Roll Paper

1. Press the  roll paper button for three seconds. The paper feeds backwards out of the printer. (If it doesn't feed all the way out, repeat this step.)

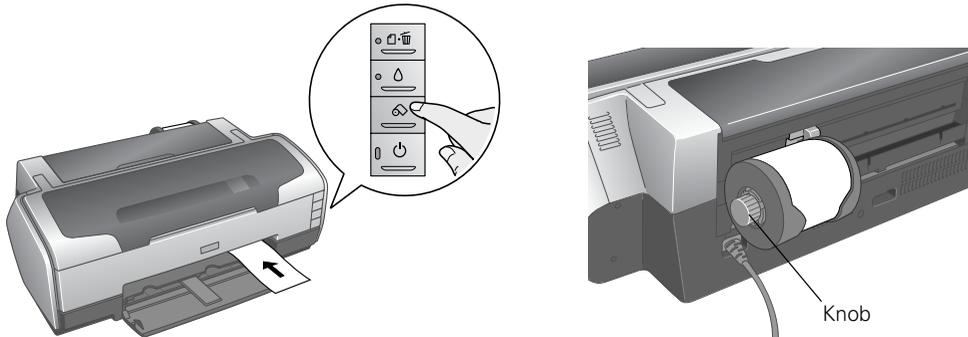

2. Turn the knobs to roll the rest of the paper onto the holder. Then press the  paper light.
3. Pull the roll paper holder off of the printer and remove the roll paper from it.

Return the unused roll to its original package. Store your printouts in resealable plastic bags, photo albums, or glass-covered picture frames. Keep both printed and unused roll paper away from high temperatures, humidity, and direct sunlight.

Using PRINT Image Matching

With PRINT Image Matching, special print instructions are saved in your digital photo files. For example, macro mode pictures might include print commands for sharpness and clarity, while portrait mode pictures might emphasize soft focusing and subtle flesh tones. If your digital camera supports PRINT Image Matching (P.I.M. or P.I.M II), you can use this technology when you print with the P.I.M. II Plug-in for Adobe Photoshop.

Using the P.I.M. II Plug-in for Adobe Photoshop

The P.I.M. II Plug-in for Adobe Photoshop allows you to retain the P.I.M. or Exif Print *image quality* when you import JPEG or TIFF files from your P.I.M.- or Exif Print-enabled digital camera. The P.I.M. II Plug-in works with Photoshop 6.0, 7.0, and CS, and Photoshop Elements 1.0, 2.0, and 3.0. You'll also need to install the Premium ICC profiles for your printer that are included on the printer CD-ROM and that are available for download from <http://support.epson.com>.

Photoshop doesn't retain the PRINT Image Matching or Exif Print information separately in the header file when you import your P.I.M. or Exif Print image. Instead, it converts that information in the file and embeds a color space called EPSON RGB 2001. This profile supports all the P.I.M. color advantages and enhancements.

You can crop, rotate, resize, work with layers, play with filters, and even make selective color adjustments to the P.I.M. image while retaining P.I.M. quality. However, you won't benefit from global color adjustments (such as Auto Levels, Auto Contrast, Auto Color, etc.). Also, if you try to use your new Photoshop file in another P.I.M.-enabled software program, it won't be recognized as a P.I.M. image. You need to keep your original file to take advantage of P.I.M. information in other programs.

For instructions on using the P.I.M. II Plug-in, double-click the **P.I.M. II Plug-In.pdf** icon on your desktop.

Printing Borderless Cut Sheets

You can print your photos with no margins, extending the image all the way to the edges of the page. Although borderless printing is a bit slower, you get beautiful portraits and enlargements, without trimming, on these papers:

- Epson Premium Glossy Photo Paper
- Epson Matte Paper Heavyweight*
- Epson Enhanced Matte Paper*
- Epson Double-Sided Matte Paper *
- Epson Premium Luster Photo Paper
- Epson Premium Semigloss Photo Paper
- Epson Watercolor Paper - Radiant White
- Epson Velvet Fine Art Paper**
- Epson UltraSmooth Fine Art Paper**
- PremierArt Matte Scrapbook Photo Paper for Epson**

*If you are loading multiple sheets of matte paper that are larger than letter-size, use the matte paper support. See page 17.

**These papers must be loaded in the single sheet guide. See page 18.

Caution: Don't open Epson Status Monitor, pause printing, or respond to any ink messages when your printer is printing. This may cause your printer to pause and leave an uneven surface on your printout. If your ink is running low, wait until printing finishes before checking ink levels or attempting to replace a cartridge. If you must replace an ink cartridge in the middle of a print job, the quality of your printout may decline. For best results, check your ink levels and replace ink cartridges, if necessary, before printing large or high-resolution print jobs.

Follow the steps for your operating system in these sections to print BorderFree photos on cut sheet paper.

- “Windows” below
- “Mac OS X” on page 50


Windows

1. Start your printing application and open your photo file.
2. Open the File menu and click **Print**, then click **Properties** or **Preferences**.
3. Select **Photo** or **Best Photo** as the Quality Option.
4. Choose **Sheet** as the Source setting.
5. Select the type of paper you loaded as the Type setting. See page 40 for details.
6. Click the **Borderless** checkbox.
7. Select your paper size as the Size setting.
8. Select **Portrait** or **Landscape** as the orientation setting.
9. Click the **Page Layout** tab, then adjust the Expansion setting. Choose **Min** for the least amount of image expansion (with a chance that there may be small borders around the edges) or **Max** for the greatest amount of expansion (some of the image will be cut off around the edges, but it will extend to the edge of the paper).
10. Click **OK**.
11. Click **OK** or **Print**.




Mac OS X

1. Start your printing application and open your photo file.
2. Click File > Page Setup.
3. Select **Stylus Photo R1800** as the Format for setting.

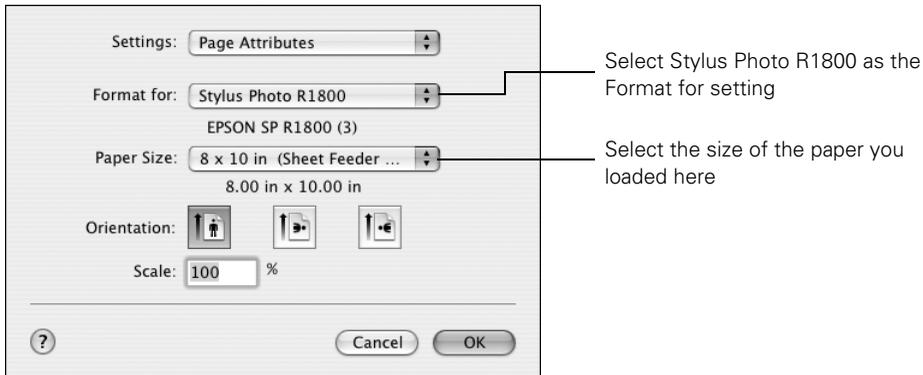

4. Select the size of the paper you loaded with a **Sheet Feeder - Borderless** source as the Paper Size setting.
5. Select one of the portrait or landscape orientation icons as the Orientation setting.
6. Click **OK**.

7. Click **File > Print**.

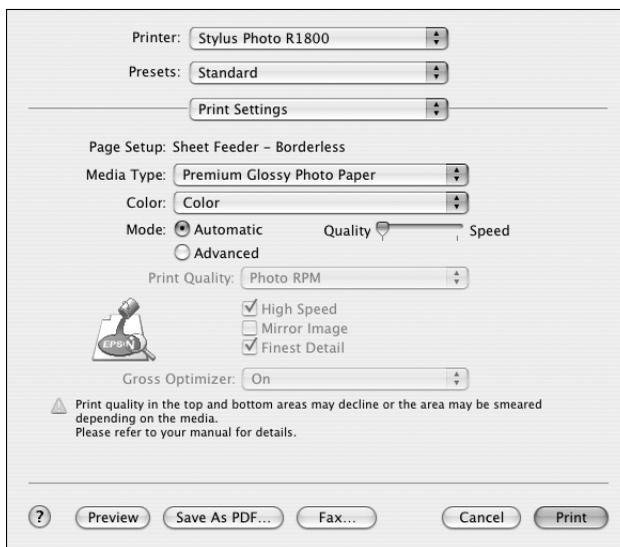

8. For the Printer setting, select **Stylus Photo R1800**.

9. Select **Print Settings** from the pop-up menu.

10. Select the type of paper you loaded as the Media Type setting. See page 40.

Note: If you can't choose your paper type, check your Page Setup settings to make sure you selected the correct paper size and source. (See page 34.)

11. Move the slider to the **Quality** setting.

12. Choose **Expansion** from the pop-up menu, then adjust the Expansion setting. Choose **Min** for the least amount of image expansion (with a chance that there may be small borders around the edges) or **Max** for the greatest amount of expansion (some of the image will be cut off around the edges, but it will extend to the edge of the paper).

13. Click **Print**.

Managing Color With Profiles

Follow the steps in this section to use color profiles for printing with Adobe Photoshop (the instructions cover Photoshop CS).

Carefully follow the instructions in these sections for the best results:

- “Printing With a Color Profile” below
- “Solving Color Management Problems” on page 61
- “Printing a Custom Profile Test Target” on page 61
- “Creating a Custom Profile” on page 65


Printing With a Color Profile

To print an image using a profile, follow the steps in the appropriate section for your operating system below.


Mac OS X

Opening Your Image


1. Open Adobe Photoshop.
2. Select Color Settings from the Photoshop menu.
3. Select U.S. Prepress Defaults from the Settings pull-down menu. This sets Adobe RGB (1998) as the RGB working space and activates warning messages for profile mismatches and missing profiles. Click OK.

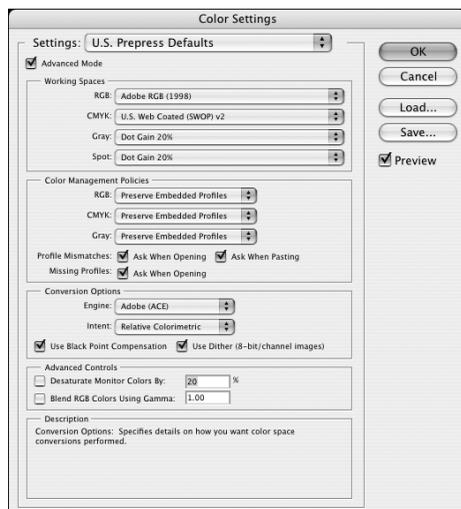

4. Open the photo you want to print.
5. If you see the message shown below, select **Use the embedded profile (instead of the working space)** option and click **OK**. It is generally best to use the embedded profile.

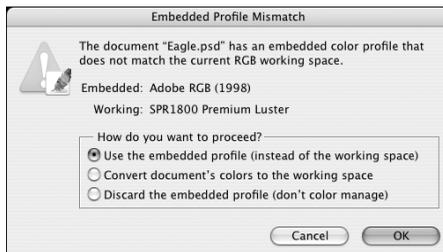

6. If you see the message shown below, select **Assign working RGB: Adobe RGB (1998)** and click **OK**.

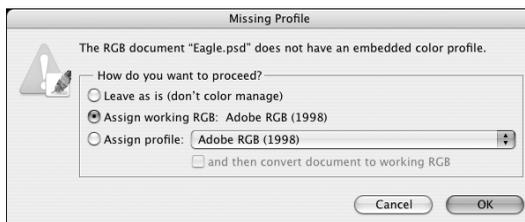


7. When your image appears, evaluate the color balance and contrast as displayed on your monitor. If they need improvement, select **Image > Mode > Assign Profile**. Select one of the following as the Profile setting:
 - A different RGB working space, such as **ColorMatch RGB** or **sRGB IEC61966-2.1**
 - A scanner profile for your scanner
 - A camera profile for your digital camera

Also click the **Preview** box so you can see the effects of your profile choice on the screen.


Note: Assigning a profile to the image doesn't alter the image data, only the interpretation of the data by your software and how it appears on your monitor and in a printout. This is the best way to improve the color balance and contrast in your image.

Selecting Your Print Settings

1. Select File > Print with Preview. You see this window:
2. Click the Page Setup button to change the page size and orientation settings as necessary, then click OK.

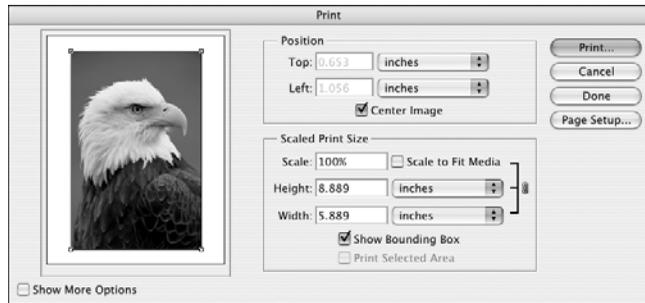

3. Click Show More Options. Select Color Management from the pop-up menu. Additional options appear:

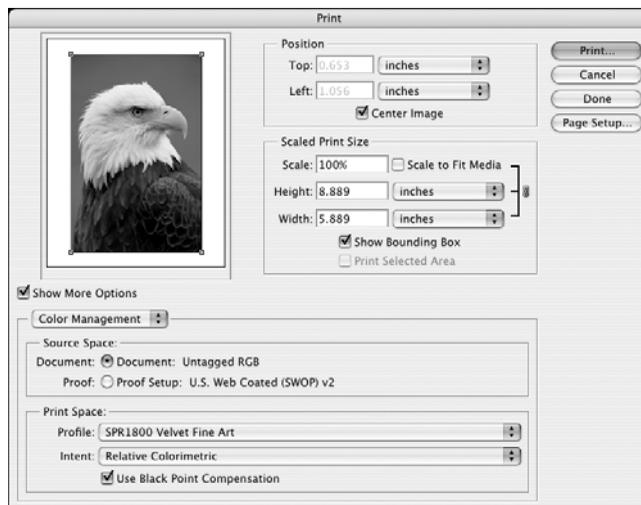

4. Under Print Space: Profile, select a profile for your printer and the paper you'll use for the print.

Note: The Epson Premium ICC profiles can be identified with the suffix ".icc," for example, "SPR1800 PrmGlsy BstPhoto.icc."


5. As the Print Space: Intent setting, select **Relative Colorimetric**.

Note: If your image contains very saturated colors, select **Perceptual** instead. This reduces the color saturation so that the colors fit within the printer's color gamut.

6. Select the **Use Black Point Compensation** checkbox.

Printing Your Color-Managed Photo


1. Click the Print button.
2. Select Stylus Photo R1800 from the Printer menu.
3. Select Print Settings from the pop-up menu.
4. Select the Media Type setting for the paper you'll use for the printer.
5. Click the Advanced button.
6. If you are using an Epson Premium ICC profile, set the Print Quality setting to match your profile.
7. If you are printing on Premium Glossy Photo Paper, Premium Semigloss Photo Paper, or Premium Luster Photo Paper, make sure Gloss Optimizer is set to On.
8. Turn *off* the High Speed option.

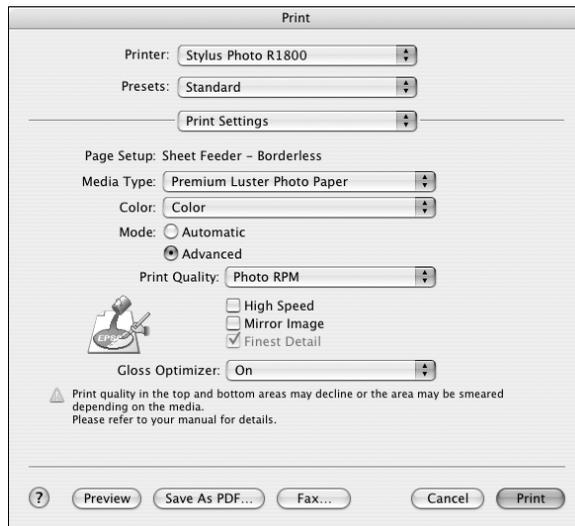

9. Select **Color Management** from the pop-up menu.

10. Select **Off (No Color Adjustment)**.

Note: Make sure that you select **Off (No Color Adjustment)**. If you don't, the printer driver will apply additional correction to the image data, producing inaccurate results.

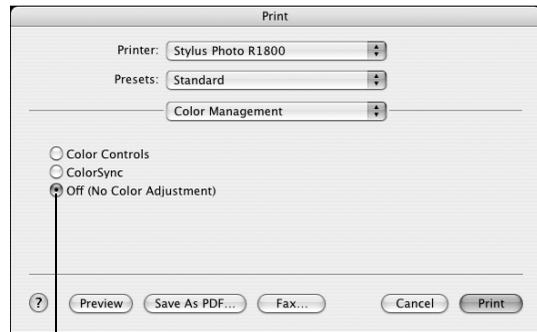

11. Click **Print** to print your photo.

IMPORTANT!

Select **Off (No Color Adjustment)**


Windows

Opening Your Image

1. Open Adobe Photoshop.


2. Select **Edit > Color Settings**.

3. Select **U.S. Prepress Defaults** from the Settings pull-down menu. This sets **Adobe RGB (1998)** as the RGB working space and activates warning messages for profile mismatches and missing profiles. Then click **OK**.

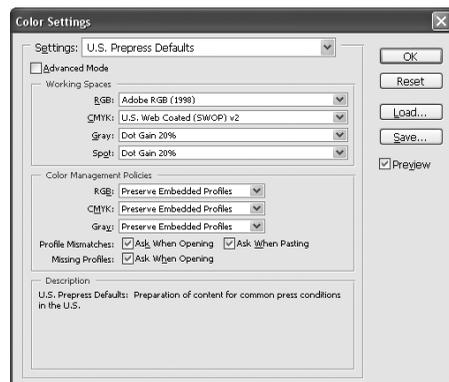


4. Open the photo you want to print.

5. If you see the message shown below, select **Use the embedded profile (instead of the working space)** option and click **OK**. It is generally best to use the embedded profile.

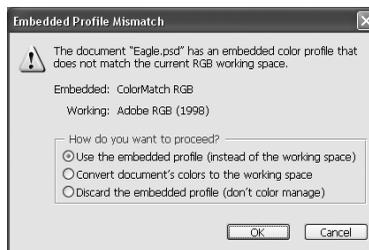

6. If you see the message shown below, select **Assign working RGB: Adobe RGB (1998)** and click **OK**.

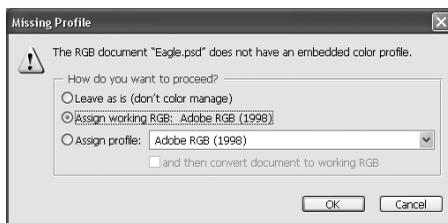


7. When your image appears, evaluate the color balance and contrast as displayed on your monitor. If they need improvement, select **Image > Mode > Assign Profile**. Select one of the following as the Profile setting:
 - A different RGB working space, such as **ColorMatch RGB** or **sRGB IEC61966-2.1**
 - A scanner profile for your scanner
 - A camera profile for your digital camera

Also click the **Preview** box so you can see the effects of your profile choice on the screen.

Note: Assigning a profile to the image doesn't alter the image data, only the interpretation of the data by your software and how it appears on your monitor and in a printout. This is the best way to improve the color balance and contrast in your image.


Selecting Your Print Settings

1. Select **File > Page Setup**.
2. Click the **Printer** button.

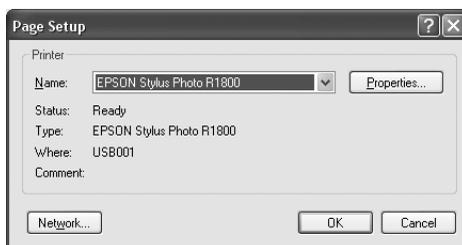

3. Make sure the correct printer is selected, then click **OK**.

4. Select the size of your paper as the **Size** setting.

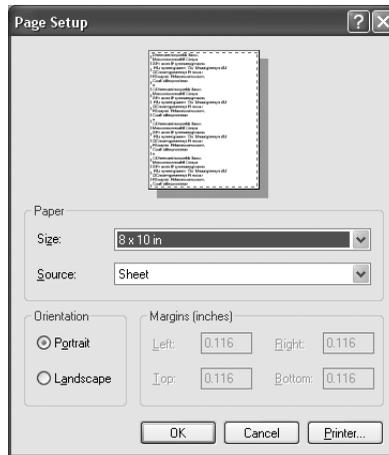

5. Select the orientation of your image.
6. Click **OK**.
7. Select **File > Print with Preview**.
8. Click **Show More Options**. If you see **Output**, select **Color Management** from the pull-down menu. Additional options appear:



9. Under **Print Space: Profile**, select a profile for your printer and the paper you'll use for the print.

Note: The Epson Premium ICC profiles can be identified with the suffix ".icc," for example, "SPR1800 PrmGlsy BstPhoto.icc."

10. As the **Print Space: Intent** setting, select **Relative Colorimetric**.


Note: If your image contains very saturated colors, select **Perceptual** instead. This reduces the color saturation so that the colors fit within the printer's color gamut.

11. Select the **Use Black Point Compensation** checkbox.

Printing Your Color-Managed Photo

1. Click the **Print** button.
2. Make sure your printer is selected, and click the **Properties** button.
3. Select the **Best Photo** or **PhotoRPM** setting as the **Quality Option**. (If you are using an Epson Premium ICC profile, set the **Print Quality** setting to match your profile.)
4. Select the **Type** setting for the paper you'll use for the print.
5. Click the **Advanced** button.
6. Turn *off* the **High Speed** and **Edge Smoothing** options, if they are available.

7. Click the ICM button under Color Management.

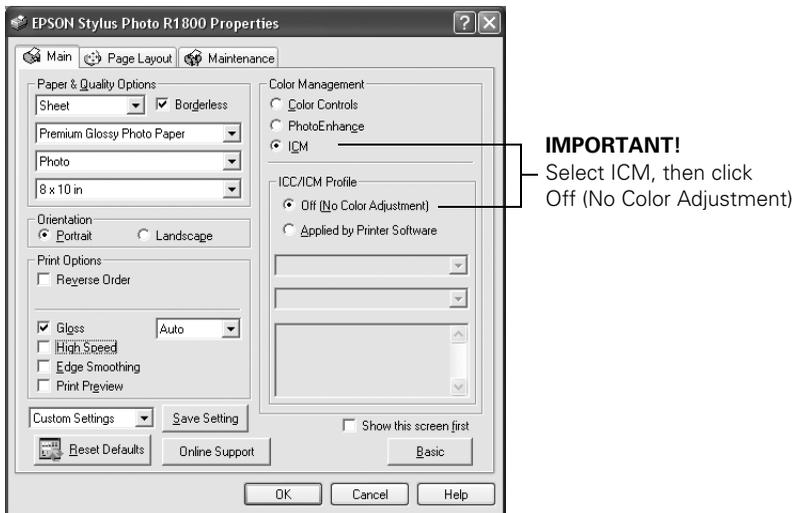

8. Click the Off (No Color Adjustment) button.

Note: Make sure that you select **Off (No Color Adjustment)**. If you don't, the printer driver will apply additional correction to the image data, producing inaccurate results.

9. If you are printing on Premium Glossy Photo Paper, Premium Semigloss Photo Paper, or Premium Luster Photo Paper, make sure the Gloss checkbox is selected.
10. Click OK.
11. Click OK to print.

Solving Color Management Problems

If you selected the wrong combination of source profile, printer profile, and color management settings, you'll get unexpected results. Try these solutions:

- If your printed image is darker than expected and/or has a strong yellow-brown cast, you probably turned off color management in both Photoshop and the Epson printer driver.

Return to the Print with Preview instructions for Adobe Photoshop on page 54 (for Mac OS X) or page 57 (for Windows). Make sure the Source Space - Document option is *not* set to **Untagged RGB**. Also make sure you selected the correct profile for your printer in the Print Space - Profile menu.

- If your printed image is lighter than expected and/or has a strong light blue cast, you probably turned on color management in both Photoshop and the Epson printer driver.

Return to the instructions on page 56 (for Mac OS X) or page 60 (for Windows). Make sure to select **Off (No Color Adjustment)** in the printer driver Advanced screen or Color Management menu to turn off color management in your Epson printer driver.

Printing a Custom Profile Test Target


Follow the steps in this section to create and print individual custom profile test targets for each paper type you plan to print on.

When you're ready to print the test target, follow the steps for your operating system below.


Mac OS X

1. Open Adobe Photoshop and open the profile target file provided by your profile-building software manufacturer.
2. If you see a missing profile screen, select **Leave as is (don't color manage)**.
3. Select **File > Print with Preview**.
4. In the Print window, click the **Show More Options** checkbox, then choose **Color Management** in the pop-up menu.

5. Select **Same as Source** as the Print Space: Profile setting.

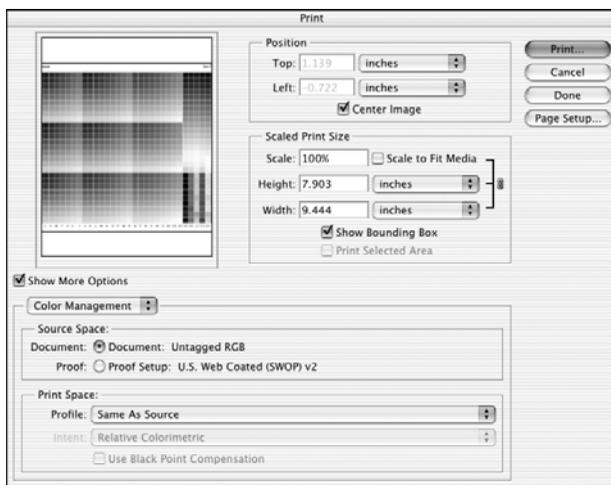


6. Click the **Page Setup** button.

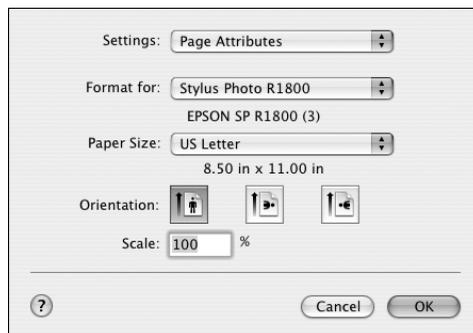

7. Select **Stylus Photo R1800** from the Format for menu.
8. Select the appropriate Paper Size and Orientation settings, then click **OK**.
9. Click the **Print** button.
10. Select your printer from the Printer menu, then select **Print Settings** from the pop-up menu.

11. Select the Media Type setting for the profile you're printing.

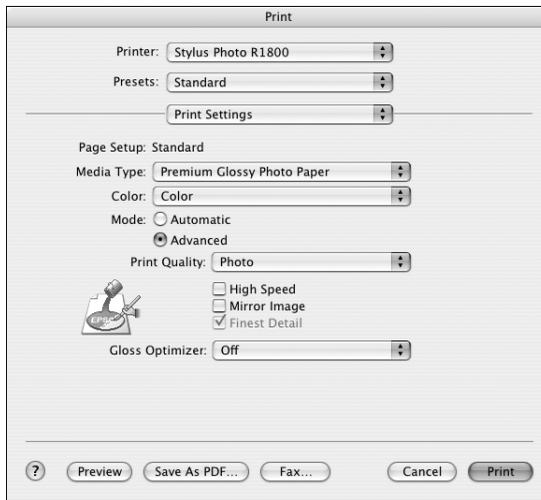

12. Click the **Advanced** button.

13. Select your desired level as the **Print Quality** setting.


14. Turn *off* the **High Speed** option.

15. Select **Color Management** from the pop-up menu.

16. Click **Off (No Color Adjustment)**.

IMPORTANT!

Select **Off (No Color Adjustment)**

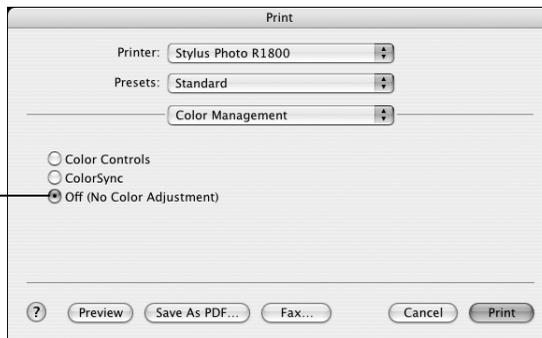


17. Click **Print** to print your test target.

18. Repeat these steps to print a test target for each paper type and **Print Quality** setting you plan to print with.

Windows

1. Open Adobe Photoshop and open the profile target file.
2. If you see a missing profile screen, select **Leave as is (don't color manage)**.
3. Select **File > Print with Preview**.
4. In the Print window, click the **Show More Options** checkbox, then choose **Color Management** in the drop-down menu.
5. Select **Same as Source** as the Print Space: Profile setting.
6. Click the **Print** button.
7. Click the **Properties** button.
8. Select your desired level as the Quality Option.

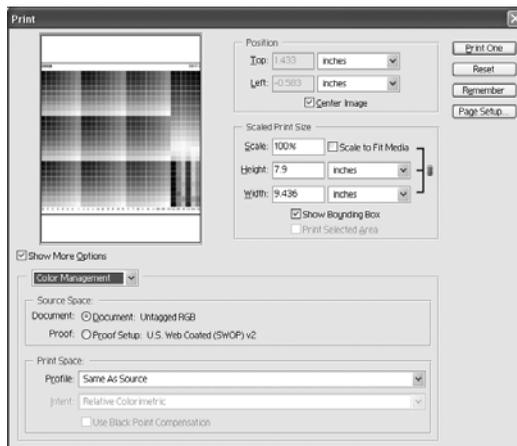


9. Select the Type setting for the paper you'll use for the print.



10. Click the **Advanced** button.
11. Turn **off** the High Speed and Edge Smoothing options, if they are available.

12. Click the ICM button under Color Management.
13. Click the Off (No Color Adjustment) button.

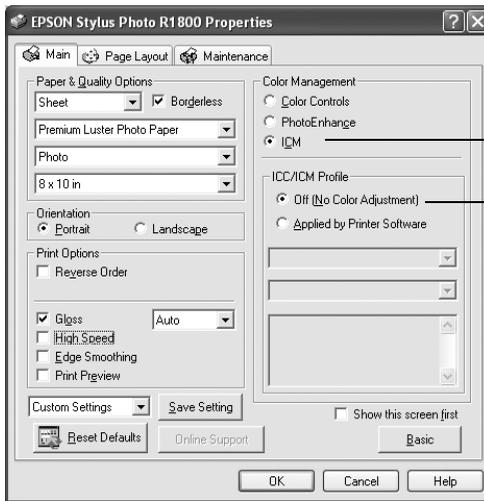

14. Click OK.
15. Click OK to print.
16. Repeat these steps to print a test target for each paper type and Quality Option setting you plan to print with.

Creating a Custom Profile

If you're creating a custom profile for your printer, follow the instructions provided with your profile-building software (such as MonacoEZcolor by X-Rite or GretagMacbeth ProfileMaker) to create your custom profile using the test target you printed. Once you create the profile, be sure to place it in the correct folder on your computer, as recommended by Microsoft or Apple.®

Easy Printing With Photoshop Elements 3.0

If you are using Adobe Photoshop Elements 3.0 with Windows, you can take advantage of the Epson EasyPrint interface when you're ready to print. It lets you select your basic settings directly from the Print window, so you don't need to open the Properties or Preferences window to access the printer driver.

This one-stop printing feature also prevents conflicts between software and driver settings by making them both match.

Complete instructions for using Adobe Photoshop Elements 3.0 are provided in the *Getting Started Guide* installed with Photoshop Elements. Follow these steps to open Elements and access the EasyPrint interface:


1. To start the program, double-click the **Adobe Photoshop Elements 3.0** icon on your desktop.
2. Select **View and Organize Photos**. You see the Photo Browser workspace and **Organizer** at the top of the screen.
3. Open the folder containing the photo(s) you want to print. Select **Get Photos** from the File menu and choose an option such as **From Files and Folders**. Then select the photo(s).

If you need to edit a photo, go to step 4. If you are ready to print, go to step 5.

4. To edit a photo, click the **Edit** button and choose either **Go To Quick Fix** or **Go To Standard Edit**. When you finish editing and are ready to print, click **Photo Browser** to return to Organizer mode. Do not print from Editor mode.

Note: If you print in Editor mode, you do not see the Epson EasyPrint interface and you must click **Print > Print > Properties** to access the printer driver settings.

5. Select **Print** from the File menu. You see the Epson EasyPrint interface:

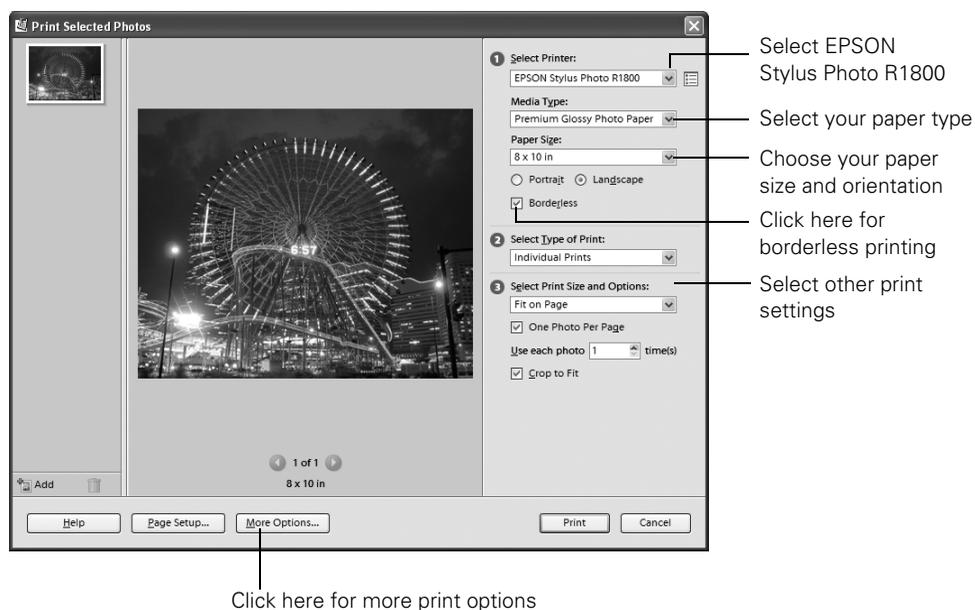

6. Change your print settings, as necessary.

7. Click **Print** to start printing.

Printing on CDs and DVDs

Your printer includes a special tray that lets you print customized text, graphics, and photos directly on any ink jet printable CD or DVD. The Epson Print CD software makes it easy to import your own photos, add text, and modify your designs with a variety of special effects. You can print on both regular 12-cm discs and 8-cm mini CDs.

Caution: Use only ink jet-printable CDs or DVDs for printing. Do not use thermal-printable or regular CDs or DVDs.

You can order CDs and DVDs with an ink jet printable surface from your local retailer or a website such as www.pcmall.com, www.cdw.com, www.warehouse.com, www.zones.com, www.macconnection.com, and www.pcconnection.com.


Follow the steps in these sections to print on your CDs or DVDs:

- “Cleaning the Roller” on page 70
- “Inserting a CD or DVD” on page 70
- “Printing Your Design” on page 73
- “Adjusting the Print Position” on page 74
- “Adjusting the Print Density” on page 75

Cleaning the Roller

Before you print on CDs or DVDs, you may need to clean the roller inside the printer. You can do this by feeding and ejecting several sheets of plain paper.

1. Open the output tray and extension.
2. Open the paper support and pull up the support extensions.
3. Turn on the printer and load several sheets of letter-size paper.
4. Press the  paper button to feed the paper.
5. Press the  paper button again to eject the paper.
6. Repeat steps 4 and 5 several times to completely clean the roller.

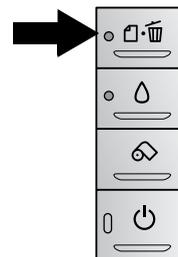

Inserting a CD or DVD

Make sure the data, music, or video is burned on your ink jet printable CDs or DVDs before you print. Otherwise, dirt or scratches on the surface may cause errors when you burn the data. If you plan to print large numbers of CDs or DVDs, it's a good idea to print a small sample, then wait a day and check the quality to make sure it is satisfactory.


If you want to check the print position or color before printing on your actual CD or DVD, see “Adjusting the Print Position” on page 74 or “Adjusting the Print Density” on page 75.

1. Turn on the printer.

Note: Before you insert a CD or DVD, make sure the printer is turned on. Otherwise, the disc may not be positioned correctly.

2. Remove any paper from the sheet feeder, then push in the paper support extensions and close the paper support.
3. If the output tray and extension are open, push them in, but leave the flap at the end of the tray down.

4. Lift up the printer cover and press in the top of the CD/DVD tray guide as shown.

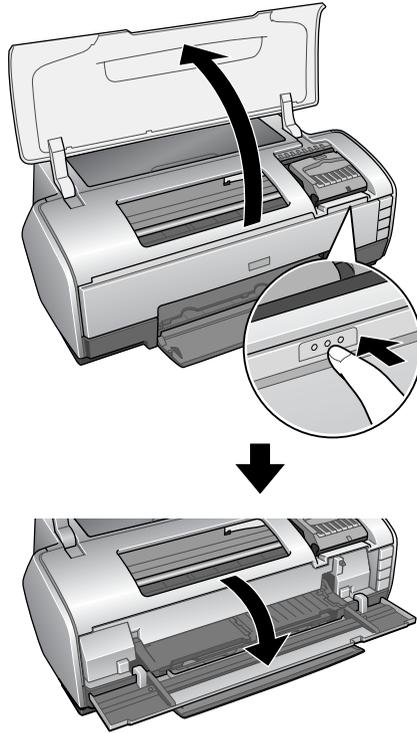


5. Lower the CD/DVD tray guide.


6. Place the CD or DVD on the CD tray with the white or printable side face-up.

To print on a small CD (8 cm), place the small CD ring on the tray first, then place the CD inside the ring.

Caution: Make sure you always use the small CD ring when printing 8-cm CDs and that the CD and ring lay flat on the tray; otherwise the printer may be damaged.

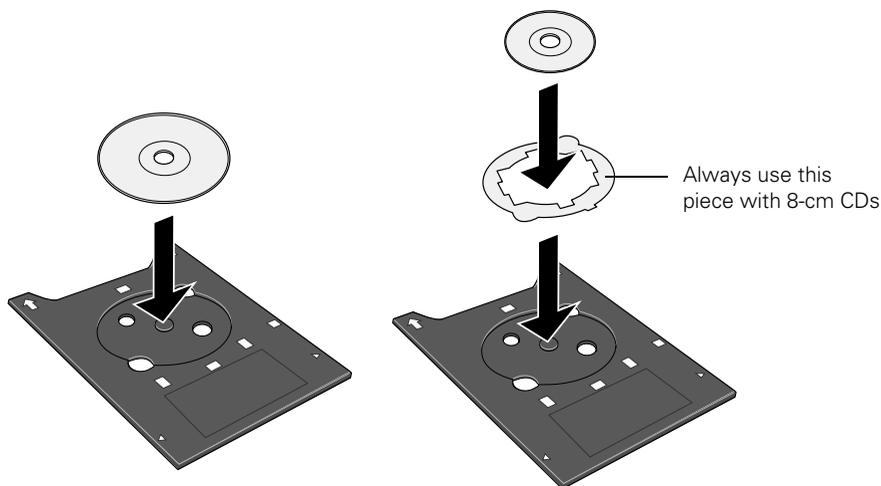

7. Slide the tray into the CD/DVD tray guide. Push in the tray until the arrows on the tray and the tray guide are aligned, as shown below.

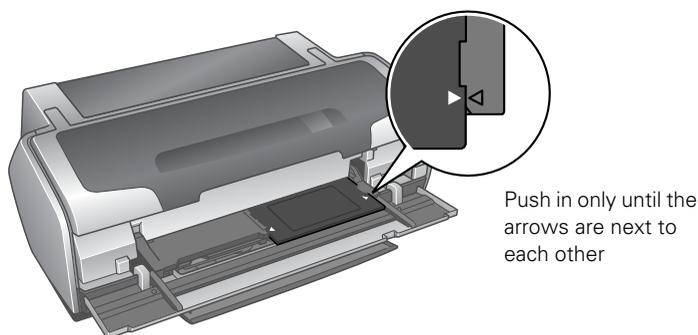


8. Press the  paper button to load the CD or DVD into printing position. It is loaded when the  power button stops flashing.
9. Use Epson Print CD to design your CD or DVD (for instructions, see the on-screen Help), then print your CD or DVD, following the instructions below.

Printing Your Design


After you have created your design and loaded a CD or DVD, you're ready to print.

Note: For information on designing CDs and DVDs, see the EPSON Print CD on-screen Help.

1. Start Epson Print CD, if necessary, and open your design file.
2. Open the File menu and select Print.
3. Make sure EPSON Stylus Photo R1800 is selected, then click Print.

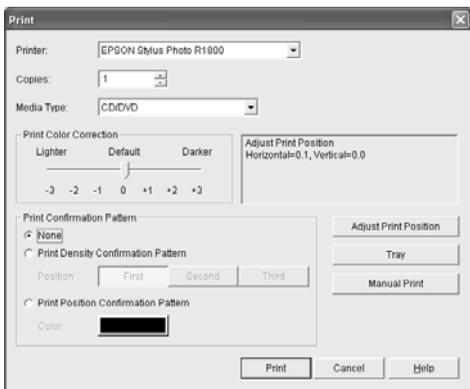

Windows

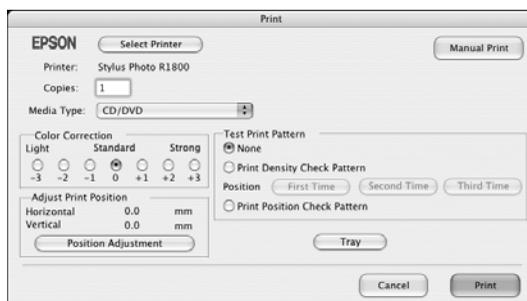

Macintosh

The printer prints your CD or DVD and ejects it on the tray.


Note: After you print, handle the CD or DVD carefully. To allow the ink to dry fully, wait at least 24 hours before playing the disc or inserting it in a drive. Keep printed discs away from moisture and direct sunlight.

If you need to adjust the print position or color, see the instructions for “Adjusting the Print Position” on page 74 and “Adjusting the Print Density” on page 75.


Adjusting the Print Position

If your printed images and text are not positioned the way you want, you may need to adjust the printing position. Use the blank cardboard position check disk included with your printer or an extra CD. You can also use these steps to check the position before you print on a CD or DVD.

1. Place the position check disk (or an extra ink jet printable CD) on the CD tray and insert it into the printer, as described on page 70.
2. Start Epson Print CD.
3. Select **Print** from the File menu.
4. Make sure **EPSON Stylus Photo R1800** is selected, then click **Print Position Confirmation Pattern (Windows)** or **Print Position Check Pattern (Macintosh)**.

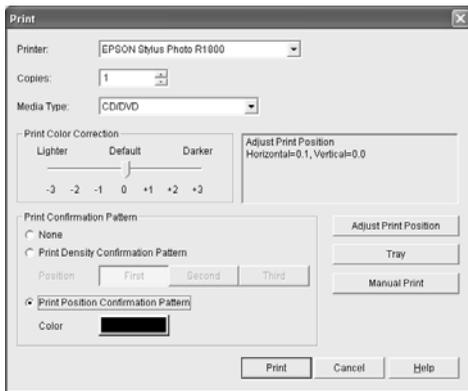


Windows

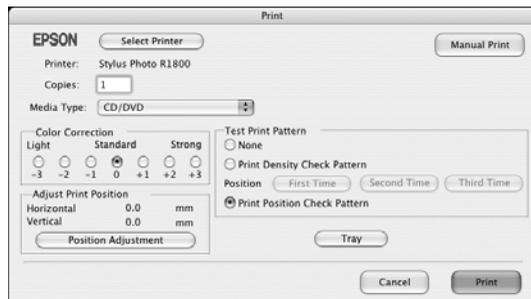


Macintosh


5. Click **Print**. The confirmation pattern is printed on the position check disk or CD and the printer ejects the tray.

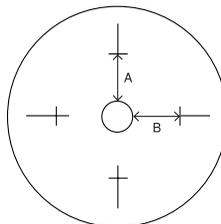

- Remove the position check disk or CD and measure the distance from the edge of the hole to the small cross marks (distances labeled A and B as shown). You'll need a metric ruler with millimeters for these measurements.
- Open the File menu and select **Adjust Print Position**. You see a screen like this:

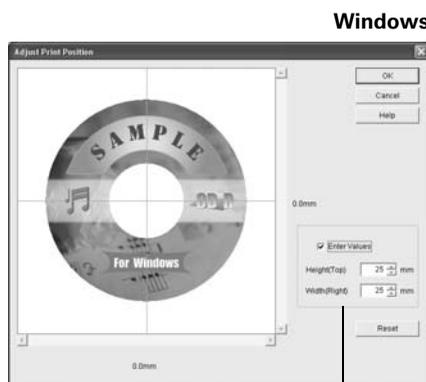

Enter measurements here

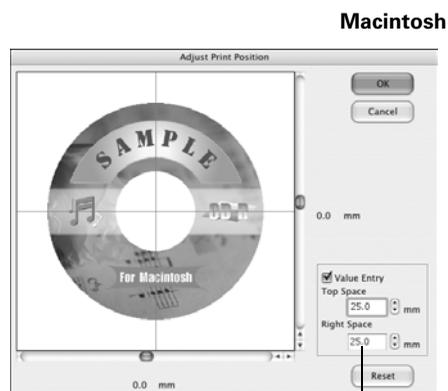

Enter measurements here


- Make sure **Enter Values** (Windows) or **Value Entry** (Macintosh) is checked. Input the A distance in the **Height (Top)** or **Top Space** box. Enter the B distance in the **Width (Right)** or **Right Space** box.
- Click **OK** to save the measurements.

Adjusting the Print Density


If ink smears on your printed CDs or DVDs, you may need to adjust the color saturation or ink density. Discs from different manufacturers may absorb ink differently, so you may need to adjust the density for each type of disc. Follow these instructions to print a color saturation check pattern and make adjustments as necessary.

- Start EPSON Print CD.
- Insert a test CD or DVD for printing, as described on page 70.
- Select **Print** from the File menu.

4. Make sure EPSON Stylus Photo R1800 is selected, then click Print Density Confirmation Pattern (Windows) or Print Density Check Pattern (Macintosh).

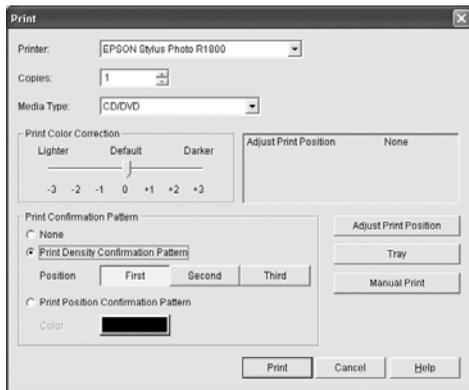

Windows

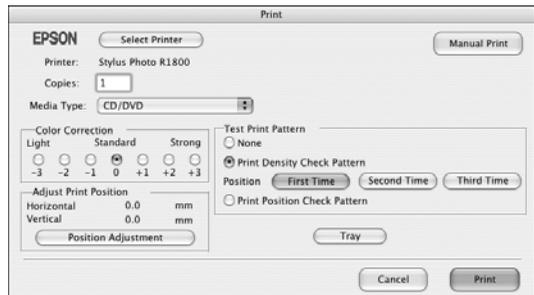

Macintosh

5. Click Print. The printer prints the pattern and ejects the tray.
6. After the pattern is printed, examine the print and make the Print Color Correction (Windows) or Color Correction (Macintosh) setting lighter or darker as necessary.
You can print three density patterns on one disc. Each pattern is printed in a different location.
7. After the first pattern is printed, adjust the setting, then repeat steps 2 through 6, selecting Second or Second Time to print the second pattern.
8. If you want to try a third Color Correction setting, you can repeat steps 2 through 6 again and select Third or Third Time.
9. Remove the CD or DVD and let it dry for at least 24 hours. Then check the saturation levels again.

You can also use the **Brightness** and **Contrast** settings in Epson Print CD to adjust color saturation. See the Epson Print CD on-screen Help for instructions.

Maintaining Your Printer

Follow the instructions in this chapter to keep your printer working at its best and to prepare it for moving, if necessary:

- “Cleaning the Print Head” below
- “Replacing an Ink Cartridge” on page 80
- “Aligning the Print Head” on page 84
- “Cleaning the Printer” on page 86
- “Transporting the Printer” on page 87

Cleaning the Print Head

If your printouts are unexpectedly light, or dots or lines are missing, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly. Print head cleaning uses ink, so clean it only if quality declines.

Caution: When you don't turn on your printer for a long time, print quality can decline, so turn it on at least once a month to maintain good print quality.

This section explains how to clean the print head using the Auto Nozzle Check and Cleaning utility and the Head Cleaning utility. Use the Auto Nozzle Check and Cleaning utility first, to let the printer check and clean the nozzles. If you still notice problems with quality, you can manually clean the print head.

Note: You can also clean the print head by holding down the  ink button on the printer for three seconds (when the red  ink light is off).

Automatically Checking and Cleaning the Print Head


The Auto Nozzle Check and Cleaning utility prints a nozzle check pattern that the printer then reads to see if you have any clogged nozzles. If cleaning is needed, the printer automatically cleans the print head.

1. Make sure the printer is turned on but not printing, and the red \triangle ink light is off. (If the \triangle ink light is flashing or on, you need to replace a cartridge; see page 80.)
2. Load several sheets of plain, letter-size paper in the printer's sheet feeder.
3. Do one of the following:

Windows: Right-click the  icon on your taskbar (in the lower right corner of your screen). Select **Auto Head Cleaning**.

Mac OS X: Open the **Applications** folder and select **EPSON Printer Utility**. Select **SP R1800**, click **OK**, and select **Auto Nozzle Check and Cleaning**.

4. Follow the instructions on the screen. The printer prints and examines the nozzle check pattern shown below. If cleaning is necessary, it then cleans the print head and prints and checks another nozzle check pattern.

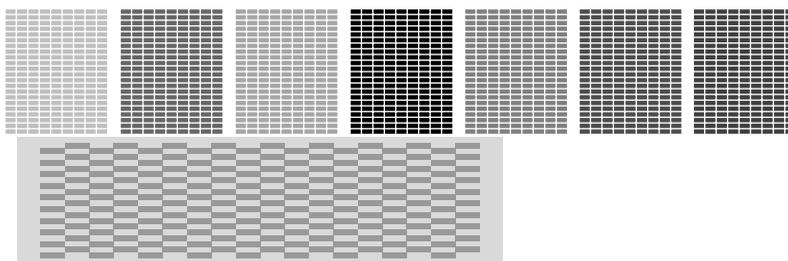

5. The utility prints and checks up to five times. If some print head nozzles are still clogged, it displays an on-screen message telling you to manually clean the print head. Follow the instructions on page 79 to clean the print head, if necessary.

If you still have print quality problems, check the solutions beginning on page 96. You can also turn the printer off and wait overnight—this allows any dried ink to soften—and then try cleaning the print head again.

Running the Head Cleaning Utility

1. Make sure the printer is turned on but not printing, and the red Δ ink light is off. (If the Δ ink light is flashing or on, you need to replace a cartridge; see page 80.)
2. Do one of the following:

Windows: Right-click the  icon on your taskbar (in the lower right corner of your screen). Select **Head Cleaning**.

Mac OS X: Open the **Applications** folder and select **EPSON Printer Utility**. Select **SP R1800**, click **OK**, and select **Head Cleaning**.


3. Follow the instructions on the screen to clean the print head.

Cleaning takes about two minutes, during which the printer makes noise and the green \mathcal{P} power light flashes.


Caution: Never turn off the printer while the green \mathcal{P} power light is flashing, unless the printer hasn't moved or made noise for more than 5 minutes.



4. When the green \mathcal{P} power light stops flashing, make sure paper is loaded in the printer. Click **Print nozzle check pattern**, then click **Print** (Windows) or click **Confirmation**, then click **Next** (Macintosh). The nozzle check pattern prints.
5. If the nozzle check pattern has no gaps or lines (as shown below), click **Finish**.

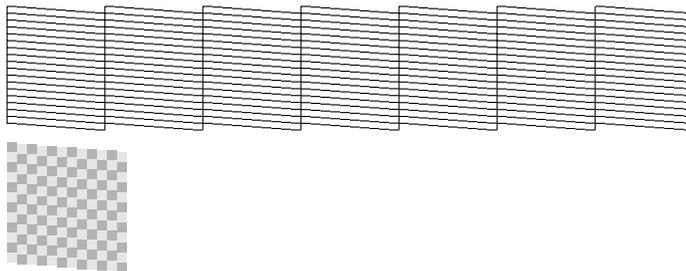

If the pattern has white lines or gaps (as shown below), click **Clean** to clean the print head again.

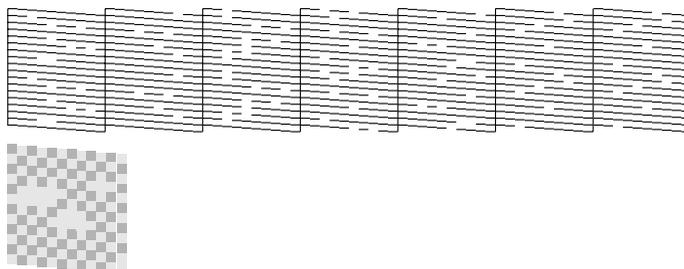

If you don't see any improvement after cleaning the print head three or four times, check the solutions beginning on page 96. You can also turn the printer off and wait overnight—this allows any dried ink to soften—and then clean the print head again.

Replacing an Ink Cartridge

When the red  ink light flashes, an ink cartridge is low on ink.

When the red  ink light stays on, you need to replace a cartridge.

You can open the printer cover to check the ink light indicating a cartridge that is low on ink or needs to be replaced.

When a cartridge is more than six months old, you may need to replace it if printouts don't look their best. If the quality doesn't improve after cleaning and aligning the print head, you can replace the cartridge even if the red  ink light is off.

Caution: Don't open Epson Status Monitor or respond to any ink messages when your printer is printing. This may cause your printer to pause and leave an uneven surface on your printout. If your ink is running low, wait until printing finishes before checking ink levels or attempting to replace a cartridge. If you must replace an ink cartridge in the middle of a print job, the quality of your printout may decline. For best results, check your ink levels and replace ink cartridges, if necessary, before printing.


Checking the Ink Supply

To check your ink supply, do one of the following:

- **Windows:** Double-click the  icon on the Windows taskbar. You see a window like this:
- **Mac OS X:** Choose Applications > EPSON Printer Utility > SP R1800 > EPSON StatusMonitor.

You see a window like this:

Click a cartridge image to display information about the cartridge.

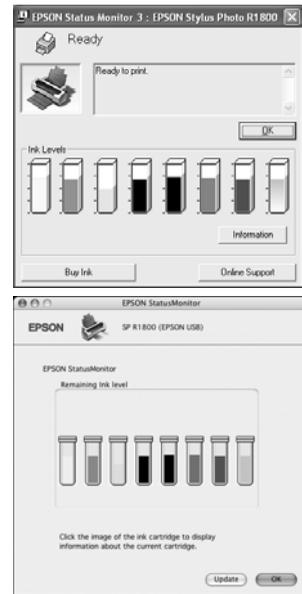

Purchasing Ink Cartridges

Use these Epson ink cartridges within six months of installing them and before the expiration date on the package:

Ink cartridge	Part number
Yellow	T054420
Magenta	T054320
Cyan	T054220
Matte Black	T054820
Photo Black	T054120
Red	T054720
Blue	T054920
Gloss Optimizer	T054020

Caution: To ensure good results, use genuine Epson ink cartridges and do not refill them. Other products may cause damage to your printer not covered by Epson's warranty.

You can purchase genuine Epson ink cartridges, paper, and accessories from an Epson authorized reseller. For product information and to find the nearest authorized reseller, please call 800-GO-EPSON (800-463-7766) or browse our catalog of products at www.epson.com, select the product you are interested in, and click

“Where to Buy.” To purchase online, please visit the Epson StoreSM at www.epsonstore.com (U.S. sales only). In Canada, please call 800-463-7766 for a reseller referral.

Ink Cartridge Precautions

Warning: Keep ink cartridges out of the reach of children; don't drink the ink.

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them thoroughly with water.

Caution: To avoid damaging the printer, never move the print head by hand.

You cannot print if an ink cartridge is empty. Leave the empty cartridge installed in the printer until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out.

Removing and Installing Ink Cartridges

Be sure you have a new ink cartridge before you begin. Once you start replacing a cartridge, you must complete all the steps in one session.

You can replace a cartridge whether the red  ink light is off, flashing, or on.


1. Make sure the printer is turned on (the green  power light should be on, but not flashing). Then open the printer cover.
2. Press the  ink button.

The print head moves and the green  power light flashes.

If a red ink light is flashing or on (indicating a low or empty cartridge), the cartridge(s) indicated beneath the light(s) needs to be replaced.


3. Lift up the cartridge cover.

4. Press in the tab on the back of the cartridge, lift it out of the printer, and dispose of it carefully.

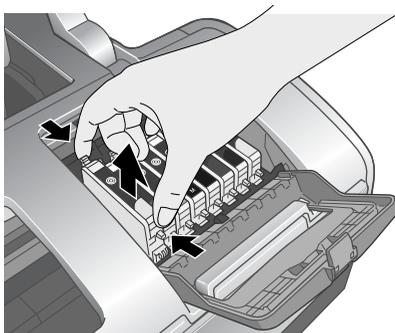


5. Shake the new cartridge four or five times before opening its package. (Don't shake it after it's unpacked.)
6. Remove the new cartridge from its package.

Caution: Don't touch the green circuit board on the front of the cartridge; you may inhibit normal operation and printing.

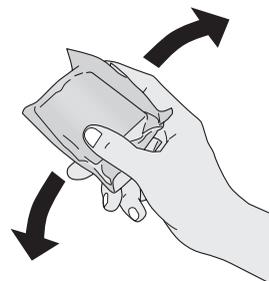

7. Slide the new cartridge into its slot. The side with the green circuit board goes in the front of the slot.
8. Press the cartridge down until it clicks into place.

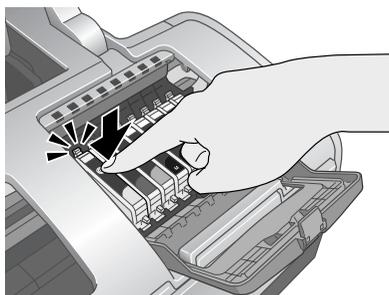

9. If you need to replace any other ink cartridges, repeat steps 4 through 8.
10. Close the cartridge cover, press it down on the top until it clicks, then close the printer cover.

11. Press the  ink button. The printer begins charging the ink delivery system.

The green  power light and red  ink lights flash and the printer makes noise. Charging takes about 90 seconds. When it's finished, the green  power light stops flashing and stays on. The red  ink light and the light(s) above the cartridge(s) go out.

Caution: Never turn off the printer while the green  power light is flashing, unless the printer hasn't moved or made noise for more than 5 minutes.

Aligning the Print Head

If your printouts contain misaligned vertical lines, or you see light or dark horizontal banding, you may need to align the print head. You can have the printer automatically check and align the print head or you can check and adjust the alignment yourself.

Automatically Aligning the Print Head

1. Turn on the printer.
2. Load plain, letter-size paper.
3. Do one of the following:

Windows: Right-click the  icon on your taskbar (in the lower right corner of your screen). Select **Print Head Alignment**.

Mac OS X: Open the Applications folder and select EPSON Printer Utility. Select **SP R1800**, click **OK**, and select **Print Head Alignment**.

You see a screen like this:

4. Click the **Automatic** button, if necessary, then click **OK**.
5. On the next screen, click **Start**. The printer then prints and checks an alignment pattern. It then prints and checks two more patterns.



6. When alignment is finished, click **Finish** on the last screen.

Manually Aligning the Print Head

1. Turn on the printer.
2. Load plain, letter-size paper.
3. Do one of the following:

Windows: Right-click the  icon on your taskbar (in the lower right corner of your screen). Select **Print Head Alignment**.

Mac OS X: Open the **Applications** folder and select **EPSON Printer Utility**. Select **SP R1800**, click **OK**, and select **Print Head Alignment**.

4. Click the **Manual** button, then click **OK**.


You see a screen like this as the printer prints an alignment check pattern:

5. On the check page, select the box in each pattern that has the least noticeable lines in it. You may need to use a magnifying glass or loupe.

Select one box for each pattern numbered 1 through 3. Then enter the box number for each pattern in the boxes on the screen.

If box #5 is *not* the best-aligned box in each pattern, click **Realignment** to print another test page and repeat this step.


6. When box #5 is the best-aligned in all the patterns, click **Finish**.

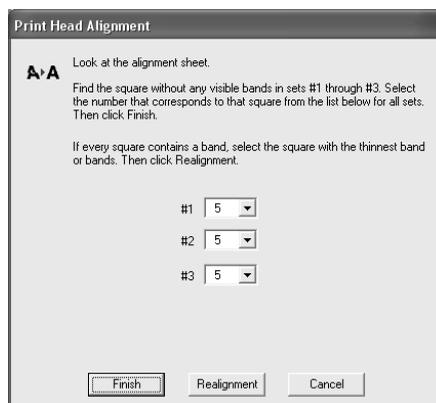

Cleaning the Printer

To keep your printer working at its best, you should clean it several times a year.

1. Turn off the printer, unplug the power cord, and disconnect the interface cable.
2. Remove all the paper, then use a soft brush to clean the paper feeders.
3. Clean the exterior of the printer with a soft, damp cloth. Keep the paper support and printer cover closed as you clean the printer.
4. If you need to clean ink out of the inside of the printer, use a soft cloth to clean only the black plastic area shown below:

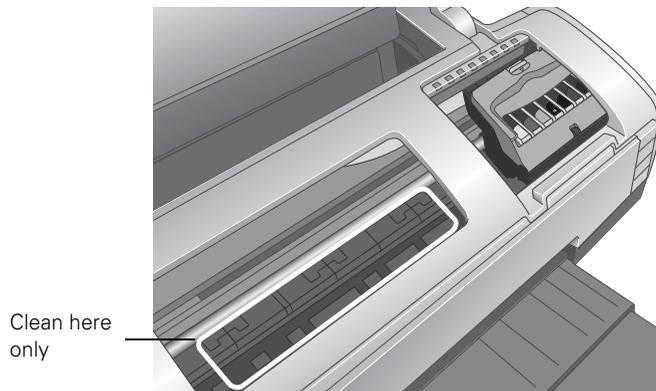

Warning: Don't touch the gears or rollers inside the printer.

Caution: Never use a hard or abrasive brush, or benzine, alcohol, or thinner for cleaning; they can damage the printer components and case.


Don't get water on the printer components and don't spray or apply lubricants or oils inside the printer.

Don't use any cleaning sheets included with special paper; they may jam inside the printer.

Transporting the Printer

If you move your printer some distance, you need to prepare it for transportation in its original box or a similar one. Follow these steps:

1. Turn on the printer.
2. Turn off the printer and unplug the power cord from the electrical outlet. Then disconnect the printer cable from the printer.
3. Open the printer cover and tape the ink cartridge holder to the printer case using packing tape. Then close the printer cover.

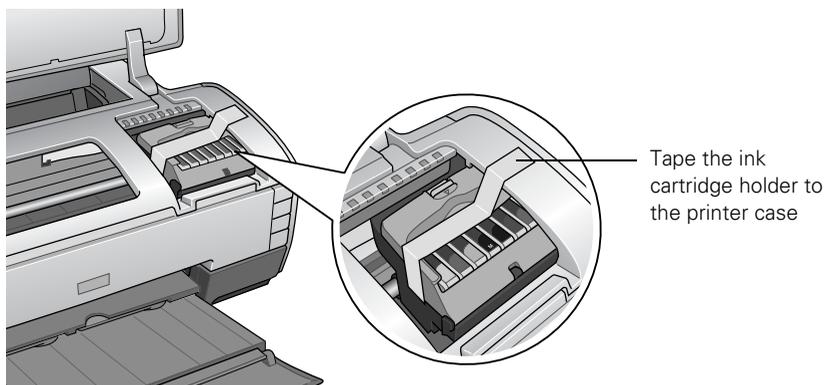

Caution: Be sure to remove the tape after installing the printer in its new location.

4. Remove any paper from the printer, then remove the roll paper holder, if it is installed.
5. Close the output tray and the paper support.
6. Repack the printer and its attachments in the original box using the protective materials that came with them.
7. Keep the printer level as you transport it.
8. After transporting the printer, remove all the tape.
9. Test your printer. If you notice a decline in print quality, clean the print head (see page 77); if output is misaligned, align the print head (see page 84).


Solving Problems

See “Diagnosing Printer Problems” on page 91 to help determine what the cause of your printer problem may be. Then see these sections for solutions:

- “Setup and Software Installation Problems” on page 94
- “Printer Problems” on page 95
- “Quality Problems” on page 96
- “Paper Problems” on page 98
- “CD/DVD Problems” on page 100
- “Miscellaneous Problems” on page 100
- “Uninstalling and Reinstalling Printer Software” on page 102
- “Where To Get Help” on page 103

Tip: It’s a good idea to check Epson’s support web site periodically for free updates to your printer driver. Visit <http://support.epson.com>. Download instructions are posted for your convenience.

Printer Parts

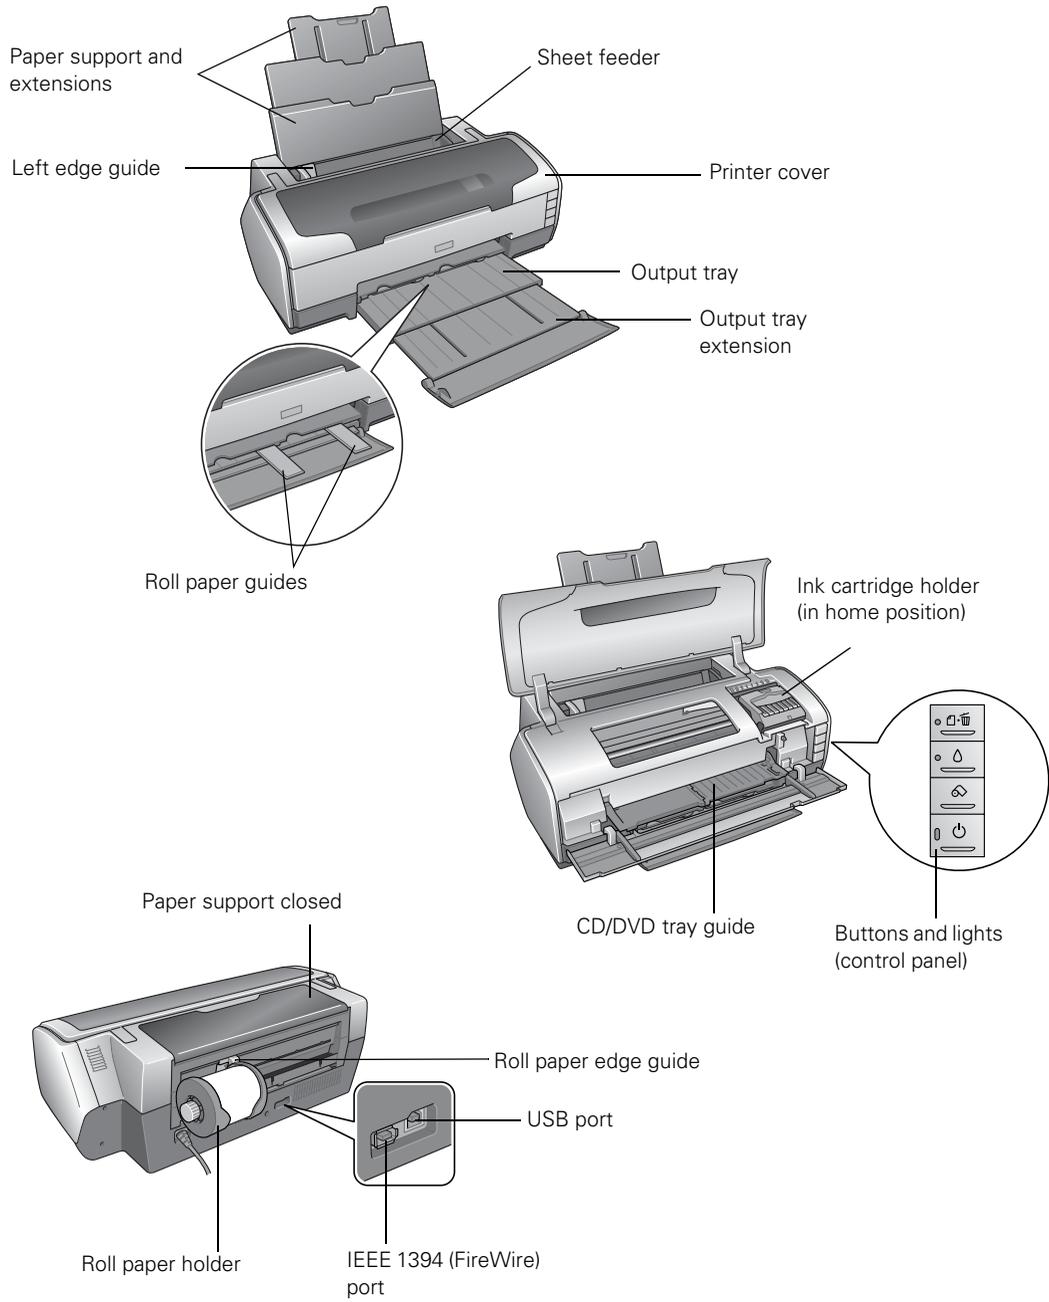

Printer Lights

The tables below summarize the functions of the printer lights. To diagnose problems indicated by the printer lights, see below.

Light	Meaning
 paper out	On: printer is out of paper, multiple sheets fed, the wrong size sheet fed, or the CD/DVD tray is not in position. Flashing: paper isn't loaded for the currently selected paper path, paper is jammed, or the output tray is in the wrong position.
 ink (eight)	On: an ink cartridge is empty. Flashing: an ink cartridge is low on ink.
 power	On: printer is turned on. Flashing: printer is receiving a print job, printing, replacing or charging ink, cleaning the print head, or moving the output tray position.

Diagnosing Printer Problems

First, check the printer's lights (see below) or run a printer check (see page 93).

Lights	Explanation
Green  power light flashes	The printer is receiving a print job, printing, replacing an ink cartridge, charging ink, or cleaning the print head.
Red  ink light flashes	An ink cartridge is low on ink. Make sure you have a replacement cartridge, then follow the steps on page 82 to install it.
Red  ink light on	An ink cartridge is out of ink, not installed, not installed correctly, or is not compatible with the printer. Follow the steps on page 82 to install or reinstall the cartridge correctly.

Lights	Explanation
Red paper light on	<p>Your paper ran out, multiple sheets fed, or the wrong size sheet fed, or the CD/DVD tray is not inserted completely.</p> <p>Sheet Feeder: If paper is out, load more paper and press the paper button. If multiple sheets or the wrong size sheet fed, press the paper button to eject the paper, then turn your printer off and then on. For loading instructions, see page 14.</p> <p>Single Sheet Guide: See page 18 for instructions on loading single sheets of special papers.</p> <p>Roll Paper: See page 22 for instructions on loading or reloading roll paper.</p> <p>CD/DVD: See page 70 for instructions on inserting the CD/DVD tray correctly.</p>
Red paper light flashes	<p>Jammed paper or the CD/DVD tray is blocking print head movement, or you're trying to print on paper or a CD/DVD with the wrong media loaded.</p> <p>If you suspect a paper jam, turn off the printer and pull out the jammed paper. Open the cover and remove any jammed or torn paper. Then do one of the following:</p> <p>Sheet Feeder or Single Sheet Guide: Turn on the printer, reload paper, and press the paper button.</p> <p>Roll Paper: Cut off the printed portion, then remove the paper (see page 41) and reload it (see page 22).</p> <p>CD/DVD: Gently pull out the CD/DVD tray and press the paper button. See page 70 for instructions on inserting the CD/DVD tray correctly.</p> <p>If a print job was sent to one paper path, but media is loaded for another paper path, load the correct paper or a CD/DVD.</p>

Lights	Explanation
Green  power light is on Red  paper light flashes Red  ink light flashes	Jammed paper or a foreign object is preventing the print head from returning to the home position, or paper is loaded in the sheet feeder and the CD/DVD tray guide is open. Turn off the printer, open the printer cover, and remove any jammed or torn paper, or foreign object. Close the CD/DVD tray guide if it is open. Then turn the printer back on. If the error persists, contact your dealer or Epson; see page 103.
Green  power light flashes Red  paper light flashes Red  ink light flashes	An unknown printer error has occurred. Turn off the printer, wait a few seconds, and turn it on again. If the lights are still flashing, contact your dealer or Epson; see page 103.

Running a Printer Check

You can run a printer check to determine whether a problem comes from the printer or some other source.

1. Turn off your printer and computer, then disconnect the printer's interface cable.
2. Load letter-size paper in the sheet feeder.
3. Hold down the  paper button, then press and release the  power button. Continue to hold down the  paper button until the  power light flashes.
4. A test page prints the printer's ROM version number and a nozzle check pattern.
 - If the check page prints, the problem probably lies in your software settings, interface cable, or computer, or your software may not be installed correctly.
 - If the check page doesn't print, you may have a problem with your printer.

Try the suggestions in "Problems and Solutions" beginning on page 94.

5. Turn off the printer, connect the interface cable, and turn on your printer and computer.

Problems and Solutions

Setup and Software Installation Problems

The printer makes noise after ink cartridge installation.

- When you install ink cartridges, the printer must charge its print head for about two and a half minutes. Wait until it's finished (the green  power light stops flashing) before you turn off the printer, or it may use excess ink the next time you turn it on.
- Make sure the ink cartridges are inserted completely, the ink cover is closed, and no packing material remains in the printer. Turn off the printer, wait a moment, then turn it back on to clear the error.

You're having problems installing or using the printer software.

- Make sure your printer is turned on and its cable is securely connected at both ends. Follow the installation steps on the *Start Here* sheet, and make sure your system meets the requirements on page 105.
- Close other programs, including screen savers and virus protectors, and install again.
- If you see an error message with Windows 2000, you may not have software installation privileges. Contact your System Administrator.
- If you're using Windows and the USB port, make sure your system was not upgraded from Windows 95; the USB driver may not install correctly.
- If you're printing over a network, see your on-screen *Reference Guide* for instructions on configuring your printer for use on a network.
- In Windows, make sure your printer is selected as the default printer in the Printers utility.

Printer Problems

Only the green power light is on, but nothing prints.

- Make sure the interface cable is securely connected at both ends and meets the system requirements on page 105.
- Run a printer check as described on page 93. If the test page prints, make sure your software is installed correctly.
- If you're printing on a network, make sure you set up your printer for network printing, as described in your on-screen *Reference Guide*.

The printer sounds as though it is printing, but nothing prints.

- The print head may need cleaning; see page 77 for instructions.
- The printer won't operate properly if it's tilted or at an angle. Place it on a flat, stable surface.

Your printer makes noise when you turn it on or after it has been sitting for awhile.

Your printer is performing routine maintenance.

Printing is too slow.

Make sure your system meets the recommended requirements listed on page 105. You may also need to:

- Clear space on your hard drive or run a defragmentation utility.
- Close open programs that you're not using.
- Increase your system's memory (RAM).

For the fastest printing:

- Select **Draft** (Windows) or set the Quality/Speed slider to **Speed** (Macintosh).
- Turn **High Speed** on and turn **Finest Detail** off, if available.
- If your printer is connected to a USB hub, disconnect any unused USB devices. Use a Hi-Speed USB 2.0 cable connected to a Hi-Speed USB 2.0 port.

Quality Problems

You see banding (light lines).

- Clean the print head; see page 77 for instructions.
- Select a higher print quality and turn off **High Speed** mode; see page 31 (Windows) or page 38 (Macintosh).
- Select the correct **Type** or **Media Type** setting for your paper; see page 40.
- Make sure the printable side of the paper is face-up; it's usually whiter or shinier.
- The ink cartridges may need replacing; see page 80.
- Align the print head as described on page 84.



Your print is blurry or smeared.

- Make sure your paper isn't damp, curled, or loaded face down (load new paper face up).
- Use a support sheet with special paper, or try loading your paper one sheet at a time.
- Make sure your paper meets the specifications listed in the on-screen *Reference Guide*.
- Use Epson papers for proper saturation and absorption of Epson inks. If you use a paper not listed under the supported paper types, you may see smears, roller marks, misting, or other problems in your printouts; see page 13.
- Align the print head as described on page 84.
- Select the **Thick paper** checkbox in your printer software. Access the setting from the printer settings window as follows:



Windows: Click **Maintenance** and select **Printer and Option Information**.

Mac OS X: Select **Extension Setting** from the pop-up menu.

Your printout is faint or has gaps.

- Clean the print head; see page 77 for instructions.
- The ink cartridges may be old or low on ink; see page 80.
- Select the correct Type (Windows) or Media Type (Macintosh); see page 40.
- Make sure your paper isn't damaged, old, dirty, or loaded face down. For best results, use genuine Epson paper.



Caution: Don't open Epson Status Monitor, pause printing, or respond to any ink messages when your printer is printing. This may cause your printer to pause and leave an uneven surface on your printout. If your ink is running low, wait until printing finishes before checking ink levels or attempting to replace a cartridge. If you must replace an ink cartridge in the middle of a print job, the quality of your printout may decline. For best results, check your ink levels and replace ink cartridges, if necessary, before printing large or high-resolution print jobs.

Your printout is grainy.

- Use a higher quality paper or select a higher print quality (for Windows, see page 31; for Macintosh, see page 38).
- Align the print head as described on page 84.
- Increase the image resolution or print it in a smaller size; see your software documentation.
- Make sure you're not printing a PostScript® file.

You see wrong or missing colors.

- Make sure **COLOR** ink is selected (Macintosh), even when printing black and white photographs.
- Clean the print head; see page 77 for instructions.
- The ink cartridges may be old or low on ink; see page 80.

- Try turning off PhotoEnhance™ (Windows). Also check if you're using a special effect that alters image colors, like Sepia.
- Change the Gamma setting (Macintosh). See page 38.
- Your printed colors can never exactly match your on-screen colors. However, you can use a color management system to get as close as possible. See the Photoshop color management instructions on page 52. If your photos have a dark, underexposed and/or yellow-brown cast or a light, overexposed and or light-blue cast after using color management, see the solutions on page 61.

Paper Problems

Paper doesn't eject fully or is wrinkled.

- If the paper doesn't eject fully, you may have set the wrong paper size. Press the  paper button to eject the paper, then select the correct paper size.
- If it's wrinkled when it ejects, the paper may be damp or too thin. Load new paper.

Paper sheets don't feed correctly.


- If paper doesn't feed or multiple pages feed, remove it from the sheet feeder. Fan the edges of the sheets, reload them against the right side of the feeder, and slide the left edge guide against the paper, but not too tightly. Don't load paper above the arrow on the left edge guide.
- If you are loading multiple sheets of matte paper that are larger than letter-size, use the matte paper support. See page 17.

Paper sheets jam in the printer.

Press the  paper button to eject the jammed paper. If that doesn't work, try the following:

1. Turn off the printer.
2. Remove any jammed paper from the printer's output tray.

3. Remove any jammed paper from the sheet feeder or open the printer cover and remove any paper jammed inside.

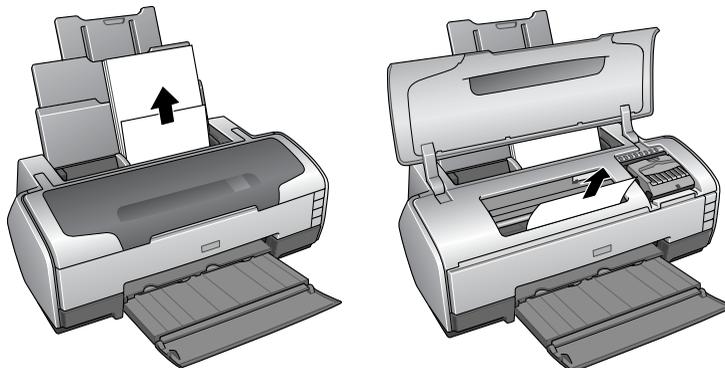

Roll paper doesn't feed correctly or jams in the printer.

- Cut the end of the paper straight across. If it's cut diagonally, the paper won't feed smoothly.
- If the roll paper end is curled, place the end inside a folded sheet of paper and roll it backwards against the curl.
- Make sure the paper is loaded in the roll paper feeder, not the sheet feeder; see page 22.
- As you load the paper, gently hold it in the roll paper feeder and wait for it to load; don't force the paper in.
- Select **Roll** as the Source (Windows) or the correct size and source of **Roll Paper** for the Paper Size (Mac OS X). Other settings will feed too much paper. See page 41 for instructions.
- If extra paper feeds, press the  roll paper button for three seconds to rewind the paper all the way (repeat if necessary). If the  paper light is on, press the  paper button. Reload the paper as described on page 22.

CD/DVD Problems

You can't insert the CD/DVD tray easily.

Don't force the CD/DVD tray into the printer. Turn on your printer and follow all the steps beginning on page 70.

The CD/DVD tray ejects when you start a CD/DVD print job.

Follow the steps on page 70 to reinsert the CD/DVD tray. Make sure you press the  paper button to load the tray before sending your print job again.

The CD/DVD tray doesn't eject after printing.

Gently pull out the tray and press the  paper button to turn off the  paper light.

Your design is not positioned correctly on the CD or DVD.

You need to adjust the print position in Epson Print CD; see page 74.

Miscellaneous Problems

The image is inverted, as if viewed in a mirror.

Turn off Mirror Image in the printer software or the mirror setting in your program. See page 31 (Windows) or page 38 (Macintosh) for instructions.

The printer prints blank pages.

- Make sure your printer is selected in the Print window, or in the Macintosh Printer Setup Utility or Print Center.
- Clean the print head; see page 77 for instructions.

You see incorrect characters.

- Make sure the interface cable is securely connected at both ends and meets the system requirements on page 105.
- Make sure your printer is selected in the Print window, or in the Macintosh Printer Setup Utility or Print Center.
- If you're using a switch box or USB hub with your printer, connect the printer directly to your computer instead.

The margins are incorrect.

- Make sure the paper settings are correct for your paper size. See page 28 (Windows) or page 33 (Mac OS X).
- Choose the correct margins for your paper size. The margins must be within the printable area of the page; see "Printer Specifications" in your on-screen *Reference Guide*.
- Place your paper against the right side of the feeder with the left edge guide snug against it.
- Make sure the **Borderless** setting is set correctly for your margins; see page 41 for roll paper or page 48 for cut sheets.

Too many copies printed.

Make sure that the Copies option in your printer software or program is not set for multiple copies.

Image size/position is incorrect.

Make sure the paper and layout options are set correctly.

Uninstalling and Reinstalling Printer Software

You may need to uninstall and then reinstall your printer driver and utilities if, for example, you upgrade your Windows operating system. You don't need to uninstall your other photo software or the Epson *Reference Guide*.

Windows

1. Click **Start**, and select **Programs** or **All Programs**.
2. Point to **Epson** or **EPSON Printers**, then select **EPSON Printer Software Uninstall**.
3. In the next window, select **EPSON Stylus Photo R1800** and click **OK**. Then follow the on-screen instructions.
4. Restart your computer, then see the *Start Here* sheet to reinstall your software.

Mac OS X

1. Open the **Applications** folder, then the **Utilities** folder.
2. Select **Printer Setup Utility** or **Print Center**, select **Stylus Photo R1800**, and click the **Delete** button.
3. Restart your Macintosh, then see the *Start Here* sheet to reinstall your software.

Where To Get Help

If you need help with your printer, Epson Print CD, or the P.I.M. II Plug-in for Adobe Photoshop, see the information below.

For help with other software that came with your printer, see page 104.

Epson provides technical assistance 24 hours a day through the electronic support services and automated telephone services listed below:

Service	Access
World Wide Web	From the Internet, you can reach Epson Support at http://support.epson.com . At this site, you can download drivers and other files, look at product documentation, access troubleshooting information, and receive technical advice through e-mail.
Automated Telephone Services	A variety of automated help services are available 24 hours a day, seven days a week. To use these services, you must have a touch tone telephone and call (800) 922-8911 . Your Epson SoundAdvice SM Express Code is 70610. Use this code to quickly select the Epson Stylus Photo R1800 in SoundAdvice.

To speak to a technical support representative, dial:

- U.S.: **(562) 276-7296**, 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM, Saturday.
- Canada: **(905) 709-2567**, 6 AM to 6 PM, Pacific Time, Monday through Friday.

Toll or long distance charges may apply.

Please have the following information ready:

- Product name (Epson Stylus Photo R1800)
- Product serial number (located on the back of the printer and on its box)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration and operating system version
- Description of the problem

You can purchase genuine Epson ink cartridges, paper, and accessories from an Epson authorized reseller. For product information and to find the nearest authorized reseller, please call 800-GO-EPSON (800-463-7766) or browse our catalog of products at www.epson.com, select the product you are interested in, and click “Where to Buy.” To purchase online, please visit the Epson Store at www.epsonstore.com (U.S. sales only). In Canada, please call 800-463-7766 for a reseller referral.

Technical Support for Other Photo Software

Software	Web site or e-mail	Telephone
nik Multimedia	supportus@nikmultimedia.com	(619) 725-3150, 8:30 AM to 5 PM, Monday to Friday, Pacific Time

Requirements and Notices

Windows System Requirements

To use your printer and its software, we recommend that your system has:

- Microsoft Windows compatible PC with a Pentium® III 500 MHz or higher processor (1 GHz or higher recommended)
- Windows 2000 or XP
- 256MB or more of RAM (512MB or more recommended)
- 200MB or more of free hard disk space recommended
- VGA or better display adapter and monitor
- CD-ROM or DVD-ROM drive for installing the printer software
- USB connection: a Windows-compliant USB 1.1 port or Hi-Speed USB 2.0 port (recommended) and a shielded USB “AB” cable
IEEE-1394 (FireWire) connection: an OHCI-compliant IEEE-1394 port and an IEEE-1394 cable

Macintosh System Requirements

To use your printer and its software, we recommend that your system has:

- An Apple® iMac™ series or Power Macintosh® G3 (400 MHz or higher), G4 (1 GHz or higher recommended), or G5
- Mac OS X 10.2.4 or later
- 256MB or more of available RAM (512MB or more recommended)
- 200MB or more of free hard disk space recommended
- VGA display or better
- CD-ROM or DVD-ROM drive for installing the printer software
- USB connection: a shielded USB “AB” cable (Hi-Speed USB 2.0 recommended)
FireWire connection: an OHCI-compliant FireWire port and a FireWire cable

Important Safety Instructions

Before using your printer, read these safety instructions to make sure you use it safely and effectively:

- Be sure to follow all warnings and instructions marked on the printer.
- Use only the type of power source indicated on the printer's label.
- Connect all equipment to properly grounded power outlets. Avoid using outlets on the same circuit as photocopiers or air control systems that regularly switch on and off.
- Place the printer near a wall outlet where the plug can be easily unplugged.
Placez l'imprimante près d'une prise de courant où la fiche peut être débranchée facilement.
- Do not let the power cord become damaged or frayed.
- If you use an extension cord with the printer, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the outlet's ampere rating.
- Keep your printer and computer system away from potential sources of electromagnetic interference, such as loudspeakers or cordless telephone base units.
- Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- Leave enough room around the printer for sufficient ventilation, leaving at least 3.9 inches between the back of the printer and the wall.
- Do not place the printer near a radiator or heating vent or in direct sunlight.
- Place the printer on a flat, stable surface that extends beyond the printer base in all directions. The printer will not operate properly if it is tilted or at an angle.
- When transporting or storing the printer, don't tilt it, stand it on its side, or turn it upside-down. This may allow ink to leak from the ink cartridges.
- Turn off and unplug the printer before cleaning. Clean with a damp cloth only. Do not spill liquid on the printer.

Caution: Always turn the printer off using the  power button. Don't switch off the power strip or unplug the printer until the green  power light is off.

- Do not block or cover the openings in the printer's case or insert objects through the slots.
- Except as specifically explained in this manual, do not attempt to service the printer yourself.
- Unplug the printer and refer servicing to qualified service personnel under the following conditions:

If the power cord or plug is damaged; if liquid has entered the printer; if the printer has been dropped or the case damaged; if the printer does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.

Ink Cartridge Safety Instructions

- Keep ink cartridges out of the reach of children.
- Be careful when you handle used ink cartridges; there may be ink remaining around the ink supply port. If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water.
- Do not put your hand inside the printer or touch a cartridge during printing.
- Do not move the print head by hand. You may damage the printer.
- Install the ink cartridge immediately after you remove it from its package. Leaving the cartridge unpacked for a long time before use can result in reduced print quality.
- Do not use an ink cartridge beyond the date printed on the cartridge carton. For best results, use up the ink cartridges within six months of first installing them.
- Store ink cartridges in a cool, dark place.
- Store ink cartridges with the bottom of the packaging facing down.
- After bringing an ink cartridge inside from a cold storage site, allow it to warm up at room temperature for at least three hours before using it.
- Shake an ink cartridge 4 or 5 times before removing it from its package.
- Do not shake an ink cartridge after removing it from its package; this can cause leakage.
- Do not remove or tear the label on an ink cartridge; this can cause leakage.
- Do not dismantle the ink cartridges or try to refill them. This could damage the print head.
- Do not touch the green IC chip on the front of the cartridge. This may affect normal operation and printing.
- If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge touches. Do not touch the ink cartridge ink supply port or surrounding area.

ENERGY STAR Compliance

As an ENERGY STAR Partner, Epson has determined that this product meets the ENERGY STAR guidelines for energy efficiency. The EPA ENERGY STAR office equipment program is a voluntary partnership with the computer and office equipment industry to promote the introduction of energy-efficient personal computers, monitors, printers, fax machines, and copiers in an effort to reduce air pollution caused by power generation.



FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity

According to 47CFR, Part 2 and 15 for Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers:

We: EPSON AMERICA, INC.
Located at: MS: 3-13
3840 Kilroy Airport Way
Long Beach, CA 90806
Telephone: (562) 290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: Epson
Type of Product: Ink Jet Printer
Model: B321A

Epson America, Inc. Limited Warranty

What Is Covered: Epson America, Inc. (“Epson”) warrants to the original retail purchaser that the Epson printer covered by this limited warranty statement, if purchased new and used in the United States or Canada, conforms to the manufacturer’s specifications and will be free from defects in workmanship and materials for a period of one (1) year from the date of original purchase. Epson also warrants that the consumable ink cartridges enclosed with the printer will perform to the manufacturer’s specified usage, which usage may expire before the expiration of the limited warranty for the Epson printer. For warranty service, you must provide proof of the date of original purchase.

What Epson Will Do To Correct Problems: Should your Epson printer prove defective during the warranty period, please call the Epson ConnectionSM at (562) 276-7296 (U.S.) or (905) 709-2567 (Canada) for warranty repair instructions and return authorization. An Epson service technician will provide telephone diagnostic service to determine whether the printer requires service. If service is needed, Epson will, at its option, exchange or repair the printer without charge for parts or labor. If Epson authorizes an exchange for the defective unit, Epson will ship a replacement printer to you, freight prepaid, so long as you use an address in Canada or the U.S. (excluding Puerto Rico and U.S. Possessions). Shipments to other locations will be made freight collect. You are responsible for securely

packaging the defective unit and returning it to Epson within five (5) working days of receipt of the replacement. Epson requires a debit or a credit card number to secure the cost of the replacement printer in the event that you fail to return the defective one. If your printer is being repaired, Epson will direct you to send your printer to Epson or its authorized service center, where the printer will be fixed and sent back to you. You are responsible for packing the printer and for all costs to and from the Epson authorized service center. When warranty service involves the exchange of the printer or a part, the item replaced becomes Epson property. The replacement printer or part may be new or refurbished to the Epson standard of quality, and, at Epson's option, may be another model of like kind and quality. Epson's liability for replacement of the covered printer will not exceed the original retail selling price of the covered printer. Exchange products and parts assume the remaining warranty period of your original product covered by this limited warranty.

What This Warranty Does Not Cover: This warranty does not apply to refurbished or reconditioned products. This warranty covers only normal use in the United States and Canada. Using this product for continuous production or similar high duty purposes is not considered normal use; damage, maintenance or service from such use will not be covered under this warranty. This warranty is not transferable. This warranty does not cover any color change or fading of prints or reimbursement of materials or services required for reprinting. This warranty does not cover damage to the Epson product caused by parts or supplies not manufactured, distributed or certified by Epson. This warranty does not cover ribbons, ink cartridges or third party parts, components, or peripheral devices added to the Epson product after its shipment from Epson, e.g., dealer or user-added boards or components. Epson is not responsible for warranty service should the Epson label or logo or the rating label or serial number be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters such as fire, flood, and lightning, improper electrical current, software problems, interaction with non-Epson products, or service other than by an Epson Authorized Servicer. If a claimed defect cannot be identified or reproduced, you will be held responsible for the costs incurred.

SPECIAL NOTE TO COMMERCIAL USERS

This Epson product is offered as a high quality consumer use product. With proper use and care, the product will provide you with quality performance well beyond the one year warranty period. However, if you use this product for continuous production or similar high duty purposes, none of the needed repairs, maintenance or service from such use will be covered by your Epson Limited Warranty.

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSON OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, NEITHER EPSON AMERICA, INC. NOR ITS AFFILIATES SHALL BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE EPSON PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

In Canada, warranties include both warranties and conditions.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Epson America, Inc. ■ P. O. Box 93012 ■ Long Beach, CA 90809-3012

Index

A

- Adobe Photoshop
 - managing color with, 52 to 65
 - P.I.M. plug-in for, 9, 47
- Advanced settings
 - Macintosh, 38 to 39
 - Windows, 31 to 32
- Aligning print head, 84 to 85
- Automatic
 - print head aligning, 84 to 85
 - print head cleaning, 78
- Automatic mode, Macintosh, 36

B

- Background printing, 37
- Banding, 96
- Basic printing
 - Macintosh, 33 to 37
 - Windows, 28 to 30
- Best Photo setting, 29, 49
- Blank pages, 100
- Blurry images, 96
- Borderless setting, 29, 48 to 51
- Bright White Paper, 16, 40
- Browser, 11
- Buttons, 12, 92 to 93

C

- Cable, printer, 105
- Cancelling printing
 - Macintosh, 37
 - Windows, 30

CDs and DVDs

- adjusting print density, 75 to 76
 - adjusting print position, 74 to 75
 - inserting in printer, 70 to 72
 - ordering, 69
 - printing on, 69 to 76
 - problems with, 100
- ## Characters, incorrect, 101
- ## Checking printer, 93
- ## Cleaning
- print head, 77 to 80
 - printer, 86
 - roller, 70
- ## Color management
- menu, Macintosh, 36
 - problems, 61
 - settings, 31 to 32, 36, 39, 52 to 65
 - with color profiles, 52 to 65
- ## Color problems, 61, 97
- ## ColorSync, 39
- ## Control panel, 12, 90 to 93
- ## Controlling printing
- Macintosh, 37
- ## Custom profiles, 61 to 65
- ## Custom settings
- Macintosh, 38 to 39
 - Windows, 31 to 32

D

- Declaration of Conformity, 109
- Default settings, Windows, 30
- Documentation, 10 to 11
- Draft setting, 29, 95

E

- Edge Smoothing setting
 - color management, 55, 59, 63, 64
 - Windows, 31
- Electronic manual, 10 to 11
- Energy Star compliance, 107
- Enhanced Matte Paper, 16, 40
- Epson
 - help, 103 to 104
 - papers, 16, 40, 48
 - PhotoCenter, 10
 - Print CD, 73 to 76
 - SoundAdvice, 103
 - warranty, 109 to 111
- Exif Print
 - description, 9
 - printing with, 47
- Expansion setting, 49, 51
- Extension setting, 36, 96

F

- Faint images, 97
- FCC Compliance Statement, 108
- Features, 7

G

- Gamma setting, 98
- Gloss Optimizer
 - cartridge, 7, 81
 - setting, Macintosh, 38
- Gloss setting, Windows, 29
- Grainy prints, 97

H

- Head Cleaning utility, 79 to 80
- Help
 - Epson, 103 to 104
 - other software, 104
 - see also* Troubleshooting
- High Speed setting, 95 to 96

I

- ICM (Image Color Matching) setting, 32, 60, 65
- Incorrect
 - characters, 101
 - colors, 61, 97
 - margins, 101
- Ink cartridge
 - level of ink in, 81
 - ordering, 81 to 82
 - problems, solving, 91, 94
 - replacing, 80 to 84
 - safety instructions, 82, 107
- Ink level, checking
 - Macintosh, 81
 - Windows, 81
- Installation problems, 94
- Inverted image, 100

J

- Jams, paper, 92, 98 to 99

L

- Layout problems, 101
- Layout settings
 - Macintosh, 36
 - Windows, 32
- Letterhead, 15
- Lights, 91 to 93
- Luster Photo Paper, 16, 40, 42, 44

M

Macintosh

- basic printing, 33 to 37
- custom printing, 38 to 39
- system requirements, 105
- uninstalling software, 102

Maintaining printer, 77 to 86

Margins, incorrect, 101

Matte Black ink cartridge, 7, 81

Matte paper, 16, 40, 48

Matte sheet support, 17

Media Type setting, Macintosh, 26, 36, 40, 44

Mirror images, 100

Monitoring ink level

- Macintosh, 81
- Windows, 81

Moving printer, 87

N

Network printing, 94

Noise, printer, 95

Nozzle Check, 78 to 80

O

Orientation setting, 26, 29, 34

P

P.I.M., *see* PRINT Image Matching

Page Setup, Macintosh, 35

Paper

- Epson, 16, 40, 48
- feeding problems, 98 to 99
- jams, 92, 98 to 99
- loading in sheet feeder, 14 to 15
- loading special, 16
- one only in single sheet guide, 18 to 21
- roll, *see* Roll paper

Paper Size setting, 26, 34

Paper Source setting, 21, 34

Paper Type setting, Windows, 26, 29, 40, 42

Photo Black ink cartridge, 7, 81

Photo RPM setting, 31, 38

Photo setting, 29, 49

Photo software, 9 to 10

PhotoCenter, Epson, 10

PhotoEnhance, 29, 98

PremierArt Paper, 18, 48

Premium Bright White Paper, 16, 40

Premium Glossy Photo Paper, 16, 40, 42, 44, 48

Premium Luster Photo Paper, 16, 40, 42, 44

Premium Semigloss Photo Paper, 16, 40, 42, 44

Preprinted paper, 15

Print CD software, Epson, 73 to 76

Print Center, MacintoshPrinting controlling, 37

Print dialog box, Windows, 28, 30

Print head

aligning, 84 to 85

cleaning, 77 to 80

Print Head Alignment utility, 84 to 85

PRINT Image Matching

description, 8 to 9

plug-in for Photoshop, 9, 47

Print position, CD/DVD, 74 to 75

Print Quality

problems, 96 to 97

setting, 38, 63

Print Settings menu, Macintosh, 35

Printer

cable, 105

check, 93

cleaning, 86

control panel, 90 to 93

maintaining, 77 to 86

noise, 95

parts, 90

problems, 91 to 93, 95

transporting, 87

Printing

advanced, 31 to 32, 38 to 39

CDs and DVDs, 69 to 76

Macintosh, basic, 33 to 37

Windows, basic, 28 to 30

with custom settings, 31 to 32, 38 to 39

Problems

- CD/DVD, 100
- diagnosing, 91 to 93
- installing software, 94
- miscellaneous, 100 to 101
- paper feeding, 98 to 99
- print quality, 96 to 97
- printer, 95
- solving, 89 to 104
- uninstalling software, 102

Q

- Quality Option setting, 29, 49, 59, 64
- Quality/Speed setting, 35, 44, 51, 95

R

- Reference Guide, 10 to 11
- Reinstalling software, 102
- Roll paper
 - button, 25, 45
 - controlling printing, 45
 - holder, 23 to 25, 46
 - loading, 22 to 25, 41
 - options, 43, 45
 - printing on, 41 to 45
 - problems, solving, 92, 99
 - removing, 46
 - storing, 46

S

- Safety instructions, 106 to 107
- Semigloss Photo Paper, 16, 40, 42, 44
- Service, 103 to 104
- Sheet feeder
 - loading paper in, 14 to 15
 - problems, solving, 92, 98 to 99
- Single sheet guide, 18 to 21
- Size setting, 26, 29, 42
- Slow printing, 95
- Smear printout, 26, 36, 96

Software

- installation problems, solving, 94
- photo, 9 to 10
- Print CD, 73 to 76
- reinstalling, 102
- summary, 9 to 10
- uninstalling, 102
- SoundAdvice, 103
- Source setting, 21, 29, 42, 49
- Support, 103 to 104
- System requirements, 105

T

- Technical support, 103 to 104
- Testing printer, 93
- Text & Image setting, 29
- Text setting, 29
- Thick paper setting, 26, 36, 96
- Transporting printer, 87
- Troubleshooting, 89 to 104
- Type setting, Windows, 26, 29, 40, 42

U

- UltraSmooth Paper, 40
- Uninstalling software, 102
- USB, 94, 101, 105
- Utilities
 - Auto Nozzle Check and Cleaning, 78
 - Head Cleaning, 79 to 80
 - Nozzle Check, 78 to 80
 - Print Head Alignment, 84 to 85

V

- Velvet Fine Art Paper, 18 to 21

W

Warranty, 109 to 111

Watermark, 32

Windows

- advanced printing, 31 to 32

- basic printing, 28 to 30

- default settings, 30

- system requirements, 105

- uninstalling software, 102

Epson Ink Jet Papers

Use Epson® paper and inks to get the same photo quality results that have earned Epson's printers all of their awards! Epson papers are specially coated to work with Epson UltraChrome™ inks. Here are details about just a few of Epson's papers and your printer's ink cartridges:

Premium Glossy Photo Paper

Water-resistant paper with a high gloss finish that looks and feels just like a traditional photo. Perfect for all photographic applications and available in a variety of popular photo sizes, such as 4 x 6, 5 x 7, 8 x 10, and letter, and in rolls. Framing is recommended for this paper type.



Premium Luster Photo Paper

This instant drying RC photo paper produces vivid, lifelike images that rival those of traditional silver halide prints. Its semigloss “E” surface and 10 mil thickness provide a true photographic look and feel.

Enhanced Matte Paper

Enhanced Matte Paper is the perfect choice for photographers requiring a heavyweight photo paper without a gloss finish. Results are highly saturated images, which maintain excellent highlight and shadow detail.



How To Order Epson Ink and Paper

You can purchase genuine Epson ink cartridges, paper, and accessories from an Epson authorized reseller. For product information and to find the nearest authorized reseller, please call 800-GO-EPSON (800-463-7766) or browse our catalog of products at www.epson.com, select the product you are interested in, and click “Where to Buy.” To purchase online, please visit the Epson StoreSM at www.epsonstore.com (U.S. sales only). In Canada, please call 800-463-7766 for a reseller referral.

Epson Ink Cartridges

Matte Black:	T054820
Photo Black:	T054120
Cyan:	T054220
Magenta:	T054320
Red:	T054720
Blue:	T054920
Yellow:	T054420
Gloss Optimizer (2-pack):	T054020

Epson Papers

Paper name	Size	Part number
Epson Premium Glossy Photo Paper	Letter (8.5 x 11 inches)	S041667/S041286
	4 x 6 inches, Borderless	S041727/S041808
	5 x 7 inches, Borderless	S041464
	8 x 10 inches, Borderless	S041465
	4 inches x 26 ft roll paper	S041302
	8.3 inches x 32.8 ft roll paper	S041376
	B (11 x 17 inches)	S041290
	A3 (11.7 x 16.5 inches)	S041288
	Super B (13 x 19 inches)	S041289
	11 x 14 inches, Borderless	S041466
13 inches x 32.8 ft roll paper	S041378	
Epson Premium Semigloss Photo Paper	Letter (8.5 x 11 inches)	S041331
	4 inches x 26 ft roll paper	S041329
	Super B (13 x 19 inches)	S041327
Epson Premium Luster Photo Paper	Letter (8.5 x 11 inches)	S041405
	8.3 inches x 32.8 ft roll paper	S041408
	A3 (11.7 x 16.5 inches)	S041406
	Super B (13 x 19 inches)	S041407
	13 inches x 32.8 ft roll paper	S04140
Epson Enhanced Matte Paper	Letter (8.5 x 11 inches)	S041341
	A3 (11.7 x 16.5 inches)	S041343
	Super B (13 x 19 inches)	S041339
Epson Matte Paper Heavyweight	Letter (8.5 x 11 inches)	S041257
	8 x 10 inches, Borderless	S041467
	11 x 14 inches, Borderless	S041468
	A3 (11.7 x 16.5 inches)	S041260
	Super B (13 x 19 inches)	S041263
Epson Double-Sided Matte Paper	Letter (8.5 x 11 inches)	S041568
Epson Photo Quality Ink Jet Paper	Letter (8.5 x 11 inches)	S041062
	Legal (8.5 x 14 inches)	S041067
	B (11 x 17 inches)	S041070
	Super B (13 x 19 inches)	S041069
Epson Premium Bright White Paper	Letter (8.5 x 11 inches)	S041586
Epson Photo Quality Self Adhesive Sheets	A4 (8.3 x 11.7 inches)	S041106
PremierArt™ Matte Scrapbook Photo Paper for Epson	Letter (8.5 x 11 inches)	SCR1002
	12 x 12 inches	SCR1003
Epson Watercolor Paper - Radiant White	Super B (13 x 19 inches)	S041351
Epson Velvet Fine Art Paper	Letter (8.5 x 11 inches)	S041636
	Super B (13 x 19 inches)	S041637
Epson UltraSmooth™ Fine Art Paper	Super B (13 x 19 inches)	SP91209

The availability of paper types varies by location.