 




RAVPower®
 Facebook: www.facebook.com/RAVPower
 Twitter: @RAVPower
 Phone Hour: 9:00am - 5:00pm PST, Monday - Friday
 Address: 2728 Arroyo Ave, San Jose, CA 95131
 Email: support@ravpower.com (worldwide)
 support@ravpower.com (USA/UK)
 support@rav-power.com (Spain)

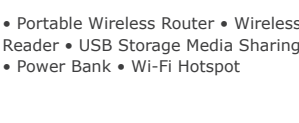

RAVPower®

• Portable Wireless Router • Wireless Micro SD/TF Card Reader • USB Storage Pool Sharing • NAS File Server • Power Bank • Wi-Fi Hotspot

Model: RP-WD21

Reliable • Affordable • Value

www.ravpower.com

Contents

English User Manual ----- 1-30

- 1. Introduction 1-30
- 2. Previews 4-5
- 3. How to Use the FlashHub 5-24
- 4. Specifications 24-28
- 5. Common Troubleshooting 28-29
- 6. Cautions 30
- 7. Warranty 30
- 8. Service and Support 30

Spanish User Manual ----- 31-61

- 1. Introducción 31-31
- 2. Previews 34-35
- 3. Cómo se utiliza el FlashHub 35-50
- 4. Especificaciones 50-50
- 5. Preguntas Frecuentes 50-60
- 6. Garantías 60
- 8. Servicio al Cliente 61

[illegible]

3.2 Wireless Router (AP/Router/Bridge)

AP Mode (wireless)
Deliverable: FlashHub is connected to a wireless network and forwards the user internet access into wireless to the multiple devices can share the internet.
Applicable: Office, home, hotel, and places where only wired network is available, such as a large office, a small meeting with a laptop, and other locations where a temporary network is needed.



How to set up AP Mode:
 1. When you have a RJ45 Ethernet cable you can connect your FlashHub to an existing router, you can instantly create a new network and share the network access among your mobile devices.
 2. Connect your FlashHub to one of the available Ethernet ports of the other router in the network.
 3. Plug in the Wi-Fi LED to turn BLUE.

If you device is connected to FlashHub already (even though it should be powered on or powered to the next step).



IMPORTANT: How to connect your device to FlashHub: Open your FlashHub on the PC or turn on the PC if you have a PC (Smartphones / Tablets) and you should be able to see a new wireless connection nearby. Go to the settings (Settings on Android, Settings on iOS) and go to the Wi-Fi settings. Select the new network name. If you have a PC, you can use the user name: "admin" (lower cases), the password is blank (but it will be required).

FlashHub Login and Admin Page (on smartphone)



Step 3. Turn on the Wi-Fi of your device (phone, laptop...)



Step 3.2 if I don't! Your device is now connected with FlashHub.




Bridge Mode
Deliverable: FlashHub is connected to a RJ45 cable network and works as a regular router.
Applicable: Application internet access from RJ45 cable network is available for one more but users need to share the Internet.




How to set up Bridge Mode:
 1. When you have a RJ45 Ethernet cable you can connect your FlashHub to an existing router, you can instantly create a new network and share the network access among your mobile devices.
 2. Connect your FlashHub to one of the available Ethernet ports of the other router in the network.
 3. Plug in the Wi-Fi LED to turn BLUE or you don't! Use the notification below.

How to set up Router Mode:
 1. Ensure your FlashHub is powered on.
 2. Ensure your device (PC/smartphones/Tablets) is connected to FlashHub already (before the previous instructions).
 3. From your smartphone (IE, Firefox, Safari, or any other web browser), go to: 10.10.254.
 4. Log-in with the user name: "admin" (lower cases), the password is blank (but it will be required).


FlashHub Login and Admin Page (on smartphone)

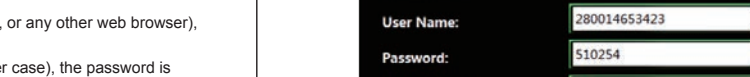

Step 3.2 if I don't! Your device is now connected with FlashHub.

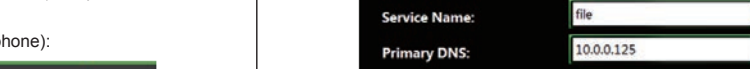


Router Mode
Deliverable: FlashHub is connected to a RJ45 cable network and works as a regular router.
Applicable: Application internet access from RJ45 cable network is available for one more but users need to share the Internet.

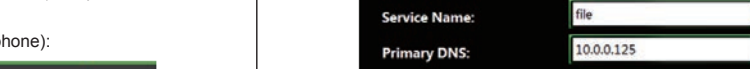


How to set up Router Mode:
 1. When you have a RJ45 Ethernet cable you can connect your FlashHub to an existing router, you can instantly create a new network and share the network access among your mobile devices.
 2. Connect your FlashHub to one of the available Ethernet ports of the other router in the network.
 3. Plug in the Wi-Fi LED to turn BLUE or you don't! Use the notification below.

How to set up Bridge Mode:
 1. When you have a RJ45 Ethernet cable you can connect your FlashHub to an existing router, you can instantly create a new network and share the network access among your mobile devices.
 2. Connect your FlashHub to one of the available Ethernet ports of the other router in the network.
 3. Plug in the Wi-Fi LED to turn BLUE or you don't! Use the notification below.


FlashHub Login and Admin Page (on smartphone)

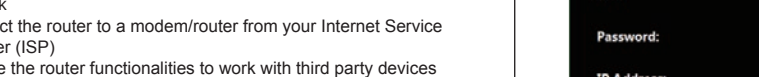

Step 3.2 if I don't! Your device is now connected with FlashHub.

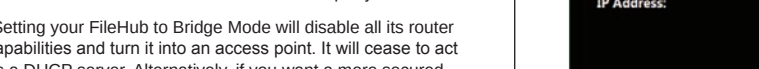

Bridge Mode
Deliverable: FlashHub is connected to a RJ45 cable network and works as a regular router.
Applicable: Application internet access from RJ45 cable network is available for one more but users need to share the Internet.

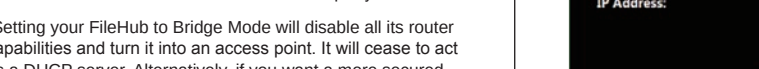

How to set up Bridge Mode:
 1. When you have a RJ45 Ethernet cable you can connect your FlashHub to an existing router, you can instantly create a new network and share the network access among your mobile devices.
 2. Connect your FlashHub to one of the available Ethernet ports of the other router in the network.
 3. Plug in the Wi-Fi LED to turn BLUE or you don't! Use the notification below.

[illegible][illegible][illegible][illegible]