

VINTAGE AM/FM RADIO

Instruction Manual

1. Carrying Handle
2. Tuning Knob
3. Volume & ON/OFF Knob
4. Dial Pointer
5. Telescopic Antenna
6. Loudspeaker
7. Band Wave Selector
8. Battery Compartment (rear side)
9. LED Power Indicator



Choking Hazard

There are small parts inside the unit. Not suitable for children under 3 years

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause

BATTERY INSTALLATION

Remove the battery door

Insert 3 x 1.5V 'AA' size batteries (or equivalent) (alkaline recommended), making sure the polarity is correct by aligning the '-' (negative) and '+' (positive) terminals. Failure to do so, may cause electrolyte leakage and corrosion or cause the batteries to explode, resulting in damage to the battery compartment.

Close the battery door.

Remove the batteries if the radio is not going to be used for a long period.

Do not mix old and new batteries.

Do not mix Alkaline, Standard (Carbon – Zinc) or Rechargeable (Nickel Cadmium) batteries.

RADIO OPERATION

1. Select AM or FM band using the Wave Band Selector
2. Switch the unit ON by turning the Volume Knob clockwise – a click will be heard. Adjust Volume as required.
3. Select the station, using the Tuning Control. The Frequency will be indicated on the Dial Scale.
4. Switch the unit OFF by turning the Volume Knob anti-clockwise, until a click is heard

SPECIFICATIONS

Frequency : AM 530 -1710 KHz FM 88- 108 MHz (America)

AM530 -1600 KHz FM 76 – 108 MHz (Japan)

MW 525-1605 KHz FM 87.5-108 MHz (Europe)

Loudspeaker : 2 ¼", 8 ohm / 0.5W

Batteries : 3 x 1.5V "AA" Size Batteries (not included)

Power : DC4.5V Operation, LED Power Indicator

Please retain packaging and instruction Leaflet for future reference as it contains important information.

No. F-645

1.

CE

MADE IN CHINA