

# USER'S MANUAL



## CONVERTER BOX

To insure that the product operating at its best, please read this user's manual before use and keep it for future reference.

# Content

---

|  |              |
|--|--------------|
| <b>Package content</b> .....           | <b>1</b>     |
| <b>Safety warning</b> .....            | <b>2-3</b>   |
| <b>Overview of the equipment</b> ..... | <b>4-7</b>   |
| 1. Front panel.....                    | 4            |
| 2. Rear panel.....                     | 4            |
| 3. Remote control unit.....            | 5-7          |
| INFO key.....                          | 6            |
| AUDIO key.....                         | 6            |
| CC key.....                            | 6            |
| PREV/NEXT & F.R./F.F key.....          | 6            |
| EPG key.....                           | 7            |
| OK/(LIST) key.....                     | 7            |
| FAV key.....                           | 7            |
| <b>Cable connections</b> .....         | <b>8</b>     |
| <b>Menu operation</b> .....            | <b>9-15</b>  |
| 1. Program.....                        | 9            |
| 2. Picture.....                        | 10           |
| 3. Channel search.....                 | 10 - 11      |
| 4. Time setting.....                   | 12           |
| 5. Option.....                         | 12           |
| 6. System setup.....                   | 12-14        |
| 7. USB.....                            | 14           |
| Music.....                             | 14           |
| Photo.....                             | 14           |
| Movie.....                             | 14           |
| PVR.....                               | 14           |
| <b>PVR (TV Recording)</b> .....        | <b>15-16</b> |
| 1. Time shift.....                     | 15           |
| 2. Recording.....                      | 16           |
| 3. Programmed time recording.....      | 16           |
| <b>Appendix</b> .....                  | <b>17-18</b> |
| 1. Troubleshooting.....                | 17           |
| 2. Specifications.....                 | 18           |

# Package Content

---



**Unit**



**Remote Control**



**User Manual**



**A/V Cable**

# Safety Warning

---

## FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. This is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off or on, the user is encouraged to try to correct the interference by one or more of the follow measures:

- Reorient or relocate the receiving antenna
  - Increase the separation between the equipment and receiver
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
  - Consult the dealer or an experienced radio/TV technician for help
- 

## Important Safety Instructions



To reduce the risk of electric shock.  
Do not remove cover.  
No user-serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

1. Read, follow and keep these instructions.
2. Do not use this apparatus near water.
3. Clean only with a damp cloth. Please unplug power prior to cleaning.
4. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Protect the power cord from being walked on or pinched particularly at the plug, receptacles, and the point where they exit from the apparatus.
7. Only use attachments/accessories included within this package.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

A Class II APPARATUS shall be permanently marked with the words "DOUBLE INSULATION" or "Double Insulated" and "When servicing use only identical replacement parts."

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

# Safety Warning

---

## Precautions

Please read these precautions before operating this unit.

### 1. Power cord protection

To avoid any malfunctions of the unit, and to protect against electric shock, fire or personal injury, please observe the following.

- Hold the plug firmly when connecting or disconnecting the AC power cord.
- Keep the AC power cord away from heating appliances.
- Never put any heavy object on the AC power cord.
- Do not attempt to repair the AC power cord in any way.
- Never make or change connections with the power switched on.

### 2.Placement

Avoid placing the unit in areas of:

- Direct sunlight or heating radiators
- High temperature (over 35°C) or high humidity (over 90%)
- Dust as the internal parts may be seriously damaged.

### 3.Non-use periods

When the unit is not being used, turn it off. When left unused for a long period of time, the unit should be unplugged from the power source.

### 4.No fingers or other objects inside


- Touching internal parts of this unit is dangerous, and may cause serious damage to the unit. Do not attempt to disassemble the unit.
- Do not put any foreign object in this unit.

### 5.Keep away from water

- Keep the unit away from flower vases, tubs, sinks, etc. if liquids are spilled into the unit, serious damage could occur.

# Overview Of The Equipment

## 1. Front Panel

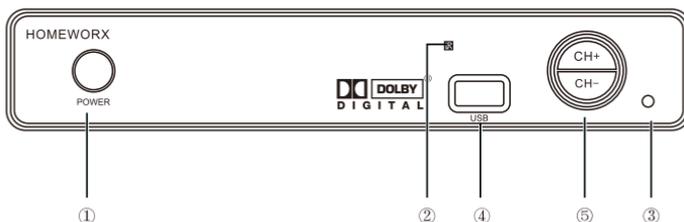

1 **POWER BUTTON**: Press to power on/off the converter box


2 **IR**: Remote control receiver

3 **LED indicator**

4 **USB**

5 **CH+ / CH-**: Channel up/down

## 2. Rear Panel

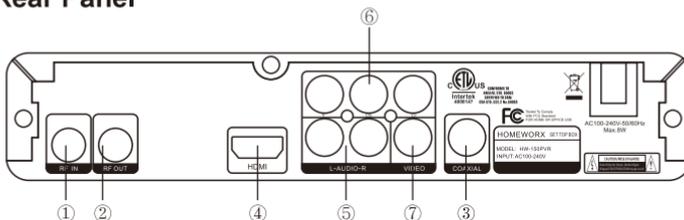

1. **RF IN** Connect to terrestrial antenna.

2. **RF OUT** CH 3/4 NTSC RF output

3. **COAXIAL** Coaxial digital audio output

4. **HDMI** HDMI output

5. **L - AUDIO - R** Connects these terminals to analog audio inputs of a TV set. Or connect these terminals to the L/R inputs of a separate audio component.

6. **Y/Pb/Pr** Component video output

7. **VIDEO** If your TV or monitor has composite Audio/Video cable, connect this jack to the AV input jack on your TV or monitor using an Audio/Video cable

# Overview Of The Equipment

## 3. Remote Control Unit



### The remote key list:

- **STANDBY:** Press to turn on or standby
- **HDMI:** Adjust resolution
- **MUTE:** Press to mute the sound of TV audio, press again will restore the sound
- **0 – 9:** Press to enter the required numbers in the input box or select a channel to watch  
Press directly to tune a particular channel.
- **—:** Press to input a dash in a virtual channel number
- **REC:** Press to start recording
- **RECALL:** Press to switch between current & last TV channel
- **TIMER:** Press to go to Programmed Time Recording setup
- **MENU:** Press to display the Main Menu on the screen
- **EXIT:** Press to return to the previous menu
- **▲/▼/CH+/-:** Move cursor up/down; Channel + / -
- **◀/▶/VOL+/-:** Move cursor left/right; Volume + / -
- **OK:** Confirm
- **(LIST):** Press to display all TV channels or all Radio channels
- **◀◀/▶▶:** Prev / Next
- **◀/▶:** Rev / Fwd
- **FAV:** Press to display the favorite channel's list for setting
- **EPG:** Electronic Program Guide
- **CC:** Press to turn on/off closed captioning
- **INFO:** Show/Hide service info:  
Press once a Service Info Bar will appear  
Press again to show Detail Info  
Press again to show Program Info
- **PLAY:** Press to resume playback
- **PAUSE:** Press to pause playback or recording
- **STOP:** Press to stop playback or recording
- **REPEAT:** Press this button to repeat the current options
- **USB:** Press to view content of connected external HDD or Flash drive
- **AUDIO:** Switch Audio channel
- **HOLD:** This is a Control Key under USB/Video and PVR mode

# Overview Of The Equipment

## INFO. key

Press "INFO" key to display the Information banner while viewing TV programs.  
Information banner:



## AUDIO key

Some programs may have multilingual audio language and this audio broadcast may be on a different audio mode such as Stereo, Left or Right. All the available audio languages will be displayed on the audio track window when you press the L/R key. The screenshot illustrates this below. If there is no audio output after you have selected the audio language, it indicates that there is no audio on the current audio mode, so you have to select the previous audio mode.



## CC key

Certain programs have multilingual subtitle information. All available subtitle languages will be displayed in the subtitle information window when you press the SUBTITLE key. The screenshot illustrates this below. Follow the help information in the subtitle window to select preferred subtitle.



## ◀◀ & ▶▶ (PREV / NEXT) key & |◀◀ & ▶▶| (F.R. / F.F) key

The PREV/NEXT key and F.R./F.F. key can be used during playback of multimedia programs from your external USB device. Press the PREV/NEXT key to go to the previous/next program and F.R./F.F. key to fast forward or rewind during playback.

# Overview Of The Equipment

## EPG key

Press EPG key to display the on screen electronic program guide.

This displays a 7 days Electronic Program Guide for all programs being broadcast from all available broadcasters.



## OK/(LIST) key


Press OK key to display all TV channels or all Radio channels. Follow the help information at the bottom of the window to select preferred channel.



## FAV key

### Setting up Favorite TV or Radio Channels:

You can add preferred channels to a favourite's channel list. Press the Menu key to access the Program Edit Menu. The Favourite channel option allows you to classify the channels by different genre: Movies/News/Sports/Music. Press the "FAV" or "OK" key to confirm your selection. A heart shaped symbol will appear next to that channel which confirms your selection.

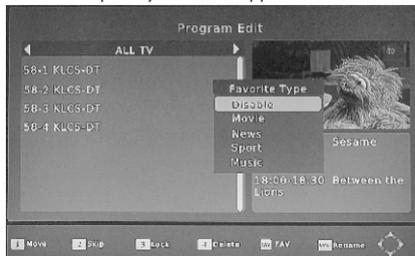


### Disable Favourite TV or Radio Channel:

Press the Menu key to access the Program Edit Menu. The list of the favourite channels will be displayed. Highlight the desired channel to be disabled. Press "FAV" button, select the "Disable" option and press the "FAV" or "OK" key to cancel. Press the "Exit" key to exit the menu.

# Cable Connections

Make sure the STB is connected properly as below:

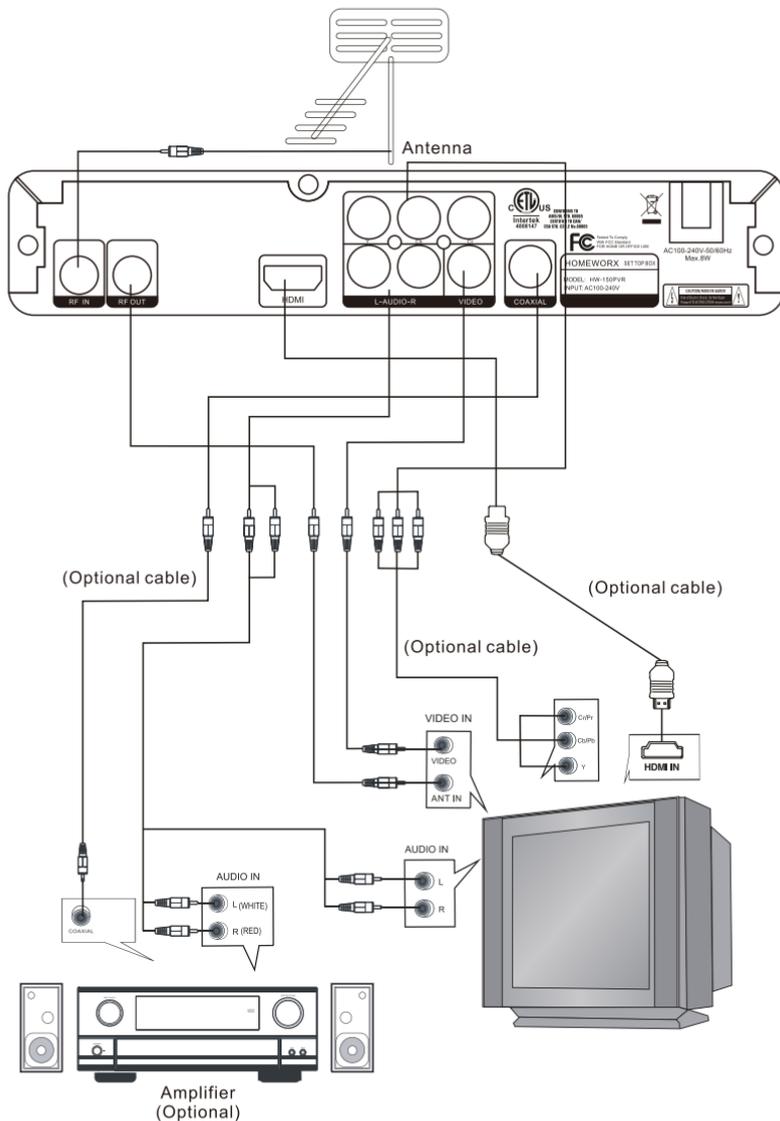

# Menu Operation

Press MENU key to display the main menu. It consists of 7 items as following:

- Program
- Picture
- Channel Search
- Time Setting
- Option
- System
- USB



Figure 1

*Note: In any page of the menu, you can use EXIT key to return to previous menu page, or press MENU key switch to Main Menu page and then press MENU key again to exit Main Menu.*

## Program

Press ▼ key first, then press ► key, enter into Program setting menu. (password: 000000)



Figure 2



Figure 3

Choose the menu as per request (Move/Skip/Lock/Delete/FAV/Rename).

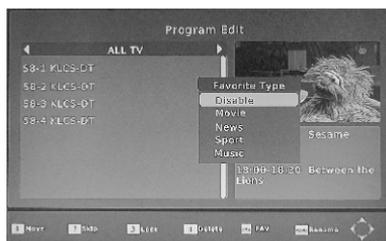


Figure 4

# Menu Operation

## Picture



Aspect Ratio: AUTO, 16:9 Pillar Box, 16:9 Pan & Scan, 4:3 Letter Box, 4:3 Pan & Scan, 4:3 Full, 16:9 Wide Screen  
Resolution: 480i, 480p, 720p, 1080i & 1080p (60Hz)  
TV Format: NTSC / PAL

Figure 5

## Channel Search

### 1. Auto Search 2. Manual Search 3. Country 4. RF Output

Use ▲ & ▼ keys to move up and down from one item to another, and press ► key to display corresponding sub-menu.

#### Auto Search

In the Main menu, use ▲ & ▼ keys to select Auto Search item, and press ► key to enter into Auto Search menu.



Figure 6



Figure 7

#### Manual Search

In the Main menu, use ▲ & ▼ keys to select Auto Search item, and press ► key to enter into Manual Search menu.



Figure 8



Figure 9

# Menu Operation

1. You can press the number keys into channel, or press directional keys to choose.
2. Suggestion using auto channel search
3. Press EXIT to quit

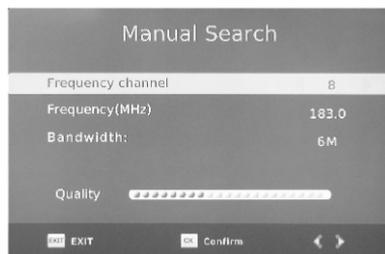


Figure 10

## Country

In the Main menu, use ▲ & ▼ keys to select Auto Search item, and press ► key to enter into Country menu to select different countries.



Figure 11

## RF Output

The system can output channel 3 or channel 4 NTSC RF signal as following:



1. Use a cable to connect "RF OUT" converter of the STB and your TV can support CATV input.
2. Auto search the program and change current channel to CH3 or CH4 directly by inputting the channel number in your TV.



Figure 12

## Loop through output setting

The system can select the loop through as following:

1. Use a cable to connect "RF OUT" converter of the STB and your TV can support CATV input
  2. Go to the Setup Menu and ON/OFF the loop through RF output
  3. Auto search the program to the target channels. (when searching programs, please use TV Remote)
- Note: When under the setting of LOOP THROUGH, the machine will not play the TV program.

# Menu Operation

## Time Setting

Time Zone: select Time and Timezone.

Sleep: press ► key to select the Sleep Time (1~12hours).

Power ON/OFF: press ► key into the setting menu, select Power ON Time or Power OFF Time.



Figure 13



Figure 14

## Option

OSD Language: English, Spanish, French



Figure 15



Figure 16

## Close Caption

CC option list:

|                 |  |
|-----------------|--|
| CC Display      | CC OFF, CC1, CC2, CC3, CC4, CC5, CC6                           |
| CC Position     | Auto, Top, Bottom  |
| Font Size       | Default, Small, Medium, Large                                  |
| Front Color     | Default, White, Black, Red, Green, Blue, Yellow, Magenta, Cyan |
| BG Color        | Default, White, Black, Red, Green, Blue, Yellow, Magenta, Cyan |
| CC Transparency | Default, Solid Transparent, Transparent                        |

# Menu Operation

## System Setup

In main menu, select System Setup item and press **OK** key to enter into System Setup menu. Press **▲** & **▼** to select item and **▶** key to enter into sub menu or change current item setting.

1. **Parental Guidance:** Press **▶** key when this item is highlighted, input password.



Figure 17

Password: 000000



Figure 18

Select Rating Region:



Figure 19



Figure 20

2. **Set Password:** Press **▶** key when this item is highlighted. (Figure20)

-> Input old password (Default 000000)  
-> Input new password

3. **Restore Factory Default:** Restore system setting parameter to default setting if you press **▶** key when this item is highlighted.  
**\* Default password is 000000**



Figure 21

4. **Information:** Restore system setting parameter to default setting if you press **▶** key when this item is highlighted.

# Menu Operation

5. **Software Update:** Insert USB disk while the unit on, choose the upgrade file, press the right directional key to upgrade, make the sure the unit stays on while the upgrade is processing.



Figure 22



Figure 23

## USB

### Multimedia

MENU=>Multimedia You can now select to view Photos, play MP3 music files and view Movie files via the multimedia player. Known supported files are outlined below.

NTFS, FAT32 and FAT16 file systems are supported.

| Player | Supported file                             |
|--------|--|
| Photo  | JPEG, BMP, PNG                             |
| Music  | *.wma, *.mp3, *.aac                        |
| Movie  | *.avi, *.mpg, *.dat, *.vob, *.mkv, *.mjpeg |



Figure 24



Figure 25

**Music:** You can choose your favorite songs, fast forward & fast rewind, stop and play, go to, REPEAT.

**Photo:** After choose the specific picture from the preview file, you can press the "Enter" key for the full screen. And press "Play" key enter the slide show mode; if you want the slide show go with music, you need to play the music first and then open the picture, then you will go with slide show + music.

**Movie:** You can choose any movie or song as you like, change last and next, fast forward & fast rewind, play and stop, goto, REPEAT and so on. Press the "PLAY" key enter the full screen status.

**PVR:** Depends on user's choose, there are some functions like remove/edit/delete and so on.

Play/stop/last/next/fast forward/fast rewind/repeat all these functions can be done with the remote, just according to what the user's request. If you press the remote's "HOLD" key, you will enter the "Full Screen" status.

### Photo Configure

Here you can choose slide time, mode and aspect ratio (See figure 26)



Figure 26

# PVR (TV Recording)

## PVR

Choose record device, partition.



Figure 27



Figure 28

### Recording way

#### 1. Real-time recording

-> When watching the TV program, if you need to record and save the current TV program, please insert USB hard drive, and set up the recording and saving route and position. As the picture's introduction : Figure 28

Please be advise that all your recording contents are for your personal enjoyment purpose only, they can not be used for commercial, distribution & public showing purpose.

### Timeshift

The Timeshift function allows you to pause the TV program being viewed. Once paused the TV program is being stored on your connected USB Hard Drive or Flash Drive.

When watching a program, press the **PLAY** key on the remote control to activate the function. You can now use the F.R. (Rewind function) to go back to the point you began the TIMESHIFT function or F.F. (Fast Forward) to catch up to live viewing. If you wish to stop the TIMESHIFT function, press the **STOP** key.



Figure 29

To save space of the USB hard drive, the recorded program is not stored under time shift mode. If you press the INFO key, you can access the TIMESHIFT information screen.

### WARNING:

For the compatibility of HDD and USB devices with TIMESHIFT and PVR function, please refer to the table below:

|                 | TIMESHIFT    | PVR RECORD | FORMAT        |
|-----------------|--------------|------------|---------------|
| USB flash drive | Works        | Works      | Fat32         |
| 3.5inch HDD     | Works        | Works      | NTFS          |
| 2.5inch HDD     | Works        | Works      | NTFS / FAT 32 |
| 1.8inch HDD     | doesn't work | Works      | NTFS / FAT 32 |

MENU=>USB=>Multimedia=>PVR

# PVR (TV Recording)

## Recording

-> Press the remote's "REC" key to enter the recording status, and press the "Stop" key when you finished the recording, so the whole record function will be done.



Figure 30

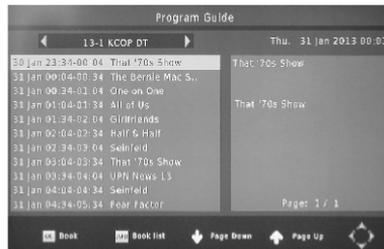


Figure 31

## 2. Programmed Time Recording

**Option 1:** Simply press "TIMER" key on the remote to go to Programmed Time Record menu. (Figure 32)

**Option 2:** Press the "EPG" key enter the TV program interface(Figure 31), and then press the "Enter" key go into the Programmed Time Record menu(Figure 32), Press the number key "1" enter it (Figure 33).



Figure 32



Figure 33

-> Select the desired channel, key in the date & time to start recording and the time to end recording, press "OK" to confirm then EXIT to go back to previous screen.

-> The recorded video will be saved into your external USB drive or Hard drive in PVR file format. The user can remove/edit/delete the video as you like. Just need to press the remote's "HOLD" key, you will enter the "Full Screen" status. Play/stop/last/next/fast forward/fast backward/repeat all these can be done on the remote, according to what the user's need.



Figure 34

# Appendix

---

## Troubleshooting

If you have difficulty with your digital TV set-top receiver, there are several possibilities you should investigate before calling for a service technician.

| Problem  | Possible Causes                                       | What To Do  |
|--|---|---|
| The display on the front panel does not light up | Power cord is not connected                           | Check that the power cord is plugged into power socket                              |
| No sound and no picture                          | The receiver is under standby                         | Press POWER key on the front panel to switch to operation mode                      |
| No signal when selecting channels                | The antenna is disconnected                           | Check antenna connection  |
|  | Program parameters are set incorrectly                | Set correct parameters  |
| Picture only ,but no sound                       | Audio cable is not connected securely                 | Connect it securely   |
|  | System in MUTE mode                                   | Press MUTE key on the RCU to restore volume   |
|  | Volume is set to minimum                              | Increase the volume to suitable level   |
|  | Audio setting parameter is wrong                      | Please go to Audio Setting menu, select proper audio mode and proper audio language |
| Sound only, but no picture                       | Video cable is not connected securely                 | Connect the video cable securely  |
|  | The current channel is in radio mode                  | Normal  |
| Video and audio mismatch or abnormal sound       | Audio channel is not set correctly                    | Select proper Audio channel   |
| Picture is still or mosaic phenomenon            | Signal is too weak                                    | Check to make sure that the signal cord has been connected tightly                  |
| Remote control unit does not work                | RCU is not aimed at the sensor on the front panel     | Aim at the sensor on the front panel  |
|  | Not enough power in the battery of the remote control | Change battery  |

**CAUTION:** If the problems are still unsolved after you're done all of these. Do not disassemble the STB yourself! Please contract the dealer, or a trained personnel for assistance.

# Appendix

---

## Specifications

### Tuner

|                       |             |
|-----------------------|-------------|
| Input Connector       | F Type jack |
| Input Frequency Range | VHF & UHF   |
| Num of RF Inputs      | 1           |
| Input impedance       | 75 ohm      |
| RF output Connector   | F Type jack |
| Loop through          | 57-803 MHz  |

### Demodulation

|                        |  |
|------------------------|--|
| Standard               | ATSC NTIA standard, 8VSB                       |
| Guard interval Modes   | 1/32,1/16,1/8,1/4 Active Symbol duration       |
| FEC Modes Rate         | 1/2,2/3,3/4,5/6,7/8                            |
| Carriers/Constellation | All modes supported including non hierarchical |
| Demodulation           | COFDM(QPSK/QAM16/QAM64) 2K and 8K              |
| Channel bandwidth      | 6 MHz  |

### Video Decoder

|                  |  |
|------------------|--|
| Standard         | ISO/IEC 13818-2 and ISO/IEC 14496-10   |
| Transport stream | ISO/IEC 13818-1  |
| Video decoding   | MPEG-2 SD/HD (MP@ML, MP@L3 and HP@L4), MPEG-4 H.264/AVC SD/HD<br>DivX 4.X ~ 5.X<br>JPEG,BMP,PNG, Motion JPEG<br>AVI, VOB, MOV, MKV |
| Aspect ratio     | 4:3 16:9   |

### Audio Decoder

|                |   |
|----------------|---|
| Standard       | ISO/IEC13818-3 TS101154   |
| Audio decoding | MPEG-1 and MPEG-2 Layer I & II, Dolby Digital Audio, WMA and HE-AAC Digital Audio |
| Sample rate    | 32 kHz, 22.1 kHz, 44.1KHz,48 kHz  |

### Accessories

|                     |  |
|---------------------|--|
| Remote control unit | IR (36kHz) RC3 / other on request (38kHz)NEC |
| User Manual         | 1 pc   |
| AV cable            | 1 pc   |

### Power

|                     |                      |
|---------------------|----------------------|
| AC input range      | AC 100V-240V 50/60Hz |
| Power consumption   | < 8 W                |
| Standby consumption | <0,8 W               |
| Unit dimension      | 220X130X38mm         |
| Weight              | 0,60 kgs             |