
Multi-function Remote Control Instruction

EVERLASTING GLOW® FLAMELESS Candles

Multi-function Remote Controlled Flameless Candles



FOR INITIAL USE:

1. Remove and discard plastic tabs from candle and remote control battery compartment.

2. Turn on the switch on the bottom of candle and candle will light up.

3. To turn candle on and off, point remote directly at candle and use remote control ON/OFF buttons.

4. You have 4 TIMER options:
   Option 1 - 2 hour Timer Option Press the "2H" button.
   Your candle will glow for 2 hours then automatically go off, then the next day it will come on and go off at the exact same time you set it for. It is 2 hours on, 22 off.

   Option 2 - 4 hour Timer Option Press the "4H" button.
   Your candle will glow for 4 hours then automatically go off, then the next day it will come on and go off at the exact same time you set it for. It is 4 hours on, 20 off.

   Option 3 - 6 hour Timer Option Press the "6H" button.
   Your candle will glow for 6 hours then automatically go off, then the next day it will come on and go off at the exact same time you set it for. It is 6 hours on, 18 off.

   Option 4 - 8 hour Timer Option Press the "8H" button.
   Your candle will glow for 8 hours then automatically go off, then the next day it will come on and go off at the exact same time you set it for. It is 8 hours on, 16 off.

5. You have 2 MODE options: Press "Candle" to get flickering light. Press " Light" to get steady light.


6. You have 2 DIM options: Press DIM buttons to adjust candle brightness.

NOTE: There is a slight battery drain even if candles are not lit. To preserve battery life, turn candle switch to off position if you're not planning to use for a week or longer.

BATTERY REPLACEMENT


CANDLE(S):

1. Remove battery compartment cover on bottom of candle and remove batteries.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Replace the 4 expired AA batteries with new ones.
4. Be sure to insert batteries in proper directions as indicated on battery compartment.
5. Replace cover.

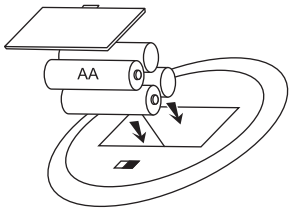

REMOTE:

1. Slide battery compartment out (which is on bottom edge of remote). Remove battery and discard properly.
3. Clean the battery contacts and also those of the device prior to battery installation.
4. Install 1- 3V CR2025 button cell battery as shown on battery diagram in battery compartment.
5. "+" side of battery should face towards you when installing battery.
6. Return battery compartment lid to its original position.

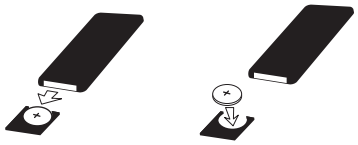

CARE:

1. Keep away from water or damp locations.
2. For indoor use only.
3. Turn off when not in use to save battery life.
4. Remove used batteries promptly.

REMOVE BATTERIES IF EXPIRED OR IF PRODUCT IS TO BE LEFT UNUSED FOR AN EXTENDED PERIOD OF TIME

DO NOT expose batteries to fire or water. DO NOT attempt to recharge, use different sizes of batteries, or install batteries backwards. Never touch damaged or leaking batteries - this could result in burn injuries or cause serious internal injuries if swallowed. Obtain medical attention immediately if this occurs. Misuse can cause battery to overheat, rupture, leak, or explode, resulting in personal injury and/or property damage.
Proposition 65 Warning: All batteries may contain lead, cadmium, and mercury, chemicals known to the state of California to cause cancer, birth defects, and other reproductive harm.
Wash hands thoroughly after handling batteries.

FC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
Caution: Modifications not approved by the FCC could void users authority to operate.

⚠ WARNING: Choking hazard/small parts. This product is not a toy! Not for children under 6 years of age. For decoration only.

The Gerson Company Olathe, KS 66061 Made in China