

WOODHAVEN

BEFORE BEGINNING

Identify and verify that you have all the parts listed. Read thru the instructions at least once, familiarizing yourself with the parts and their use before proceeding. You'll need a #3 Phillips screwdriver for assembly.

5330

Outside Corner


Please Read Carefully!

Parts List:

Part	Description	Qty
5330	1-1/2" to 3" Outside Corners, set of 16.....	1
MF005	1/4-20 x 1/2" screw.....	8

These templates are designed to be used with the 5380 Corner Connectors, Ultra Tracks and our 5301 and/or 5302 Plate Kit. If you do not have these parts, the templates will not work.

©Copyright WOODHAVEN INC. 11/10/10
(800) 344-6657 or www.woodhaven.com

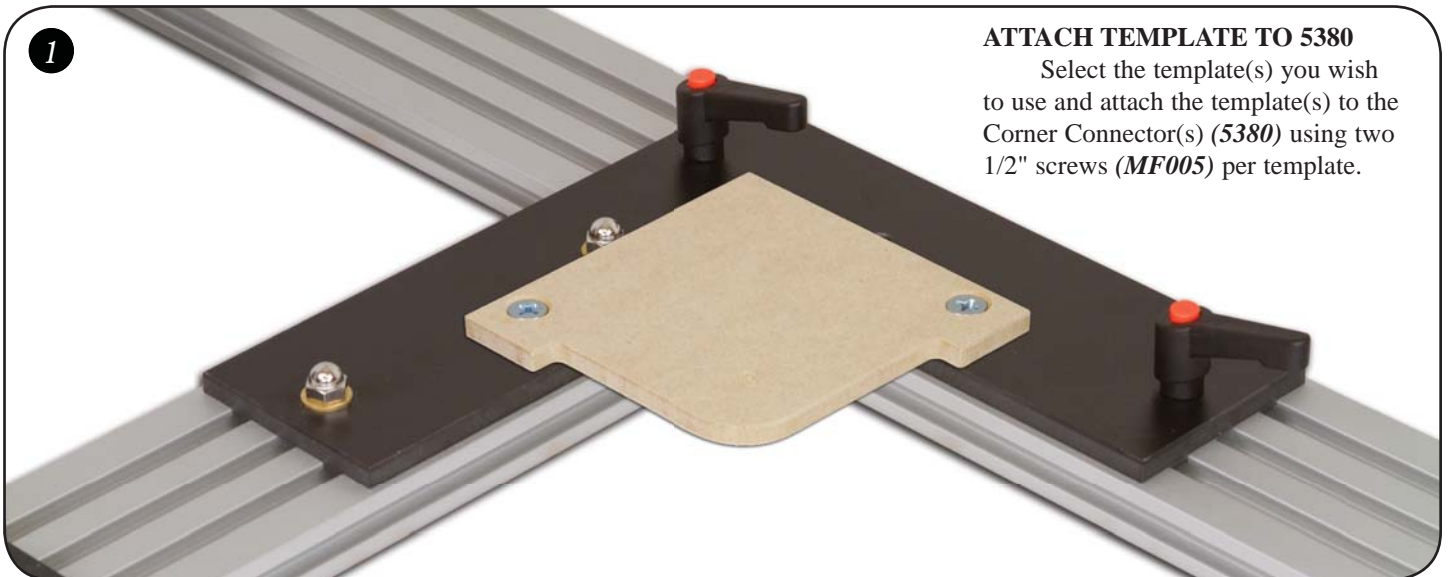

1

ATTACH TEMPLATE TO 5380

Select the template(s) you wish to use and attach the template(s) to the Corner Connector(s) (5380) using two 1/2" screws (MF005) per template.



2

USING THE TEMPLATES

Follow the edge of the template with the base of the 5301 or 5302 Plate Kit to cut the shape designated by the template.