



STEP 4

- 4.1 Attach Panel (G) to Panel (E), as shown.
- 4.2 Combine the assembled parts of Panel (C) (F) & (D) (F) to the unit using Screw (1).

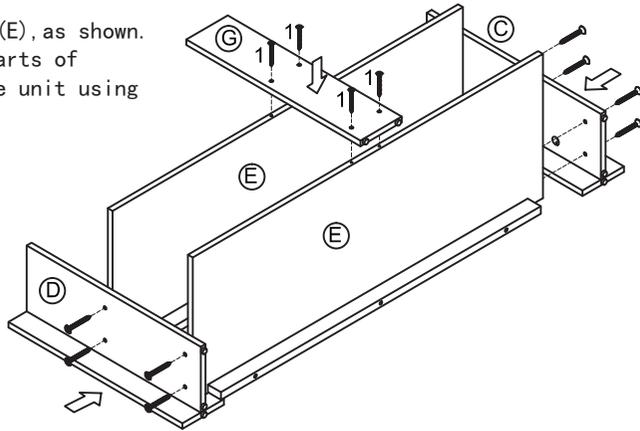


STEP 5

- 5.1 Upright the unit and attach Panel (A) on top.
- 5.2 Tighten Cam-Lock Nut (4) and cover it with Sticker (7).

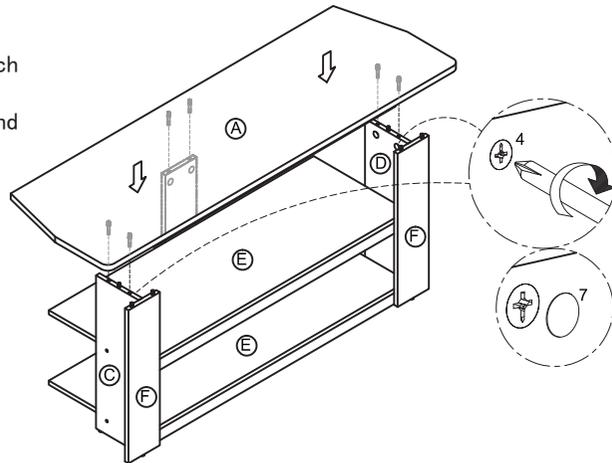

Recommended Maximum Weight

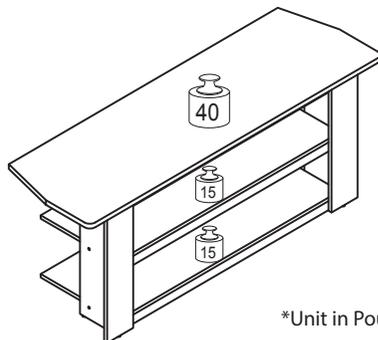

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.



Assembly Instruction

Furinno Parsons 42-in TV
Entertainment Center

MODEL : **12186**


DIMENSION : 42.1"(W) x 16.5"(H) x 13.4"(D)

00:30


Approx. 30 minutes



Recomm. 2 Person

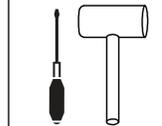

Tool Required

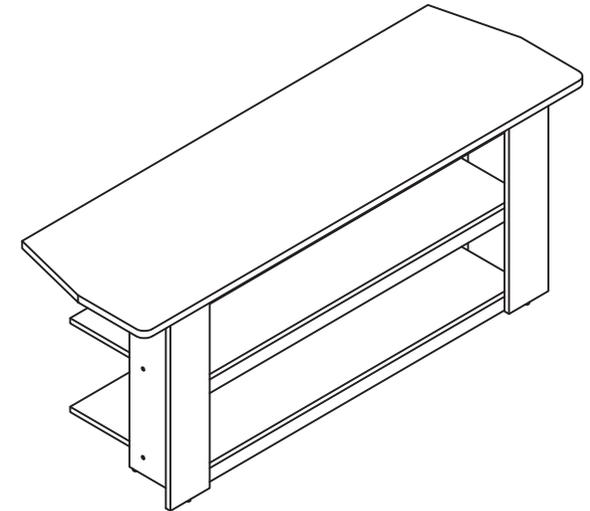

Customer Service

Tel/Fax: 281.500.9372

Toll Free: 773.299.8111 (Mon - Fri 9am - 5pm)

Email: support@furinno.com


www.furinno.com

Find us on
f Facebook

Pinterest

No	Hardware List	Qty
1	Screw 	21pcs
2	Dowel 	10pcs
3	Cam-Lock Screw 	8pcs
4	Cam-Lock Nut 	8pcs
5	Nail Leg 	8pcs
6	Screw Plastic Cover 	12pcs
7	Round Sticker 	8pcs

No	Parts List	Qty
A	Top Panel 	1pcs
B	Apron Panel 	3pcs
C	Left Side Panel 	1pcs
D	Right Side Panel 	1pcs
E	Shelf Panel 	2pcs
F	Front Panel 	2pcs
G	Back Panel 	1pcs

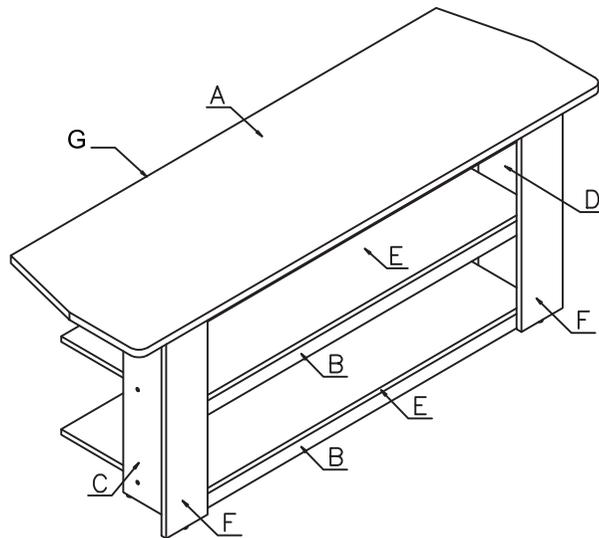


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


STEP 1

- 1.1 Insert Cam-Lock Screw(3) to Panel (A) & (F).
- 1.2 Insert Dowel (2) to Panel (C) (D) & (F).
- 1.3 Insert Cam-Lock Nut (4) to Panel (C) (D) & (G).
- 1.4 Insert Nail Leg (5) to Panel (C) (D) (F) & (G).
- 1.5 Attach Panel (B) to Panel (A) using Screw(1), as shown.

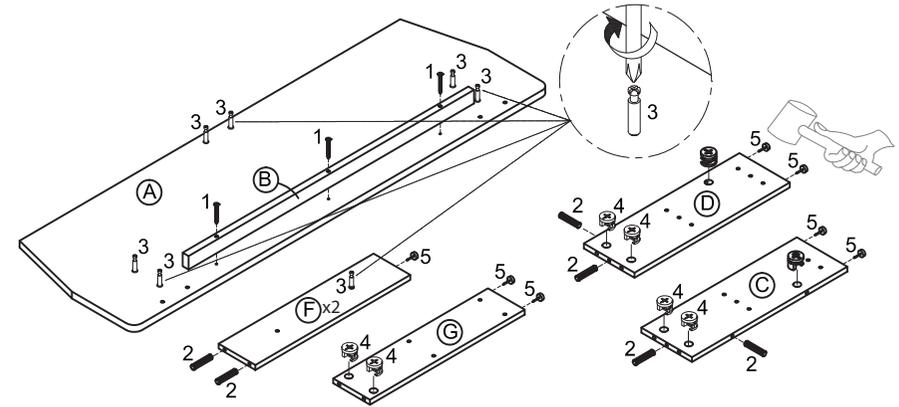

STEP 2

- 2.1 Insert Dowel (2) to Panel (E), as shown.
- 2.2 Attach Panel (B) to Panel (E) using Screw(1).

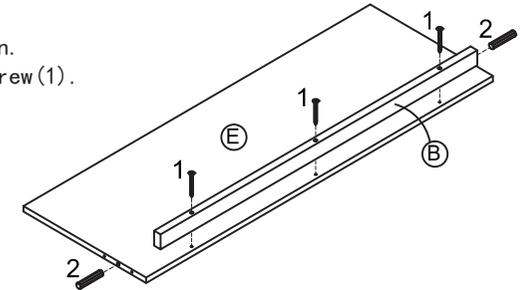

STEP 3

- 3.1 Attach Panel (D) to Panel (F).
- 3.2 Attach Panel (C) to Panel (F).
- 3.3 Tighten Cam-Lock Nut (4) and cover it with Sticker (7).

