

CHECK YOUR PACKAGE CONTENTS



D-Link Telephone Adapter
This will be referred to as the TA from this point forward.



12V 1A DC Power Adapter
Using a power supply with a different voltage rating will damage and void the warranty of this product.



Telephone Cord (Grey)
You can use this to connect your telephone to the TA.



Ethernet Cable (Blue)
You can use this to connect your TA to your computer or router.



Rubber Feet
You can use these on the bottom of your TA.

Use this page if you have a

Single PC connected directly to a DSL modem

- If you are using a home router, please see other side of this sheet.
- If you have a cable modem, please see other sheet.
- If you have static IP (and for a description of static IP), see instructions on page 18 of the accompanying Telephone Adapter Install Guide.

Step 1: Gather Information

Make sure you have the following information before you start your TA installation:

AT&T CallVantageSM Service User ID

Your 10-digit AT&T CallVantage Service number (provided in your order confirmation e-mail)

AT&T CallVantage Service Password

You were provided or selected this when you ordered the service; if you forgot it go to www.callvantage.att.com and click "Forgot your password?"

DSL Provider Username (PPPoE Username)


You must get this from your DSL provider

DSL Provider Password (PPPoE Password)

You must get this from your DSL provider


Step 2: Shut Off All Equipment

IMPORTANT! Shut down and unplug each device separately (i.e., don't simply shut off your powerstrip)

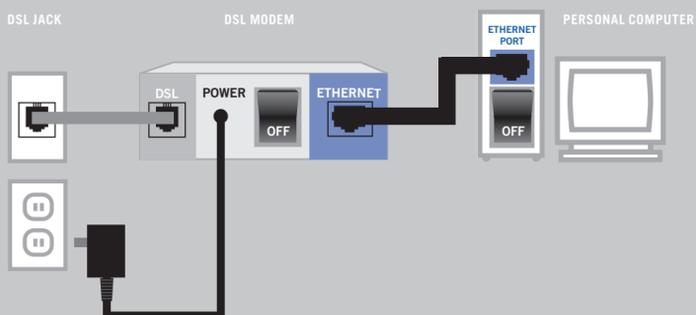

- Shut down your PC and set the power switch to your DSL modem to "off"
- Unplug your DSL modem


Step 3: Connect Equipment

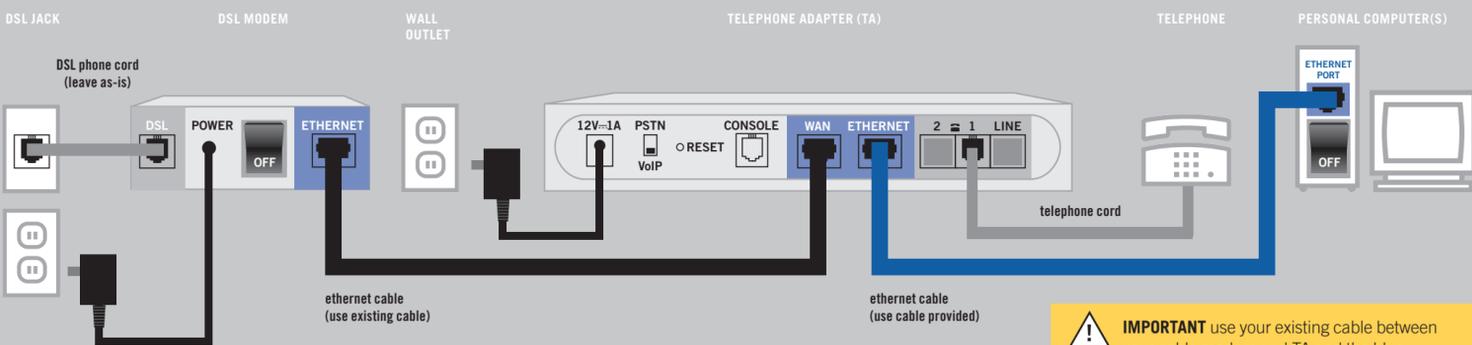

IMPORTANT use your existing cable between your cable modem and TA and the blue cable that came in this package between your TA and your PC

Step 4: Turn on Equipment in Order

IMPORTANT! You must turn on your equipment IN THE ORDER INDICATED for your service to work correctly

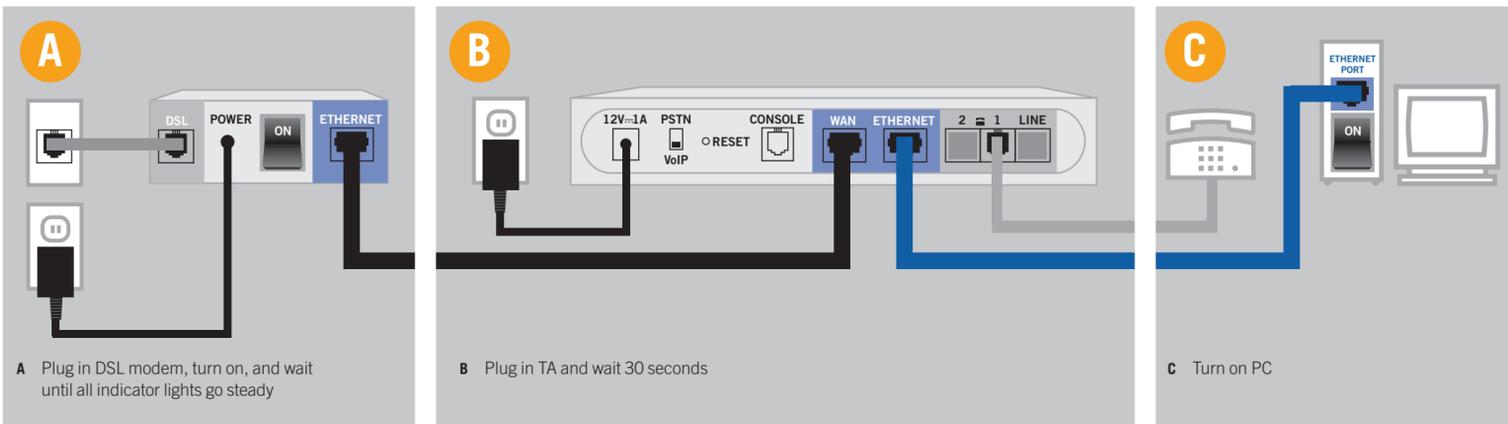

Step 5: Verify Your Connection



A Open your browser and type in <http://192.168.15.1>



B Click "Login to the web-based management module"



C Click "Configure WAN/LAN Access," then click "Configure WAN Port"



D Select PPPoE from the drop-down menu labeled "Get IP From"



E Enter your DSL provider username (PPPoE username) and DSL provider password (PPPoE password) and click "Save" at the bottom of the screen.



F Click "Save changes and reboot system now". Click "Save" to reboot your TA (this will not reboot your PC).

G Wait thirty seconds for the TA to reboot. After the reboot is complete, restart your PC.



H Verify that the status light on your TA is solid amber or blinking amber (H1) and that you can browse to a known website (e.g. www.att.com) (H2)

If you cannot browse or your status light is red, see page 15 of the Telephone Adapter Install Guide, "If your status light is red."

Step 6: Activate Your TA



A Go to www.callvantage.att.com and login using your AT&T CallVantage Service User ID and password

B Click the "Activate TA" button

C Follow the instructions on the screen

D When the online sequence is complete you should hear a clicking sound and single ring on the TA

Setup Complete

You can now make calls by dialing the 10-digit number from the phone connected to your TA and use the advanced features on www.callvantage.att.com.

If you experience any problems with the service, please refer to Troubleshooting, page 20 of the accompanying Telephone Adapter Install Guide.



Use this page if you have a

DSL modem and one or more PCs connected via a home router

- If you do not have a home router, please see other side of this sheet.
- If you have a cable modem, please see other sheet.
- If you have static IP (and for a description of static IP), see instructions on page 18 of the accompanying Telephone Adapter Install Guide.

CHECK YOUR PACKAGE CONTENTS



D-Link Telephone Adapter
This will be referred to as the TA from this point forward.



12V 1A DC Power Adapter
Using a power supply with a different voltage rating will damage and void the warranty of this product.



Telephone Cord (Grey)
You can use this to connect your telephone to the TA.



Ethernet Cable (Blue)
You can use this to connect your TA to your computer or router.



Rubber Feet
You can use these on the bottom of your TA.

Step 1: Gather Information

Make sure you have the following information before you start your TA installation:

AT&T CallVantage™ Service User ID

Your 10-digit AT&T CallVantage Service number (provided in your order confirmation e-mail)

AT&T CallVantage Service Password

You were provided or selected this when you ordered the service; if you forgot it go to www.callvantage.att.com and click "Forgot your password?"

DSL Provider Username (PPPoE Username)

You must get this from your DSL provider

DSL Provider Password (PPPoE Password)


You must get this from your DSL provider

Home Router User Manual

The user manual you received along with your home router. Many manufacturers let you download this from their website.


Step 2: Shut Off All Equipment

IMPORTANT! Shut down and unplug each device separately (i.e., don't simply shut off your powerstrip)

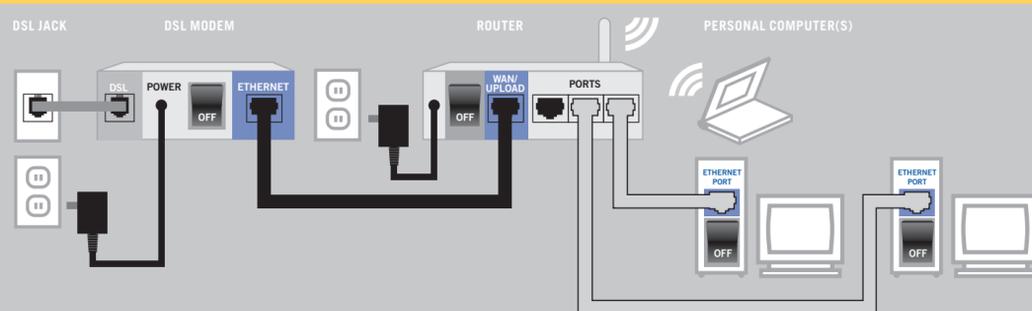

- Shut down your PCs and set the power switch to your home router and DSL modem to "off"
- Unplug your cable modem and router


Step 3: Connect Equipment

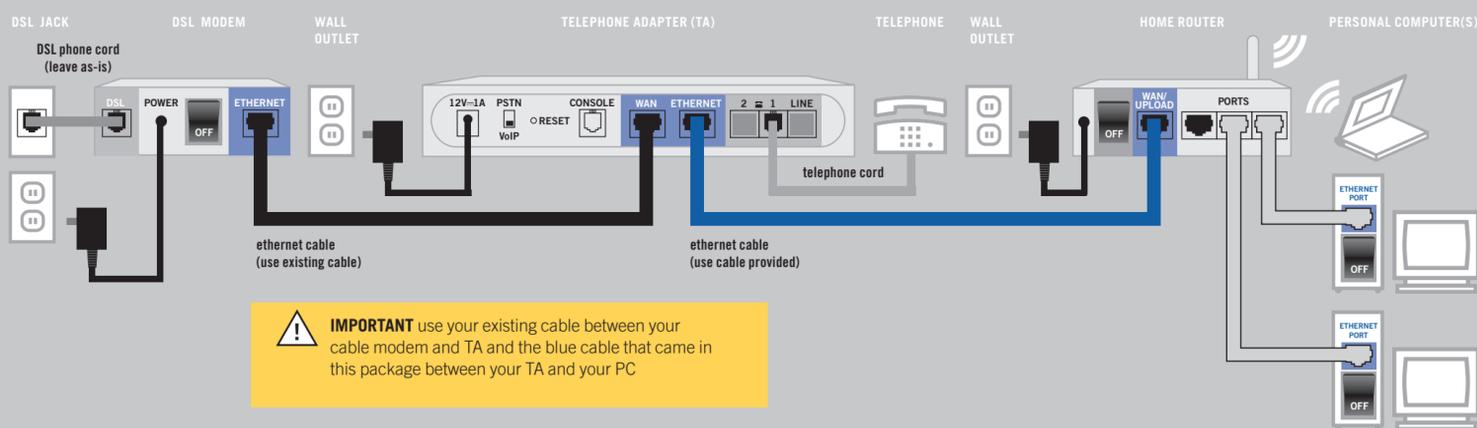

IMPORTANT use your existing cable between your cable modem and TA and the blue cable that came in this package between your TA and your PC

Step 4: Turn on Equipment in Order

IMPORTANT! You must turn on your equipment IN THE ORDER INDICATED for your service to work correctly

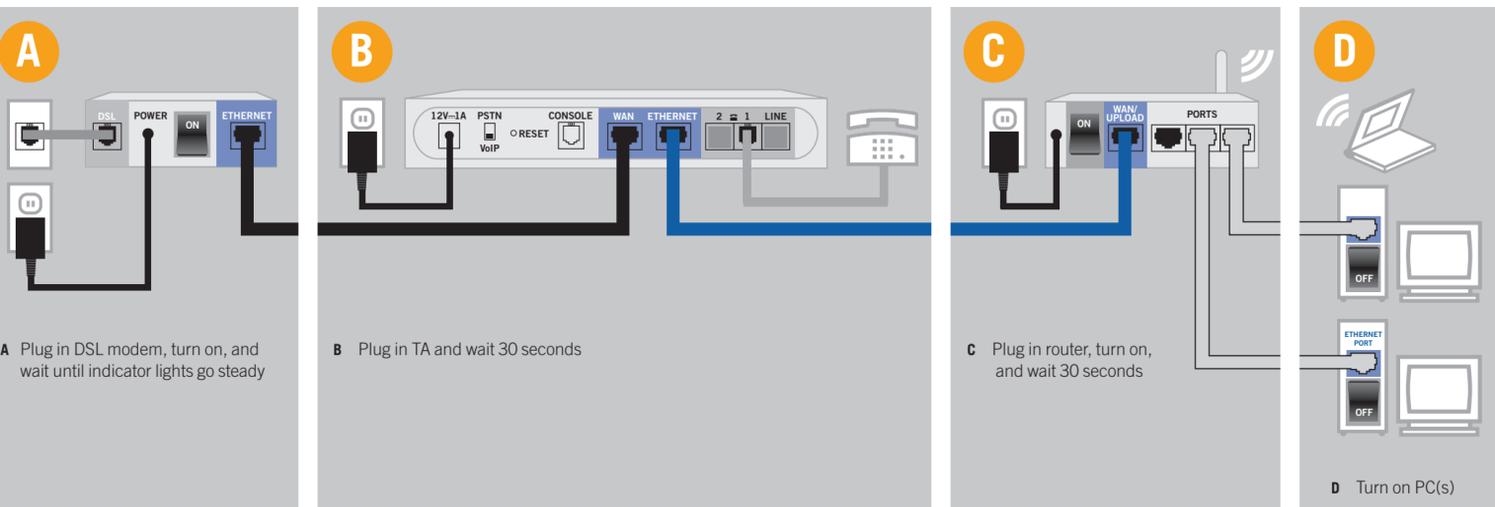

Step 5: Configure Router



Sample: Your router's control panel may look different

A Open a browser and type in the URL for your home router control panel (the URL is found in your router user manual)

B Make sure your router is configured to obtain IP address automatically (for most routers, go to WAN settings and set "obtain IP address automatically"; this will put it into what is known as DHCP mode. It may also be called "cable" or "Internet" mode.)

Please refer to your router's user manual for further detail.

Step 6: Verify Your Connection




A Open your browser and type in <http://192.168.15.1>



B Click "Login to the web-based management module"



C Click "Configure WAN/LAN Access," then click "Configure WAN Port"

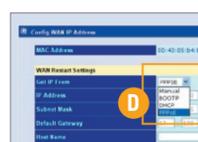

D Select PPPoE from the drop-down menu labeled "Get IP From"



E Enter your DSL provider username (PPPoE username) and DSL provider password (PPPoE password) and click "Save" at the bottom of the screen.



F Click "Save changes and reboot system now". Click "Save" to reboot your TA (this will not reboot your PC).

G Wait thirty seconds for the TA to reboot. After the reboot is complete, IN THE FOLLOWING ORDER: unplug your router and then plug it back in. Wait thirty seconds and then restart your PC.



H Verify that the status light on your TA is solid amber or blinking amber (H1) and that you can browse to a known website (e.g. www.att.com) (H2)

If you cannot browse or your status light is red, see page 16 of the Telephone Adapter Install Guide, "If your status light is red."

Step 7: Activate Your TA



A Go to www.callvantage.att.com and login using your AT&T CallVantage Service User ID and password



B Click the "Activate TA" button

C Follow the instructions on the screen

D When the online sequence is complete you should hear a clicking sound and single ring on the TA

Setup Complete

You can now make calls by dialing the 10-digit number from the phone connected to your TA and use the advanced features on www.callvantage.att.com.

If you experience any problems with the service, please refer to Troubleshooting, page 20 of the accompanying Telephone Adapter Install Guide.