




DREAM ON ME INC.
125 HELEN STREET
S. PLAINFIELD NJ 07080
908-791-0555

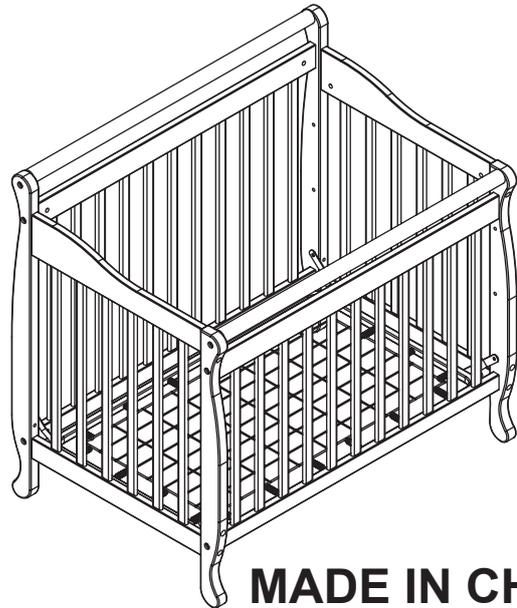

3 IN 1 CONVERTIBLE
PORTABLE CRIB
STYLE NO: 626

MADE IN CHINA

**CAUTION: ANY MATTRESS USED IN THIS CRIB
MUST BE AT LEAST 23 3/4 INCHES BY 37 3/4
INCHES WITH A THICKNESS NOT EXCEEDING
2 INCHES.**



WARNING:

****KEEP INSTRUCTIONS FOR FUTURE USE****

THIS PRODUCT MEETS OR EXCEEDS SPECIFICATIONS AS ISSUED BY THE CONSUMER PRODUCT SAFETY FOR NON-FULLSIZE BABY CRIBS.

CAUTION: BEFORE USING THIS UNIT RECHECK ALL SCREWS TO BE SURE THEY ARE TIGHTENED SECURELY. A PERIODIC CHECK SHOULD BE MADE OF ALL SCREWS & NUTS TO BE SURE THEY REMAIN TIGHT.

INFANTS CAN SUFFOCATE.

- * IN GAPS BETWEEN A MATTRESS TOO SMALL OR TOO THICK AND PRODUCT SIDES.
- * ON SOFT BEDDING NEVER ADD A MATTRESS. PILLOW COMFORTER, OR PADDING.

FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH. **SUFFOCATION HAZARD**-TO HELP PREVENT SUFFOCATION FROM ENTRAPMENT. WE RECOMMEND A DREAM ON ME MATTRESS/PAD.

DO NOT USE PLASTIC SHIPPING BAG OR OTHER PLASTIC FILM AS MATTRESS COVERS NOT SOLD AND INTENDED FOR THAT PURPOSE. THEY CAN CAUSE SUFFOCATION.

DO NOT PLACE PRODUCT NEAR WINDOW WHERE CORDS FROM BLINDS OR DRAPES CAN STRANGLE A CHILD. STRINGS CAN CAUSE STRANGULATION!

DO NOT PLACE ITEMS WITH A STRING AROUND A CHILD'S NECK. SUCH AS HOOD STRINGS OR PACIFIER CORDS.

DO NOT SUSPEND STRINGS OVER A PRODUCT OR ATTACH SPRINGS TO TOYS.

DO NOT TIE PACIFIERS, NECKLACES OR ANY OTHER ITEMS AROUND A CHILD'S NECK OR ON THE PRODUCT PARTS.

BEFORE EACH USAGE OR ASSEMBLY, INSPECT PRODUCT FOR DAMAGED HARDWARE, LOOSE JOINTS, MISSING PARTS OR SHARP EDGES. **DO NOT** USE PRODUCT IF ANY PARTS ARE MISSING OR BROKEN. ASK YOUR DEALER OR WRITE TO DREAM ON ME. FOR REPLACEMENT PARTS AND INSTRUCTIONAL LITERATURE IF NEEDED. **DO NOT** SUBSTITUTE PARTS. THE PRODUCT, INCLUDING SIDE RAILS, MUST BE FULLY ERECTED PRIOR TO USE. MAKE SURE LATCHES ARE SECURED.

DO NOT LEAVE CHILD IN PRODUCT WITH SIDE LOWERED. BE SURE SIDE IS IN RAISED AND LOCKED POSITION WHENEVER CHILD IS IN CRIB. REPLACE TEETHING RAIL IF DAMAGED. CRACKED OR LOOSE. DISCONTINUE USE OF THE PRODUCT WHEN CHILD IS ABLE TO CLIMB OUT REACHES THE HEIGHT OF 35 IN. (890MM).

WHEN CHILD IS ABLE TO PULL TO STANDING POSITION, REMOVE BUMPER PADS. LARGE TOYS. AND OTHER OBJECTS THAT COULD SERVE AS STEPS FOR CLIMBING OUT. WHEN CHILD IS ABLE TO PULL TO STANDING POSITION, SET MATTRESS/BASE TO LOWEST ADJUSTMENT POSITION AND REMOVE BUMPER PADS. LARGE TOYS AND OTHER OBJECTS THAT COULD SERVE AS STEPS FOR CLIMBING OUT.


DO NOT USE A WATER MATTRESS WITH THIS PRODUCT. IF REFINISHING, USE AN ONTOXIC FINISH SPECIFIED FOR CHILDREN'S PRODUCTS.

CONNECTION HARDWARE

a. 3" Allen head Bolt 20 PCS



c. 3/4" Allen head Bolt 4 PCS



e. Wood Dowel 8PCS



b. Barrel Nuts 20 PCS




d. Allen Wrench 1 PCS




CRIB COMPONENTS

A. Top Rail (2PCS)

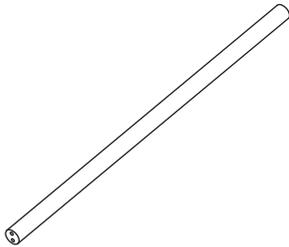

B. Front Rail Bottom (1PC)

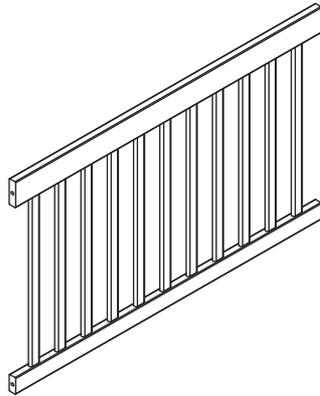

C. Left Front Leg (1PC)



D. Right Front Leg (1PC)




E. Left Back Rail Leg (1PC)




F. Right Back Rail Leg (1PC)




G. Back Rail Bottom (1PC)

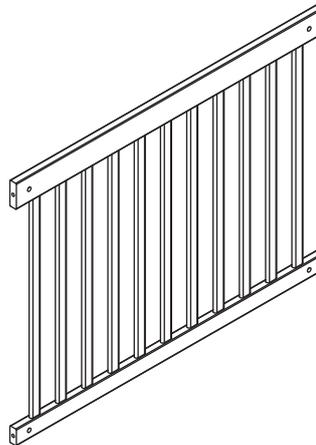


H. Left Crib End (1PC)

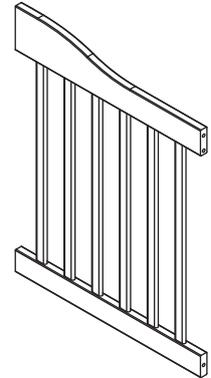


I. Right Crib End (1PC)

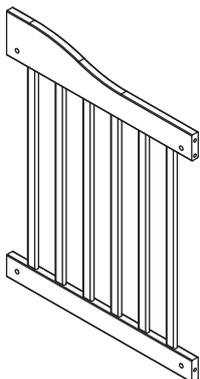


J. Metal Spring Support Platform (1PC)

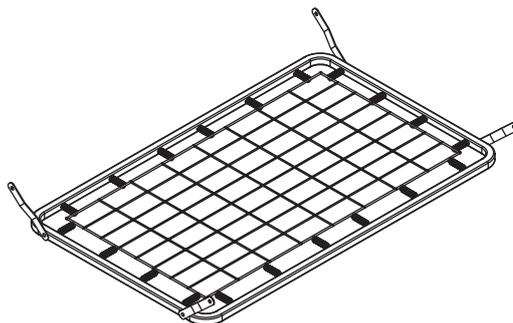

K. Mattress (1PC)

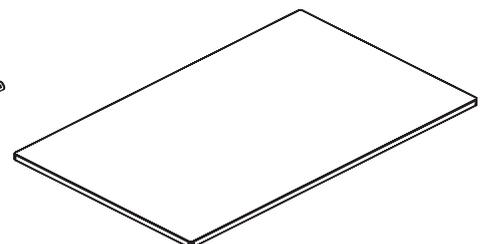



STEP 1

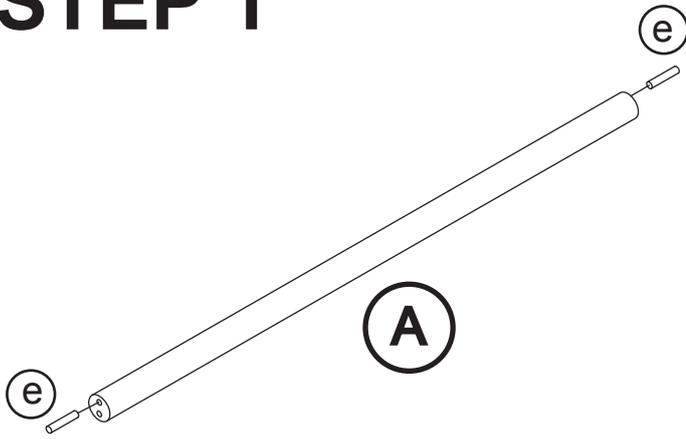

Insert wood dowels (e) into top rails (A).

STEP 2

Attach the right crib end (I) to the right front leg (D) and the right back leg (F) by using allen head bolts (a) and barrel nuts (b) and wood dowels (e). Then attach the left crib end (H) to the left front leg (C) and the left back leg (E) by using allen head bolts (a) and barrel nuts (b) and wood dowels (e).

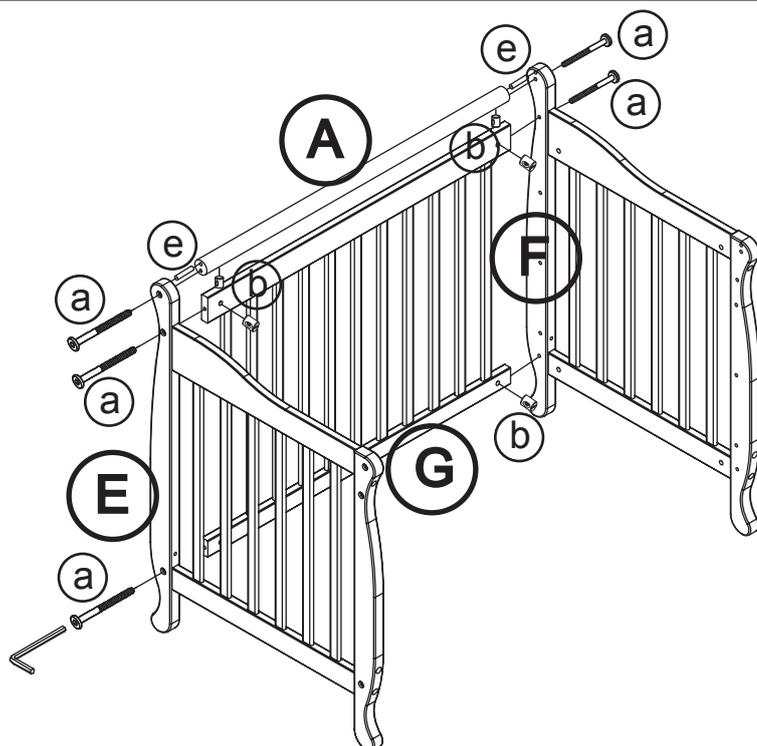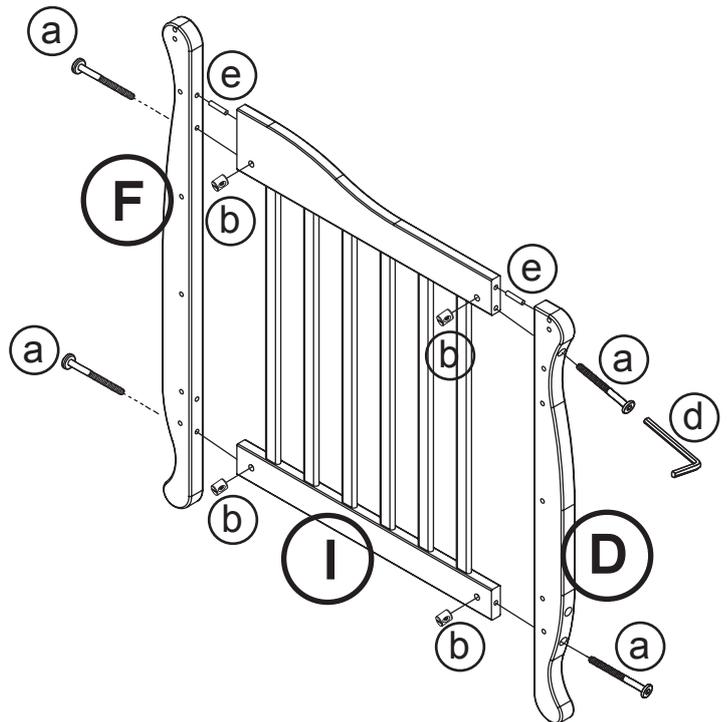


Attach the Top rail (A) and the back rail bottom (G) to the left back leg (E) by using allen head bolts (a) and barrel nuts (b) and wood dowel (e). Then attach the Top rail (A) and the back rail bottom (G) to the right back leg (F) by using allen head bolts (a) and barrel nuts (b) and wood dowel (e)


STEP 4

Locate the metal spring (J) with tabs.

Be sure the smooth side of metal spring (J) is paced upward. Position the tabs of metal spring (J) to mount to the selected position onto the legs. Inlert the bolts (c) , through the tabs and into thread insets onto the legs , then tighten securely with Allen Wrench (d).

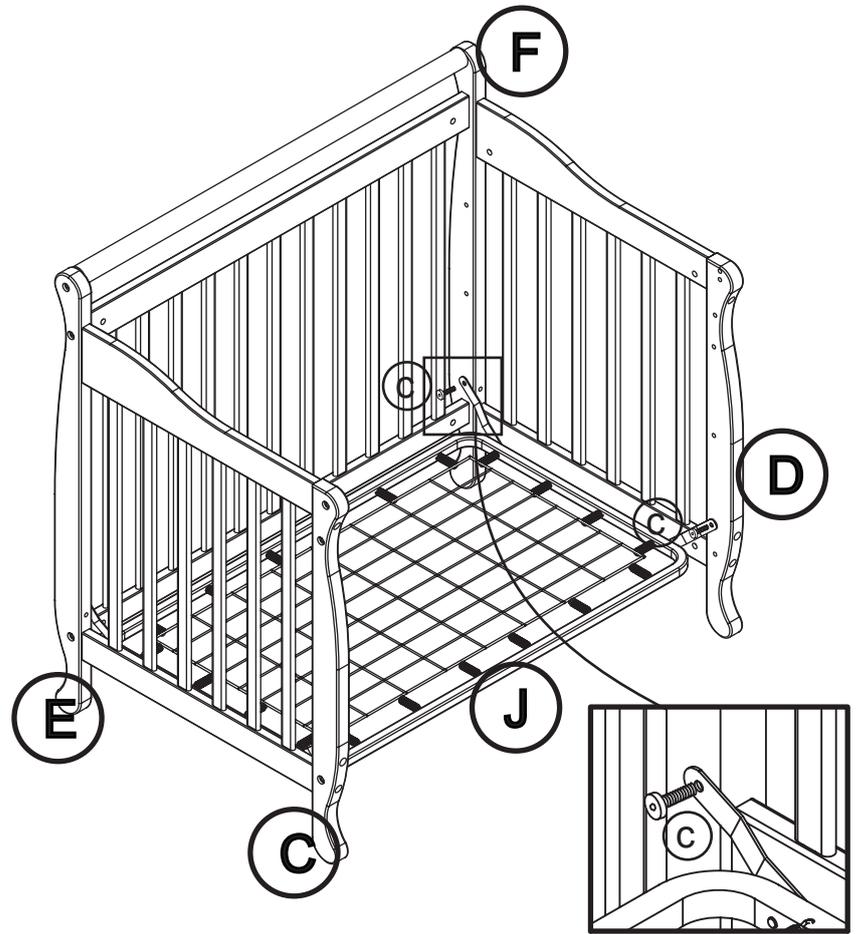


STEP 5

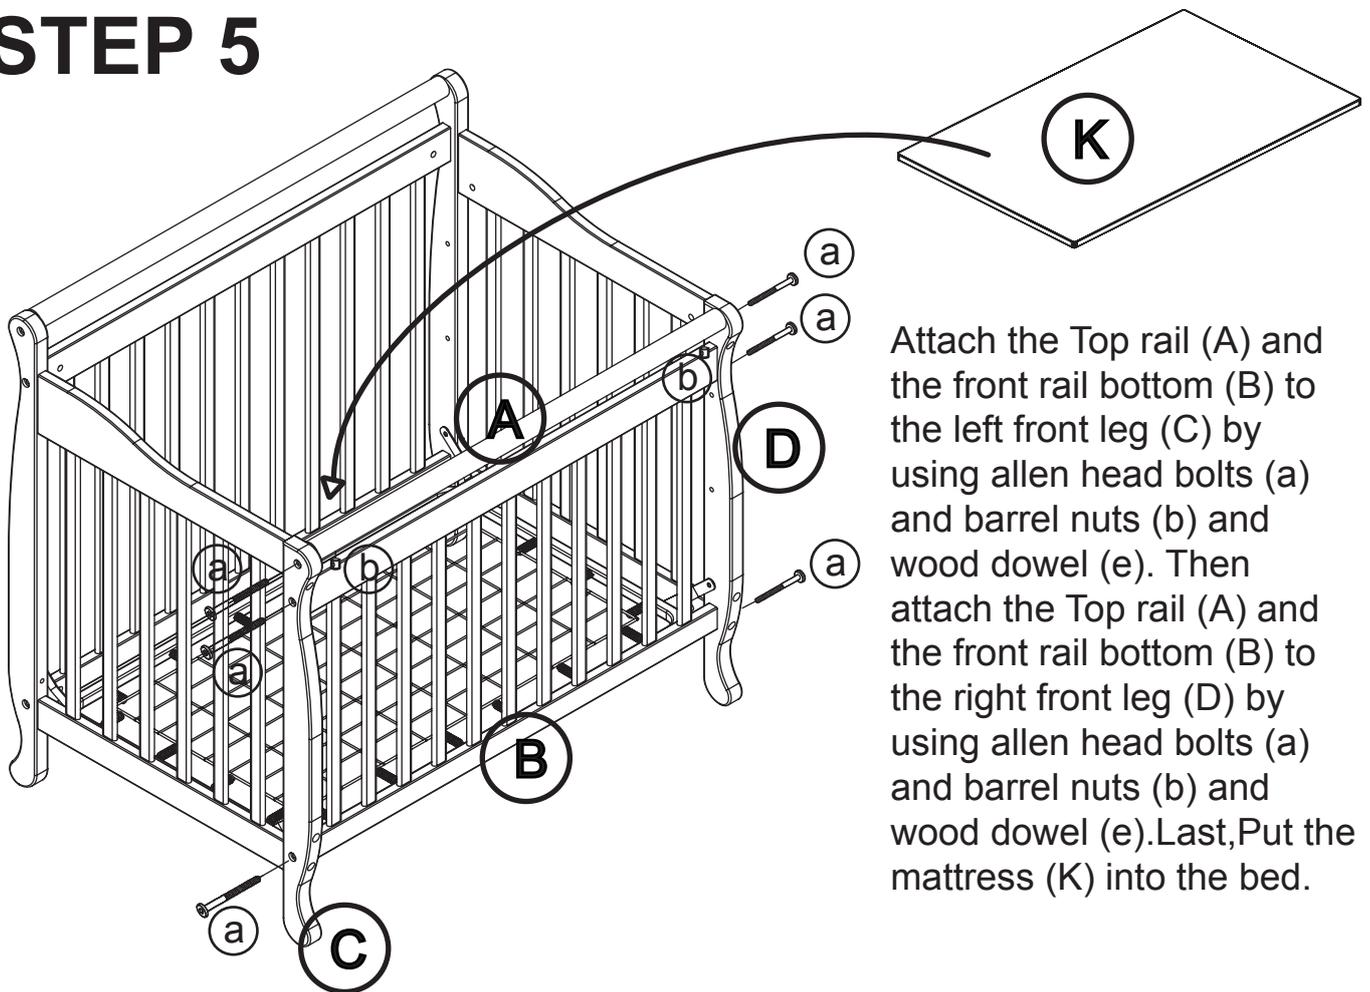


Attach the Top rail (A) and the front rail bottom (B) to the left front leg (C) by using allen head bolts (a) and barrel nuts (b) and wood dowel (e). Then attach the Top rail (A) and the front rail bottom (B) to the right front leg (D) by using allen head bolts (a) and barrel nuts (b) and wood dowel (e).Last,Put the mattress (K) into the bed.

CONVERT THE CRIB INTO DAY BED

Remove the top rail (A) and the front rail bottom (B) as shown.

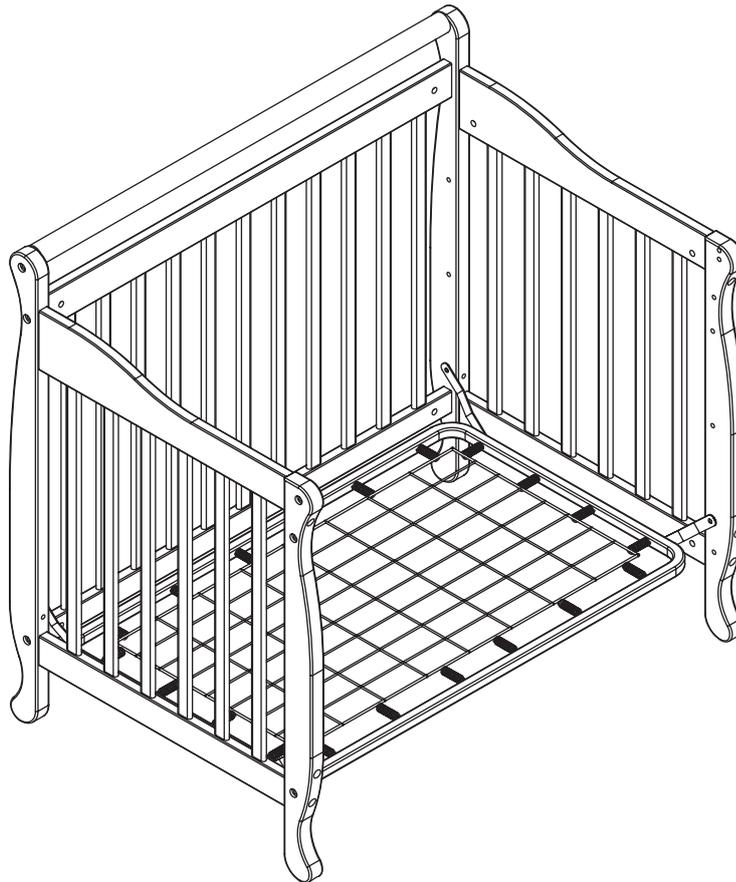

CONVERT THE CRIB INTO TWIN BED (FRAME RAIL NOT INCLUDED TO CONVERT TO TWIN BED)

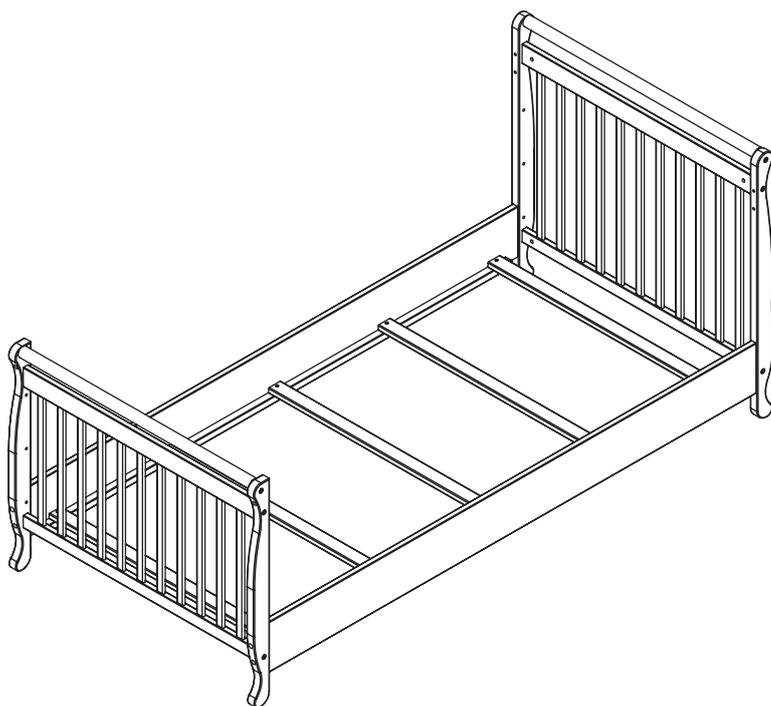

1. Remove the Metal Spring Support Platform (J) .Then remove the right crib end (I) and the left crib end (H).
2. Use the front panel as foot board of the single bed.
3. Use the rear panel as head board of the single bed.
4. connect the front and rear panels by a standard hollywood frame provided by others.