
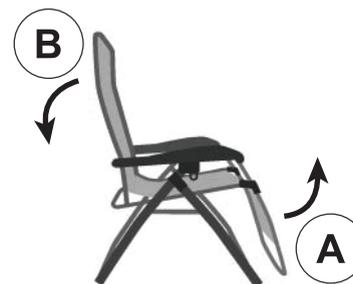


STRATHWOOD®

STRATHWOOD STEEL ANTI GRAVITY A-81 LOUNGE TEXTALINE W/CHAMPAGNE FRAME

ASIN: B001BSQB94

For safety purposes, after unfolding the chair, press the safety lock firmly into place.

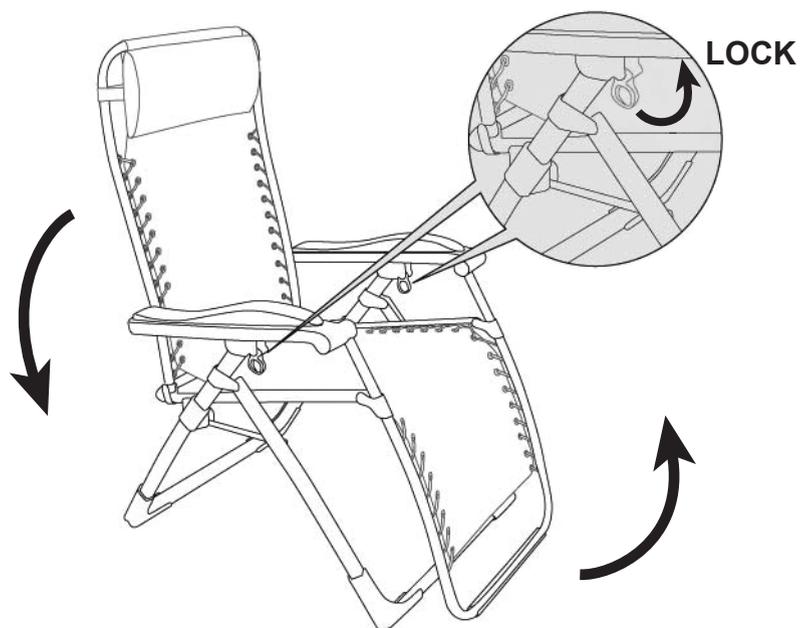

To Recline:

Place feet on lower cross bar (A) and push outward using your legs while SLOWLY leaning back against part (B).



To LOCK into desired reclining angle:

Pull part (C) up at both armrests to engage locks and hold desired position.

CAUTION:

Placing hands and fingers under the armrest may cause injury.

Visit us online at strathwoodfurniture.com for information on this and other Strathwood products.