

Welcome

Congratulations on your purchase of the finest mouse available. This mouse includes Microsoft® optical technology for superior performance.

Note In this *Getting Started* guide, “mouse” refers to both mouse and trackball products.

About Your Rights and Obligations

The software with this product is licensed, not sold. You must either agree to the license contract in the software Setup screens or promptly return the entire product for a refund, excluding the return costs. After you install the software, you may consult the license and the Limited Warranty for the product at any time by looking in the “Legal Information” section of the software *User’s Guide*. You may also print a copy for your records.

1 Important! Install IntelliPoint Software

IntelliPoint software enables the unique features of your mouse.

Note If you do not already have a mouse, you can connect this Microsoft mouse (step 2) before installing IntelliPoint software.

To install IntelliPoint software (Microsoft Windows® operating system)

1. Insert the Microsoft IntelliPoint compact disc into the computer’s CD drive. If Setup does not start automatically, do the following:
 - Click the **Start** button, and then click **Run**.
 - Type **[drive]:setup**
For example, if your CD drive is drive D, type **d:setup**

2. Follow the Setup Wizard instructions on your screen.

Depending on your operating system version, you may be asked to restart your computer before Setup can begin.

3. After installation is complete, restart your computer if prompted to do so.

To install IntelliPoint software (Macintosh)

- Insert the Microsoft IntelliPoint compact disc into the computer’s CD drive, double-click the **IntelliPoint Installer** icon, and then follow the on-screen instructions.

After installation is complete, restart your computer if prompted to do so.

2 Connect the Mouse to the Computer

A PS/2 connection is recommended for a Windows-based computer. If you are connecting the mouse to a Macintosh computer, a universal serial bus (USB) connection is required.


Important Only use the adapter plug that is included with your Microsoft mouse.

PS/2 connection (Windows only)


1. Shut down and turn off your computer.
2. Attach the green USB-to-PS/2 adapter to the rectangular USB connector, and then plug it into your computer’s round PS/2 mouse port.
3. Turn on your computer.

USB connection (Windows or Macintosh)

1. Remove the green USB-to-PS/2 adapter, if attached to the USB connector.
2. With your computer turned on, plug the rectangular USB connector into your computer’s USB port.

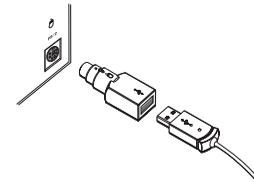

PS/2 connection

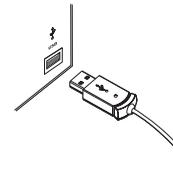

USB connection

3 Read the User’s Guide

The *User’s Guide* is your complete product manual, and it is installed with IntelliPoint software. It contains important product information in a searchable format, including:

- Microsoft mouse and IntelliPoint software feature descriptions and instructions.
- Troubleshooting topics and Product Support Services information.
- End-User License Agreement (EULA), Limited Warranty, and regulatory information.

To open the User’s Guide

- **Windows:** Click the **Start** button, point to **Programs** (or **All Programs**), point to the **Microsoft Mouse** folder, and then click **Mouse User’s Guide**.
- **Macintosh:** Click the **Apple** menu, click **System Preferences** (or **Control Panels**), click **Microsoft Mouse**, and then click **User’s Guide** on the **Help** menu.

4 Customize the Mouse Settings (Optional)

Using IntelliPoint software, you can reassign any button to a different command or change your mouse settings, such as how quickly the screen moves when you scroll.

To start IntelliPoint software

- **Windows:** Click the **Start** button, point to **Programs** (or **All Programs**), point to the **Microsoft Mouse** folder, and then click **Microsoft Mouse**.
- **Macintosh:** Click the **Apple** menu, click **System Preferences** (or **Control Panels**), and then click **Microsoft Mouse**.

Troubleshooting

If you have a question about your Microsoft mouse, try the following:

- View the *User’s Guide* installed with IntelliPoint software, which contains product information and troubleshooting tips.
- Look in Readme.txt on the IntelliPoint CD for late-breaking product information (Windows version only).
- Go to the Microsoft Hardware Web site at: <http://www.microsoft.com/hardware/> for additional product information and IntelliPoint software updates.
- See the “Product Support Services” section of the *User’s Guide*, or go to: <http://support.microsoft.com> for information about how to contact Microsoft Product Support Services.

Product Information and Software Updates

For general Microsoft mouse product information and IntelliPoint software updates, go to the Microsoft Hardware Web site at: <http://www.microsoft.com/hardware/>

Microsoft

Microsoft



Getting Started

Microsoft® Optical Mouse Products

www.microsoft.com/hardware

Product Disposal Information

Dispose of this product in accordance with Local and National Disposal Regulations.

Regulatory Information

This product was tested and complies with the limits for a Class B digital device under Part 15 of the U.S. Federal Communications Commission (FCC) rules, and is subject to these conditions: It may not cause harmful interference and must accept any interference received, including any that causes undesired operation.

Any changes or modifications not expressly approved by Microsoft could void the user's authority to operate this device.

This Class B digital apparatus complies with ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



Note For detailed information on U.S. and Canadian radio interference regulations, search for "regulations" in the *User's Guide*.

No serviceable parts included. User-observable light is 15 microwatts in normal operation. This device is rated as a commercial product for operation at +41°F (+5°C) to +95°F (+35°C).

Products released before June 1, 2001 have been tested to comply with International Standard IEC 825-1: 1993. The standard requires the following statement:

Class 1 LED Product

Products released after June 1, 2001, use LEDs that are inherently Class 1 per IEC 60825-1-am2 (2001-01).



Caution Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

0603 Part No. X09-50612



HEALTH WARNING

Use of a keyboard or mouse may be linked to serious injuries or disorders.

When using a computer, as with many activities, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. However, if you experience symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation, or stiffness, **DO NOT IGNORE THESE WARNING SIGNS. PROMPTLY SEE A QUALIFIED HEALTH PROFESSIONAL**, even if symptoms occur when you are not working at your computer. Symptoms such as these can be associated with painful and sometimes permanently disabling injuries or disorders of the nerves, muscles, tendons, or other parts of the body. These musculoskeletal disorders (MSDs) include carpal tunnel syndrome, tendonitis, tenosynovitis, and other conditions.

While researchers are not yet able to answer many questions about MSDs, there is general agreement that many factors may be linked to their occurrence, including: medical and physical conditions, stress and how one copes with it, overall health, and how a person positions and uses his or her body during work and other activities (including use of a keyboard or mouse). Some studies suggest that the amount of time a person uses a keyboard may also be a factor. Some guidelines that may help you work more comfortably with your computer and possibly reduce your risk of experiencing an MSD can be found in the "Healthy Computing Guide" topic of the *User's Guide* provided with the software program on your CD-ROM. If you do not have the CD-ROM for this product, you can access the "Healthy Computing Guide" from <http://www.microsoft.com/hardware/>, or (in the United States only) call 1-800-360-7561 to request a CD-ROM at no charge. If you have questions about how your own lifestyle, activities, or medical or physical condition may be related to MSDs, see a qualified health professional.

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, e-mail address, logo, person, place or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

Microsoft Corporation grants the purchaser of this product the right to reproduce one (1) copy of this "Getting Started" printed guide for each Hardware Device you purchased in the package.

©1983–2003 Microsoft Corporation. All rights reserved.

Microsoft, IntelliMouse, Natural, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Patents pending.