

SAFETY INSTRUCTIONS

Please read the safety precautions before using this product. Safety precautions help you properly use this product and prevent you from injuring yourself and/or others.

GENERAL PRECAUTIONS

1. This appliance is not a toy. Keep away from children and infants.
2. Do not use this unit for purposes other than its intended purpose.
3. When not in use, always unplug the unit and store in a cool dry place.
4. The water jar can be extremely hot during and immediately following use. Do not attempt to remove, handle, or insert the water jar when hot, during operation, or immediately after use.

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT OPEN COVERS. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

1. Do not attempt to cut or modify the power supply cord.
2. Do not pull/handle the power supply with unnecessary force.
3. Discontinue use immediately if the cord is damaged or becomes hot.
4. Do not wrap the power supply cord around the unit during use.
5. Do not use the unit near flammable material including but not limited to benzene, paint thinner, aerosols, and etc.
6. Do not place or store product near exposed water such as bathtubs, sinks, and etc.
7. Do not handle electrical appliances or products with wet hands.


DAILY MAINTENANCE

Unit should be cleaned and inspected on a daily basis or once before each day's use.

1. Check to see that the unit is in good working condition and that there are no exposed parts or wires.
2. Check that the unit is resting firmly on a stable surface away from open sources of flame and/or water.
3. Check for broken parts, jars, etc.



PARAGON[®] IO3 FACIAL STEAMER

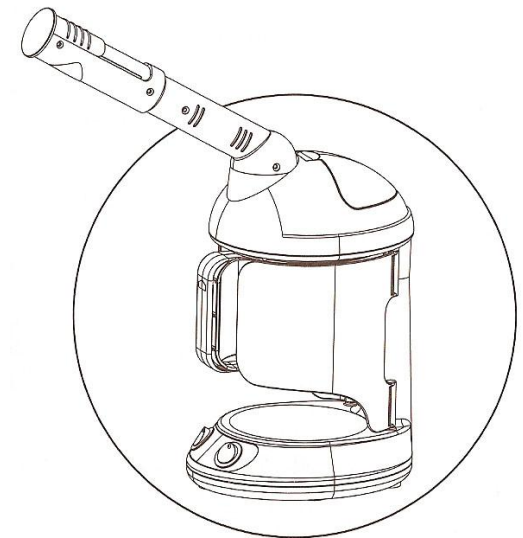

www.garfieldint.com



Questions or Comments?
Please call 1-888-731-6688

GARFIELD INTERNATIONAL CO., INC.
PARAGON[®] is a trademark of Garfield International.

Before installing and using this unit, please carefully read these instructions. Be sure to keep this available for later reference.

WARNING

USE ONLY DISTILLED WATER WITH THIS MACHINE. DISTILLED WATER SHOULD BE USED TO HELP PROLONG THE LIFE OF THE MACHINE. DO NOT RUN CHEMICALS THROUGH THE APPLIANCE SUCH AS CLEANING AGENTS OR AROMA ADDITIVES. THESE CLOG THE WATERWAYS AND LEAVE DEPOSITS.


TO AVOID STEAMER BURNOUT DO NOT TEST RUN THE APPLIANCE DRY

TO PREVENT WATER FROM SPOUTING - ALWAYS MAINTAIN THE DISTILLED WATER LEVEL AT THE PROPER LEVEL BETWEEN THE TOP AND BOTTOM RED LINES.

TO EXTEND THE LIFECYCLE OF THE HEATING ELEMENT AND TO PREVENT THE WATER JAR FROM CRACKING, DO NOT ADD COLD WATER WHILE WATER IS HOT. WAIT FOR UNIT TO COOL BEFORE ADDING MORE WATER.

PARTS IDENTIFICATION

- (1) Aroma Insert Space
- (2) Steam Outlet
- (3) Steam Arm
- (4) Plastic Lid
- (5) Water Cup
- (6) Max Water Level Line
- (7) Min Water Level Line
- (8) Burn Guard
- (9) Steam ON/OFF
- (10) Sanitation ON/OFF
- (11) Auto-Off Tipping Switch

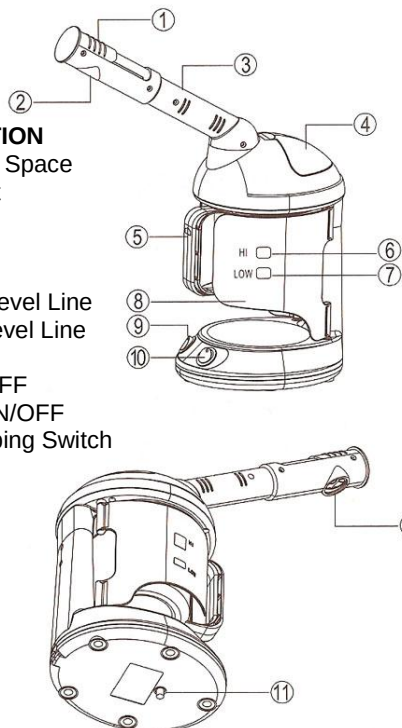


ASSEMBLY

1. Install the steam arm by gently pushing it into the dome portion of the unit.



2. Install the water cup. Gently turn the water cup in a counter-clockwise direction until it locks in place.

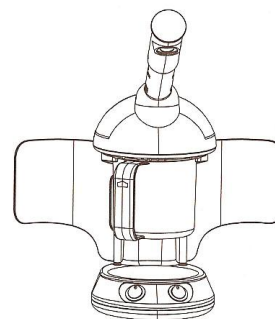

When properly installed, the water cup handle should be centered between the burn guards.

3. Push the burn guards into place.
4. Place the facial steamer onto a stable and flat surface.
5. Open the plastic lid and remove the water plug.



6. Pour distilled water into the water cup to the maximum water level line. To prevent water from spouting do not to exceed the top red line.

7. Connect the plug to the power source
8. Push the steam power switch to its ON position. The green activate lamp will light up.
9. Wait 7-10 minutes for steam to appear. Wait until the steam is a steady fine mist before directing the steam towards the client.

AROMA THERAPY

Using the aroma therapy strips, place a few drops of aroma onto the strip. Do not soak the strip. Place the aroma strip into the Aroma Insert Space and slide the cover to close. This design allows the client to experience the benefits of aromatic oils while simultaneously protecting the appliance from clogging and spouting.

OZONE

Ozone is a form of oxygen sometimes used as a form of disinfectant. The ozone function in the facial steamer is an option. Check with applicable regulatory agencies such as the Department of Health and the Cosmetology State Board concerning the use of ozone in your area. To activate the ozone function, use the on/off switch located next to the timer knob. When ozone is in use, the green activate lamp will light up.

AUTO-OFF TIPPING SWITCH

This unit must be operated on a flat, hard, and stable surface. **DO NOT SET UNIT ON A SOFT SURFACE.** The auto-off tipping switch must be engaged for proper operation. In the event that this vaporizer is tipped over the auto-off tipping switch will release and shut the unit down as a safety precaution.

120V , 400W , 3.33amps

For your protection in the event of theft or loss of this product, please fill in the information below for you own personal records.

Serial No. : _____

Date of Purchase: _____

Purchased From: _____



www.garfieldint.com



Questions or Comments?
Please call 1-888-731-6688

GARFIELD INTERNATIONAL CO., INC.
PARAGON® is a trademark of Garfield International.